



Philips  
True Wireless  
Headphones

Detailed, natural sound

Noise Cancelling Pro  
Conversation Hearing mode  
Clearer calls on the go



TAT6908BK

## The earbuds that love to socialise

Enjoy your music. Love your podcasts. Do lunch. These noise-cancelling true wireless earbuds give you great sound and customisable hearing modes that can help you hear face-to-face conversations better. Plus, they're super comfy.

### Great sound and customisable hearing modes

- Warm, detailed, natural. Philips sound signature
- Immerse with Noise Cancelling Pro
- Conversation Hearing mode for face-to-face chats
- Personal My Hearing mode. Take the in-app hearing test!

### For your daily life

- Clearer calls on the go. They'll hear you, not the noise
- Snug, comfy fit that's right for your ears
- IPX4 splash and sweat resistant

### Always ready to go

- No worries. Up to 28 hours play time with the case
- Charge for 5 minutes, get an extra hour
- Philips Headphones app. Customise hearing modes and more

**PHILIPS**

## True Wireless Headphones

Detailed, natural sound Noise Cancelling Pro, Conversation Hearing mode, Clearer calls on the go

TAT6908BK/00

# Highlights

### Noise Cancelling Pro




Enjoy a more immersive experience with noise cancelling that blocks external noise for distraction-free listening. To hear what's going on around you, tap an earbud to activate Awareness Mode. You can adjust noise-cancelling levels or turn on wind noise reduction via the Philips Headphones app.

### Conversation Hearing mode



For face-to-face conversations, these earbuds can help you hear the other person better! Simply press the left earbud to activate Conversation Hearing mode or use the Philips Headphones app. Beamforming mics pick up the voice of the person in front of you while noise cancelling filters out ambient sounds.


### In-app hearing test

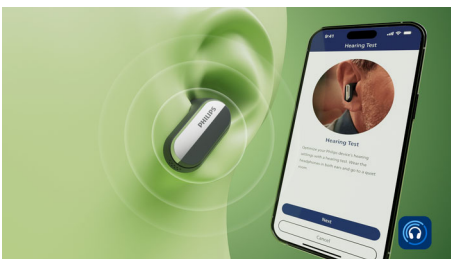

A simple hearing test in the Philips Headphones app lets you create a personal


hearing mode that's tuned to the way you hear different frequencies in each ear. You can then use the app to tweak your custom profile or adjust the left and right earbuds individually at any time.

### Philips Headphones app

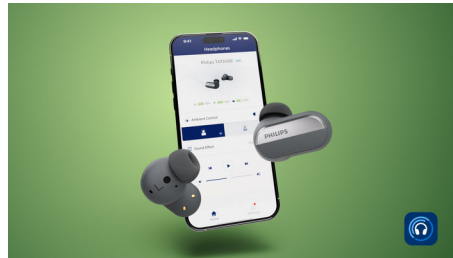


You can use the app to customise any of the hearing modes by tweaking the low, mid or high sound frequencies for individual earbuds. Or use it to reduce how much of your own voice you hear during conversations. Time for music? Choose from four preset sound modes to suit your mood.

### Clearer calls on the go

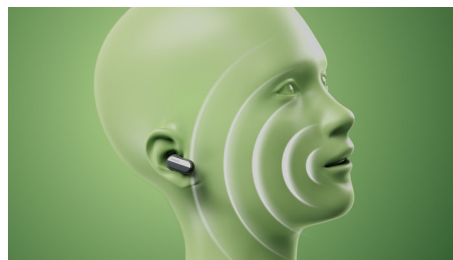

When you're on a call, beamforming mics accurately pick up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the noise — and with sidetone turned on, you can clearly hear your voice in the call too.

### Comfy and secure

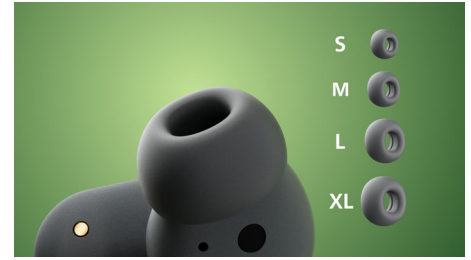

These earbuds fit snugly and are wrapped in comfy soft-touch silicone. Because no two ears are the same, you get four interchangeable sizes of flexible silicone eartips: mix and match to get a fit that's just right for you.

### Philips sound signature

From music to podcasts, you'll enjoy detailed, natural sound with rich bass as the graphene-coated drivers reproduce every sparkling high and weighty low. Multipoint lets you connect to two Bluetooth devices (iOS or Android) at the same time.

### 28 hours play time with case

You get 7 hours of play time and an extra 21 hours from the small charging case. Pop the earbuds back in and they'll recharge fully in 2 hours. If you need a quick boost, just 5 minutes gives you an extra hour. The case can be charged via USB-C.

### IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means that these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

# Specifications

## Sound

- Impedance: 16 Ohm
- Speaker diameter: 10 mm
- Sensitivity: 97 dB (1k Hz)
- Frequency range: 20–20,000 Hz
- Maximum power input: 10 mW
- Driver type: Graphene coated

## ANC features

- ANC (Active Noise Canceling)
- ANC technology: Hybrid, ANC Pro
- Awareness mode

## Telecommunication

- Microphone for call: 2 mics (AI+NR)

## Connectivity

- Bluetooth version: 5.3
- Supported codec: AAC, SBC
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP
- Type of wireless transmission: Bluetooth
- Multipoint connection
- Wireless

## Convenience

- Google Fast Pair
- Philips Headphones app support
- Firmware updates possible
- Water resistance: IPX4
- Mono mode for TWS
- Type of controls: Button

## Design

- Colour: Black
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear-tip

## Power

- Music play time: 7 + 21 hr
- Battery type (Earbud): Lithium Polymer (built-in)
- Battery capacity (Earbud): 63 mAh
- Battery type (Charging case): Lithium Polymer (built-in)
- Battery capacity (Case): 740 mAh
- Battery life standby time: 200 hr
- Charging time: 2 hr
- Fast charging time: 5 mins for 1 hr
- Number of batteries: 3 pcs
- Battery weight (Total): 16.66 g

## Voice assistant

- Voice assistant support
- Voice assistant activation: Manual
- Voice assistant compatible: Apple Siri, Google Assistant

## Accessories

- Eartips: 4 pairs
- Charging case
- Charging cable: USB-C cable, 200 mm
- Quick Start Guide

## Dimensions

- Earbud dimension (W x D x H): 2.40 x 2.90 x 2.20 cm
- Charging case dimension (W x D x H): 6.50 x 3.00 x 4.00 cm
- Total weight: 0.052 kg

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Hanging
- Packaging dimensions (W x H x D): 11 x 13 x 4.9 cm
- Gross weight: 0.14 kg
- Net weight: 0.072 kg
- Tare weight: 0.068 kg
- EAN: 48 95229 13168 2

## Outer Carton

- Number of consumer packages: 24
- Outer carton (L x W x H): 34.1 x 29.9 x 30.1 cm
- Gross weight: 4.832 kg
- Net weight: 1.728 kg
- Tare weight: 3.104 kg
- GTIN: 1 48 95229 13168 9

## Inner Carton

- Number of consumer packages: 3
- Inner carton (L x W x H): 16 x 14 x 13.3 cm
- Gross weight: 0.53 kg
- Net weight: 0.216 kg
- Tare weight: 0.314 kg
- GTIN: 2 48 95229 13168 6

## UPC

- UPC: 8 40063 20312 9



Issue date 2023-08-23

Version: 2.0.2

12 NC: 8670 001 87855  
EAN: 48 95229 13168 2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)