



Philips  
Noise cancellation  
headphones with mic

32mm drivers/closed-back  
On-ear  
Compact folding

SHL3855NC



Tune out the world, tune in to your favorite music

powerful bass

Be immersed in your music with innovative ActiveShield active noise canceling technology. Pressure-relieving cushions provide long wearing comfort and a compact foldable design is ideal for portability and easy storage.

#### Art of Noise Cancellation

- ActiveShield™ noise canceling reduces noise by up to 97%
- Zero hiss to ensure uninterrupted enjoyment

#### Powerful sound

- 32mm neodymium speaker drivers for rich bass
- Closed-back design blocks out noise for noise isolation

#### Make life more convenient

- Slim and compact foldable design for easy portability
- Multi-point plays music and calls on two devices
- Activate Siri and Google Now with a press on earcup button
- Switch from music to phone calls with built-in microphone

**PHILIPS**

Noise cancellation headphones with mic  
32mm drivers/closed-back On-ear, Compact folding

SHL3855NC/00

## Highlights

### 32mm high definition drivers



Finely tuned 32mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide rich bass.

### Closed-back design



Tuned 32mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide an excellent and impressive precision sound.

### Compact folding



Slim and compact foldable design for easy portability on the go.

### Multi-point

Multi-point allows you to connect your Philips Bluetooth headphones with two Bluetooth-enabled

devices simultaneously. Simply pair up the two devices to enjoy movies and music while effortlessly taking calls in between.

### ActiveShield™



ActiveShield™ active noise canceling technology features two feed-backward microphones used for canceling low frequencies. It detects ambient noise and inverting the sound wave, effectively cancelling it out and converting background noise to silence.


### Works with Siri/Google Now

Compatible with Siri and Google Now, the latest Philips Bluetooth headphones make using your virtual assistant even easier. All you need is a press on the earcan button to activate Siri on iPhone or Google Now on Android devices.

### Zero hiss

Hiss is the electronic sound you might hear when you wear headphones with the ANC on but without any music playing. Our noise cancelling technology greatly minimizes hiss to ensure that your listening enjoyment is not interrupted by any unnecessary noise.

### Built-in microphone

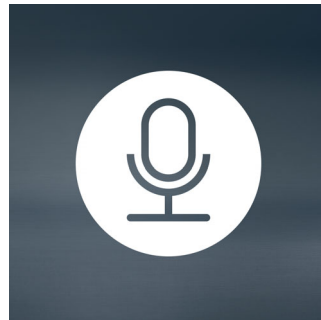

The built-in microphone makes it easy to switch from listening to music to taking phone calls. It's a breeze staying connected with your music – and with the people who matter most to you.

## Specifications

### Sound

- Acoustic system: Closed
- Frequency response: 10 - 22,000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 30 mW
- Sensitivity: 105 dB
- Speaker diameter: 32 mm

### Connectivity

- Cable length: 1.2 m
- Cable Connection: two-sided
- Connector: 3.5 mm

### Power

- Music playtime: 40 hr
- Standby time: 50



Issue date 2016-05-24

Version: 2.0.8

12 NC: 8670 001 26316  
EAN: 69 25970 70435 9

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)