



Philips  
wireless portable speaker

**Bluetooth®**  
with MULTIPAIR  
Rechargeable battery  
White



**BT2600W**

## Small size, great sound

Great sound merges in a small, stylish and go anywhere design, with aluminium details for a touch of quality. Bluetooth multi-pair allows instant music swapping between two devices.

### **Simplicity in use**

- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth
- Swap music instantly between 2 devices with MULTIPAIR

### **Impressive sound**

- Anti-clipping function for loud, distortion-free music
- Advanced audio performance with a slim design

### **Designed for grab and go**

- Built-in rechargeable battery for music playback anywhere

**PHILIPS**

wireless portable speaker  
Bluetooth® with MULTIPAIR, Rechargeable battery, White

BT2600W/00

# Highlights

## Wireless music streaming



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

## Swap music between 2 devices


Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, at parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

## Anti-clipping function



Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This speaker handles anti-clipping through a dedicated audio limiter IC. This monitors the musical signal as it goes through the amplifier and keeps peaks within the amp's range, preventing the audio distortion caused by clipping without affecting loudness. A speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery.

## Built-in rechargeable battery

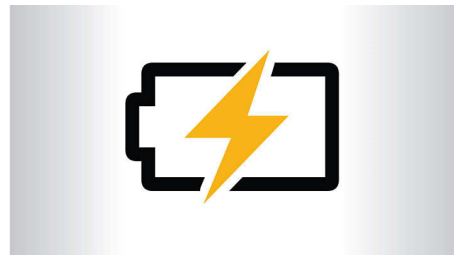

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy

your personal music without the fuss of tangled power cords and the inconvenient search for an electrical socket. Enjoy great music with the freedom of portability now.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## Audio-in



Audio-in for easy connection to almost any electronic device

## Advanced audio performance

Advanced audio performance with a slim design

# Specifications

## Sound

- Output power (RMS): 4 W
- Sound System: Mono

## Design and finishing

- Colour: White

## Loudspeakers

- Speaker drivers: 1 x 1.5"

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)

## Convenience

- Built-in microphone: for speaker conference

## Compatibility

- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- other music devices: with Bluetooth 2.1 or above

## Power

- Battery type: lithium (built-in)
- Operating time on battery: 8 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Weight incl. Packaging: 0.32 kg
- Product dimensions (WxDxH): 107 x 97 x 32 mm
- Packaging dimensions (WxDxH): 130 x 45 x 175 mm
- Product weight: 0.21 kg



Issue date 2024-03-24

Version: 1.0.6

EAN: 48 95185 60913 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)