

Philips  
Soundbar speaker

3.1 CH wireless subwoofer  
Bluetooth® and NFC  
HDMI ARC  
200W

HTL3160B



## Unmatched voice clarity from 3.1 CH of sound

with wireless subwoofer

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming with one-touch NFC pairing.

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital and Pro Logic II surround sound
- Wireless subwoofer adds thrill to the action
- Dedicated center-channel speaker for superior voice clarity

### Connect and enjoy all your entertainment

- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3 music directly from your portable USB devices

**PHILIPS**


# Highlights

## Center-channel speaker




A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

## Dolby Digital and Pro Logic II

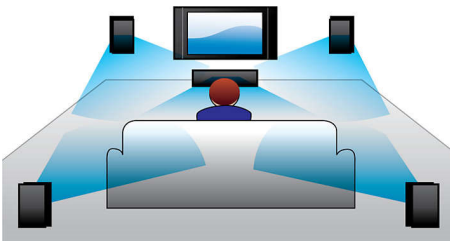

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## Virtual Surround Sound

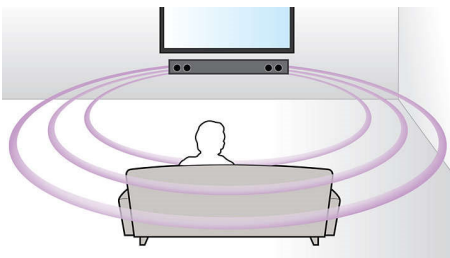

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-

channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

## Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Low-rise profile



Low-rise profile for the perfect fit in front of your TV

# Specifications

## Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound, Audio sync, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Subwoofer output power: 105W
- Speaker output power: 32W x 3
- Total Power RMS @ 10% THD: 200 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Wireless subwoofer
- Subwoofer impedance: 2 ohm
- Speaker Impedance: 4 ohm
- Tweeter Impedance: 8 ohm
- Drivers per Soundbar: 3 x race track woofers, 3 x tweeters

## Connectivity

- Integrated Connections: Bluetooth, NFC
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Top connections: Audio In (3.5mm), USB 2.0

## Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby,

Remote Control-Passthrough, System standby, Audio Return Channel

## Power

- Subwoofer power consumption: 30 W
- Subwoofer Power supply: 100-240 V~; 50-60 Hz
- Main unit power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: <0.5 W
- Main unit standby power: <0.5 W

## Accessories

- Included accessories: Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AAA Battery (x1), AC Adapter, 2 x Power cords, Screws (x6), Optical audio cable

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Weight incl. Packaging: 9 kg
- Main Unit Weight: 1.62 kg
- Packaging (W x H x D): 400 x 418 x 372 mm
- Subwoofer (W x H x D): 180 x 303 x 330 mm
- Subwoofer Weight: 4.5 kg

## Audio Playback

- Compression format: MP3



Issue date 2024-04-13

Version: 4.0.5

EAN: 48 95185 61610 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)