


Philips
Portable DVD and digital
TV

23cm/ 9" LCD

3hr playtime DTV

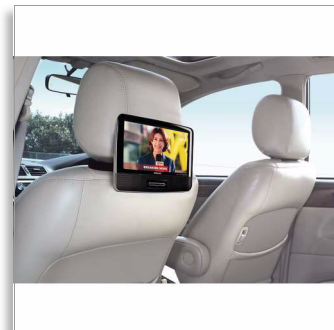

PD9003



Watch your favorite TV programs and DVDs anywhere

with easy set-up

Enjoy free-to-air digital TV programs with the built-in digital TV receiver on the PD9003 portable DVD player. With the 9"/23cm TFT LCD swivel screen, you can indulge in up to 3 hours of movies, music and photos enjoyment on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback

Enjoy portable TV entertainment in real-time

- 22.9 cm (9") TFT color widescreen LCD display
- Support DVB-T standard for free-to-air digital TV
- Electronic Program Guide (EPG)
- Easy installation and automatic channel search

Extra touches for your convenience

- Enjoy up to 3 hours playback with a built-in battery*
- Full Resume on Power Loss
- Smart Car Mount for ease-of-use
- USB connection for video, photo and music playback
- AC adaptor, car adaptor and AV cable included

PHILIPS
sense and simplicity

Specifications

Product dimensions

- Product dimensions (W x H x D): 25 x 18,2 x 9 cm
- Weight: 0,9 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 27,2 x 28,5 x 7 cm
- Nett weight: 1,469 kg
- Gross weight: 1,755 kg
- Tare weight: 0,286 kg
- EAN: 87 12581 60834 7
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

Outer Carton

- Outer carton (L x W x H): 28,2 x 23,3 x 30 cm
- Nett weight: 4,407 kg
- Gross weight: 5,615 kg
- Tare weight: 1,208 kg
- Number of consumer packagings: 3

Picture/Display

- Diagonal screen size: 9 inch / 23 cm
- Resolution: 640(w)x220(H)x3(RGB)
- Display screen type: LCD TFT

Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3

- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

Connectivity

- DC in: 9V, 1A
- Headphone jack: 3.5mm Stereo Headphone x 1
- TV connection: Antenna jack
- AV output: Composite (CVBS) x1
- USB

Convenience

- Battery charging indication
- Shock proof

Tuner/Reception/Transmission

- Digital TV: DVB Terrestrial *

Video Decoding

- Aspect Ratio: 16:9, 4:3
- Reception-Demodulation: COFDM 2K/8K, MPEG-2 DVB compliant, Network: MFN/SFN, QPSK

Accessories

- AC/DC Adaptor: DC 9V, 1A, 110-240v, 50/60Hz
- Cables: 1 x AV Cables
- Remote control: Slim remote
- User Manual: Multi languages
- Car kit: cigarette outlet adaptor, 12vDC
- Included accessories: Aerial antenna
- Smart car mount

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3 hrs*

Dimensions

- Master carton dimensions: 233 x 300 x 282 mm
- Master carton quantity: 3
- Master carton weight: 5.9 kg
- Packaging dimensions (W x H x D): 272 x 285 x 70 mm
- Product dimensions (W x H x D): 240 x 183 x 38 mm
- Product weight: 1 kg
- Packaging type: D-box

Highlights

Support DVB-T (free-to-air)

Support DVB-T standard for free-to-air digital TV


DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.

Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!

3 hours built-in battery*

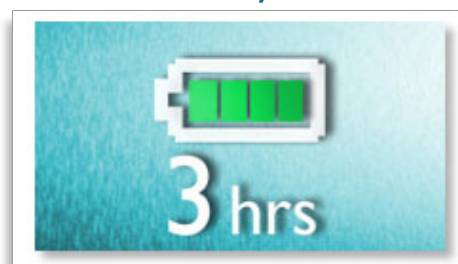

This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 3 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

USB connection



Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favorite moments with family and friends.



Issue date 2012-06-12

Version: 1.1.4

12 NC: 8670 000 78326
EAN: 87 12581 60834 7

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivX Networks, Inc. and are used under license.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.