



Philips
Wireless stereo speaker

Bluetooth®
Built-in microphone for calls
5W, rechargeable battery



BT3080B

Stream tunes wirelessly in seconds

Easy wireless Bluetooth® music streaming in a sleek, modern case. Bass Reflex speakers deliver deep and powerful bass while a built-in microphone is ideal for hands-free calling. With rechargeable battery, you can enjoy your music anywhere.

Impressive sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- 5W RMS total output power

Simplicity in use

- Wireless music streaming via Bluetooth
- Built-in microphone for hands-free phone calls
- Audio-in for easy portable music playback

Advanced versatility

- Built-in rechargeable battery for music playback anywhere
- Up to 5 hours music playback

PHILIPS


Wireless stereo speaker
Bluetooth® Built-in microphone for calls, 5W, rechargeable battery

Highlights

Bass Reflex Speaker System

Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Wireless music streaming

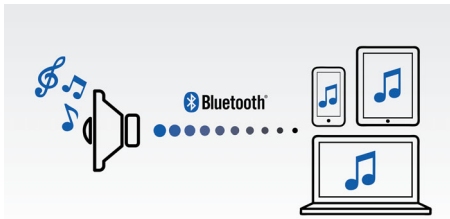

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

BT3080B/98

Specifications

Compatibility

- iPad: iPad 1, iPad 2, iPad mini, iPad with Retina display, new iPad, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above
- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 5W
- Sound System: Stereo

Loudspeakers

- Speaker drivers: 2 x 2.75"

Power

- Operating time on battery: 5 hr
- Battery type: Lithium-ion (built-in)
- Power supply: 100-240VAC, 50/60Hz

Accessories

- AC/DC adaptor
- Quick start guide
- Warranty certificate
- World Wide Warranty leaflet

Dimensions

- Product dimensions (WxDxH): 28 x 9.3 x 12.1 cm
- Packaging dimensions (WxDxH): 36.9 x 14.1 x 16.8 cm
- Product weight: 1.25 kg
- Weight incl. Packaging: 1.7 kg



Issue date 2016-09-14

Version: 1.0.4

12 NC: 8670 001 30421
EAN: 48 95185 61732 9

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com