

Philips  
Car audio system

- Bluetooth
- USB/SD
- CD

CEM5000



## Seamless music enjoyment on the road

with CD, MP3 & WMA music playback

Enjoy multiple source music in your car with the Philips CEM5000. Stay connected to your music on your mobile & important calls, thanks to the built-in Bluetooth® receiver. Also features anti-theft detachable front panels for security.

### Enjoy your digital music in car

- USB Direct and SD card slots for MP3/WMA playback
- CD player and MP3 Link for music playback

### Superb performance with full features

- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- 3-band parametric equalizer with 8 presets
- Built-in 50W x 4 amplifiers for excellent sound quality

### Design that blends into your car

- High contrast LCD for perfect viewing
- Detachable flip-down front panel for anti-theft security
- Intuitive interface for easy navigation
- User friendly remote control for quick song access

# PHILIPS

# Highlights

## DBB Dynamic Bass Boost




Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

## Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving and you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.

## USB Direct and SD card slots

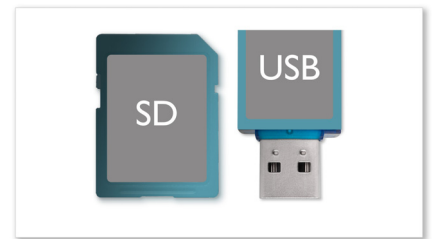

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct and SD card slots.

## Detachable front panel



Detachable flip-down front panel for anti-theft security



# Specifications

## Display

- Type: High contrast B/W dot matrix LCD
- Key illumination: Blue

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: MP3, WMA
- Disc Playback Modes: Fast Forward/Backward, Introscan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

## Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)
- RDS: Station Name, Station Information, Radio Text, Program Type, News, News & Traffic, RDS Clock Set

## Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): 50Wx4 channels

(MOSFET)

- Output power (RMS): 24Wx4 channels (4 ohms, 10% T.H.D.)

## Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- MP3-Link: For portable MP3 music playback
- Microphone: Built-in microphone
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: With gain control
- Bluetooth profiles: A2DP, AVRCP, Handsfree
- Bluetooth version: 2.0+EDR

## Security/Anti-theft

- Front panel: Detachable & flip-down
- Display blackout: 10/20 sec selectable

## Accessories

- Remote control: Slim remote with battery
- User Manual: English
- Quick start guide: English, Traditional Chinese, Brazilian, Portuguese, Spanish

## Power

- Power supply: 12V DC

## Dimensions

- Product dimensions (W x H x D): 188 x 58 x 190 mm
- Chassis: 1 Din



Issue date 2013-05-10

Version: 3.0.2

12 NC: 8670 000 64043  
EAN: 69 23410 70236 1

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)