



Philips Fidelio  
True Wireless  
Headphones

#### Natural Fidelio sound

Noise Cancelling Pro+  
Wind-noise reduction  
Premium universal fit



T1BK

## Crafted for life on the go.

Let your music move you. The spacious, detailed sound of these premium true wireless headphones puts you right in the heart of the mix. Our best noise cancellation and a secure, comfortable fit keep you immersed-wherever you are.

#### Seamless in every way

- Superb sound for streaming, on any phone
- IR sensor. Music pauses when you take an earbud out
- Philips Headphones app. Customise your experience
- Touch controls and easy connections

#### Fidelio sound signature. Natural and rich.

- 2 way design. Balanced-armature and dynamic drivers
- Philips Fidelio. Rich, natural sound
- More music. 48 hours play time with the charging case
- Immerse anywhere. Noise Cancelling Pro+

#### Quality in every detail

- Universal fit. Comply foam and silicone ear-tip covers
- Crafted for listening. Premium Fidelio design
- IPX4 Splash and sweat resistant, whatever the weather
- Crystal-clear calls. Wind noise reduction.

# PHILIPS


## True Wireless Headphones

Natural Fidelio sound Noise Cancelling Pro+, Wind-noise reduction, Premium universal fit

T1BK/00


# Highlights

### Philips Fidelio. Natural sound

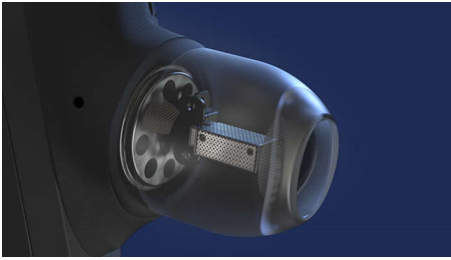

EDM or rock, classical or hip-hop-these audiophile-grade headphones let you hear it all as though you were right there in the studio. Balanced-armature drivers reveal the scintillating trebles and richly natural vocals. Dynamic drivers produce deep, precise bass and lush instrumental textures.

### Noise Cancelling Pro+

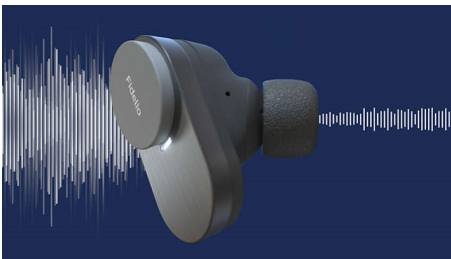

No matter where you are, these true wireless headphones create the perfect space to listen. Hybrid noise cancellation uses state-of-the-art hardware and advanced audio processing to block unwanted sounds. Noise-dampening Comply foam ear-tip covers add to the immersion with a secure, comfortable fit.

### 48 hours play time with case

With these earbuds fully charged-and a fully charged case, you can travel with more than a day of play time in your pocket. Plus, the music pauses if you take an earbud out, so you never need to miss a beat. The case can be charged wirelessly.

### Premium design



Sink into a style as unique as your music. The round, polished-metal detailing on these striking earbuds is a pure Fidelio design. The embossed Muirhead leather trim adds a soft, sophisticated touch to the curved metal charging case.

### Crystal-clear calls



Multiple mics and a dedicated algorithm focus on the sound of your voice as well as reducing noise from the world around you. Even wind noise is filtered out, so you can be heard clearly when on a call outside.

### Superb sound for streaming

Whichever streaming service you use, these true wireless headphones will unlock the best possible sound. The codec that works best with your phone or tablet is selected automatically. Whether you use iOS or Android devices, you'll enjoy a superbly detailed listening experience.

### Philips Headphones app



The Philips Headphones app lets you adjust the level of noise cancellation by switching between preset modes, and you can use the app to activate wind-noise cancellation. An equaliser lets you fine-tune the frequency response to suit your personal taste.

### Easy connections and pairing



Touch controls keep things simple, and Bluetooth multipoint lets you connect to a phone (iOS or Android) and laptop at the same time. Google Fast Pair lets you pair with a compatible Android device with a single tap.

### 2 way design

2 way design. Balanced-armature and dynamic drivers

### IR sensor

IR sensor. Music pauses when you take an earbud out

### Universal fit

Universal fit. Comply foam and silicone ear-tip covers

### IPX4 Splash/sweat resistant

IPX4 Splash and sweat resistant, whatever the weather

# Specifications

## Sound

- Frequency range: 7–40,000 Hz
- Speaker diameter: 10 mm + BA
- Impedance: 16 Ohm
- Maximum power input: 5 mW
- Sensitivity: 103 dB (1 kHz)
- Driver type: Hybrid, Balanced Armature
- Hi-Res Audio

## Connectivity

- Bluetooth version: 5.2
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: LDAC, AAC, SBC
- Type of wireless transmission: Bluetooth

## Outer Carton

- Length: 40 cm
- Number of consumer packages: 24
- Width: 22.2 cm
- Gross weight: 9.2 kg
- Height: 39.8 cm
- GTIN: 1 48 95229 11864 2
- Net weight: 3.168 kg
- Tare weight: 6.032 kg

## Convenience

- Automatic power off: 60 minutes
- Water resistance: IPX4
- Philips Headphones app support
- Google Fast Pair
- Mono mode for TWS
- Auto pause (IR sensor)
- Firmware updates possible
- Type of controls: Touch

## Inner Carton

- Length: 19.2 cm
- Number of consumer packages: 3
- Width: 10.2 cm
- Height: 18.5 cm
- Net weight: 0.396 kg
- Gross weight: 1.13 kg
- Tare weight: 0.734 kg
- GTIN: 2 48 95229 11864 9

## Power

- Rechargeable
- Number of batteries: 3 pcs
- Talk time: 13 hr
- Charging time: 2 hour(s)
- Wireless charging
- Music play time (ANC on): 9 + 25 hour(s)
- Music play time (ANC off): 13 + 35 hour(s)
- Fast charging time: 15 mins for 1 hr
- Battery type (Charging case): Lithium Polymer

(built-in)

- Battery type (Earbud): Lithium Polymer (built-in)
- Battery weight (Total): 14 g
- Battery capacity (Case): 650 mAh
- Battery capacity (Earbud): 60 mAh
- Battery life standby time: 200 hr

## Packaging dimensions

- Height: 17.3 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 9.6 cm
- Depth: 6.2 cm
- Number of products included: 1
- EAN: 48 95229 11864 5
- Gross weight: 0.342 kg
- Net weight: 0.132 kg
- Tare weight: 0.21 kg

## Product dimensions

- Height: 5.15 cm
- Width: 8.49 cm
- Depth: 3.24 cm
- Weight: 0.109 kg

## Accessories

- Quick Start Guide
- Eartips: 6 pairs
- Charging case
- Comply foam: 3 pairs (S/M/L)
- Charging cable: USB-C cable, 500 mm

## Design

- Colour: Black
- Ear coupling material: Comply foam, Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear-tip

## Telecommunication

- Microphone for call: 3 mic
- ENC microphone
- Wind noise reduction

## UPC

- UPC: 8 40063 20172 9

## ANC features

- ANC technology: Hybrid, ANC Pro+
- Awareness mode
- Adaptive ANC
- Microphone for ANC: 4 mic
- ANC (Active Noise Canceling)

## Voice assistant

- Voice assistant compatible: Google Assistant, Apple Siri
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-03-12

Version: 7.2.3

EAN: 48 95229 11864 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)