

PHILIPS

True Wireless Headphones

Fidelio

Natural Fidelio sound
Noise Cancelling Pro+
Wind-noise reduction
Premium universal fit



T1BK

Crafted for life on the go.

Let your music move you. The spacious, detailed sound of these premium true wireless headphones puts you right in the heart of the mix. Our best noise cancellation and a secure, comfortable fit keep you immersed-wherever you are.

Seamless in every way

- Superb sound for streaming, on any phone
- IR sensor. Music pauses when you take an earbud out
- Philips Headphones app. Customise your experience
- Touch controls and easy connections

Fidelio sound signature. Natural and rich.

- 2 way design. Balanced-armature and dynamic drivers
- Philips Fidelio. Rich, natural sound
- More music. 48 hours play time with the charging case
- Immerse anywhere. Noise Cancelling Pro+

Quality in every detail

- Universal fit. Comply foam and silicone ear-tip covers
- Crafted for listening. Premium Fidelio design
- IPX4 Splash and sweat resistant, whatever the weather
- Crystal-clear calls. Wind noise reduction.


Highlights

Philips Fidelio. Natural sound



EDM or rock, classical or hip-hop-these audiophile-grade headphones let you hear it all as though you were right there in the studio. Balanced-armature drivers reveal the scintillating trebles and richly natural vocals. Dynamic drivers produce deep, precise bass and lush instrumental textures.

Noise Cancelling Pro+

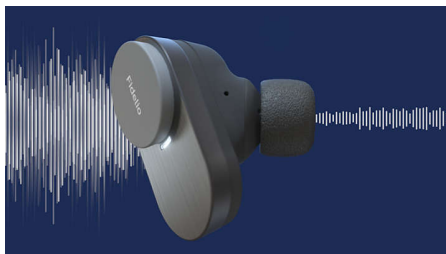

No matter where you are, these true wireless headphones create the perfect space to listen. Hybrid noise cancellation uses state-of-the-art hardware and advanced audio processing to block unwanted sounds. Noise-damping Comply foam ear-tip covers add to the immersion with a secure, comfortable fit.

48 hours play time with case

With these earbuds fully charged-and a fully charged case, you can travel with more than a day of play time in your pocket. Plus, the music

pauses if you take an earbud out, so you never need to miss a beat. The case can be charged wirelessly.

Premium design



Sink into a style as unique as your music. The round, polished-metal detailing on these striking earbuds is a pure Fidelio design. The embossed Muirhead leather trim adds a soft, sophisticated touch to the curved metal charging case.

Crystal-clear calls



Multiple mics and a dedicated algorithm focus on the sound of your voice as well as reducing noise from the world around you. Even wind noise is filtered out, so you can be heard clearly when on a call outside.

Superb sound for streaming

Whichever streaming service you use, these true wireless headphones will unlock the best possible sound. The codec that works best with

your phone or tablet is selected automatically. Whether you use iOS or Android devices, you'll enjoy a superbly detailed listening experience.

Philips Headphones app



The Philips Headphones app lets you adjust the level of noise cancellation by switching between preset modes, and you can use the app to activate wind-noise cancellation. An equaliser lets you fine-tune the frequency response to suit your personal taste.

Easy connections and pairing



Touch controls keep things simple, and Bluetooth multipoint lets you connect to a phone (iOS or Android) and laptop at the same time. Google Fast Pair lets you pair with a compatible Android device with a single tap.

Specifications

Sound

Frequency range: 7–40,000 Hz
Speaker diameter: 10 mm + BA
Impedance: 16 Ohm
Maximum power input: 5 mW
Sensitivity: 103 dB (1 kHz)
Driver type: Hybrid, Balanced Armature
Hi-Res Audio

Connectivity

Bluetooth version: 5.2
Wireless
Bluetooth profiles: A2DP, AVRCP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: LDAC, AAC, SBC
Type of wireless transmission: Bluetooth

Outer Carton

Length: 40 cm
Number of consumer packages: 24
Width: 22.2 cm
Gross weight: 9.2 kg
Height: 39.8 cm
GTIN: 1 48 95229 11864 2
Net weight: 3.168 kg
Tare weight: 6.032 kg

Convenience

Automatic power off: 60 minutes
Water resistance: IPX4
Philips Headphones app support
Google Fast Pair
Mono mode for TWS
Auto pause (IR sensor)
Firmware updates possible
Type of controls: Touch

Inner Carton

Length: 19.2 cm
Number of consumer packages: 3
Width: 10.2 cm
Height: 18.5 cm
Net weight: 0.396 kg
Gross weight: 1.13 kg
Tare weight: 0.734 kg
GTIN: 2 48 95229 11864 9

Power

Rechargeable
Number of batteries: 3 pcs
Talk time: 13 hr

Charging time: 2 hour(s)
Wireless charging
Music play time (ANC on): 9 + 25 hour(s)
Music play time (ANC off): 13 + 35 hour(s)
Fast charging time: 15 mins for 1 hr
Battery type (Charging case): Lithium Polymer (built-in)
Battery type (Earbud): Lithium Polymer (built-in)
Battery weight (Total): 14 g
Battery capacity (Case): 650 mAh
Battery capacity (Earbud): 60 mAh
Battery life standby time: 200 hr

Packaging dimensions

Height: 17.3 cm
Packaging type: Box
Type of shelf placement: Hanging
Width: 9.6 cm
Depth: 6.2 cm
Number of products included: 1
EAN: 48 95229 11864 5
Gross weight: 0.342 kg
Net weight: 0.132 kg
Tare weight: 0.21 kg

Product dimensions

Height: 5.15 cm
Width: 8.49 cm
Depth: 3.24 cm
Weight: 0.109 kg

Accessories

Quick Start Guide
Eartips: 6 pairs
Charging case
Comply foam: 3 pairs (S/M/L)
Charging cable: USB-C cable, 500 mm

Design

Colour: Black
Ear coupling material: Comply foam, Silicone
Ear fitting: In-ear
In-ear fitting type: Silicone ear-tip

Telecommunication

Microphone for call: 3 mic
ENC microphone
Wind noise reduction

UPC

UPC: 8 40063 20172 9

ANC features

ANC technology: Hybrid, ANC Pro+
Awareness mode
Adaptive ANC
Microphone for ANC: 4 mic
ANC (Active Noise Cancelling)

Voice assistant

Voice assistant compatible: Google Assistant, Apple Siri
Voice assistant activation: Manual
Voice assistant support

