



Philips
Kids' wireless Bluetooth®
headphones

32 mm drivers/open-back
On-ear

SHK4000TL

Kids go wireless

Sized for young movers, maximum volume limited

The SHK4000 Bluetooth headphones are designed for your young music lovers. Ultra-lightweight, soft cushions and tailor-sized headband are made for growing kids to enjoy music wirelessly. A volume cap of 85 dB keeps music fun yet safe.

Handy and wireless

- 0.6 m USB cable for easy recharging
- Supports Bluetooth 3.0 and HSP/HFP/A2DP/AVRCP mobile devices
- Wireless control and enjoyment of music and calls

Perfect fit for kids

- Adjustable headband that grows with your child
- Soft ear cushions provide a comfortable and secure fit
- Ultra-lightweight headband for superb comfort and fit
- Four sticker sheets included

Extra protection for kids

- Maximum volume limited to 85 dB for safe music enjoyment

Enjoy quality sound

- Neodymium speaker drivers deliver pure balanced sound

PHILIPS

Kids' wireless Bluetooth® headphones
32 mm drivers/open-back On-ear

Highlights

0.6 m USB charging cable

0.6 m USB cable for easy recharging

Adjustable headband



The simple, ergonomic headband is adjustable to fit any child's head comfortably and grow along with them.

Bluetooth 3.0



Pair your headphones with any Bluetooth device for crystal clear wireless music enjoyment.


Maximum volume limited



Kids' Headphones let you rest assured that their volume levels are safe for your child. The

volume is tuned to a maximum limit of 85 dB for safe enjoyment.

Soft ear cushions

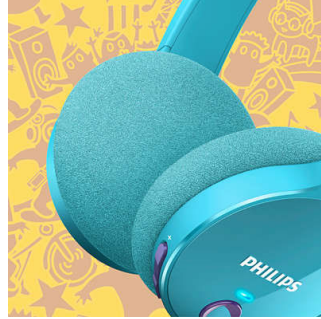


The ear shells are completely cushioned with soft foam for ultimate comfort and security.

Ultra lightweight headband

The slim headband is so ultra-light and comfortable that it's a joy to wear for hours on end. Kids may easily forget that they even have it on.

Wireless music and calls

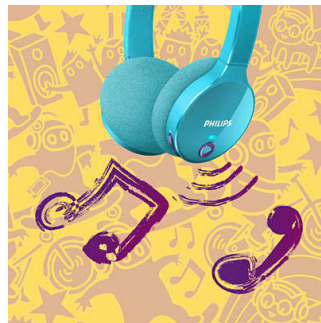

Pair your smart device with your headphones via Bluetooth and enjoy the freedom of crystal clear music and phone calls — without the hassle of cables. Change tracks and answer calls with intuitive controls built into the earshell.

SHK4000TL/00

32-mm neodymium drivers



Neodymium is the best material for producing a strong magnetic field for greater sensitivity in a voice coil, better bass response and pure balanced sound quality.

Four sticker sheets included



Customise your headphones with the included stickers. They are easy to peel and remove, so you can change the design as often as you like.

Specifications

Sound

- Frequency range: 10–22 000 Hz
- Speaker diameter: 32 mm
- Impedance: 24 ohm
- Magnet type: Neodymium
- Maximum power input: 100 mW
- Sensitivity: 85 dB

Connectivity

- Bluetooth version: 3.0 + EDR
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Maximum range: Up to 15 m

Outer Carton

- Length: 19.2 cm
- Number of consumer packages: 3
- Length: 7.6 inch
- Width: 18.5 cm
- Gross weight: 0.7 kg
- Height: 24.3 cm
- GTIN: 1 69 51613 99307 8
- Width: 7.3 inch
- Height: 9.6 inch
- Net weight: 0.2655 kg
- Gross weight: 1.543 lb
- Net weight: 0.585 lb
- Tare weight: 0.4345 kg
- Tare weight: 0.958 lb

Convenience

- Call Management: Answer/End Call, Reject Call, Last number redial, Call on Hold, Switch between call and music
- Volume control

Power

- Battery Type: LI-Polymer
- Music play time: 9* hour(s)

- Standby time: 200* hrs
- Talk time: 9* hrs

Packaging dimensions

- Height: 22 cm
- Packaging type: Blister
- Type of shelf placement: Both
- Width: 17.5 cm
- Depth: 7 cm
- Height: 8.7 inch
- Number of products included: 1
- EAN: 69 51613 99307 1
- Width: 6.9 inch
- Gross weight: 0.167 kg
- Depth: 2.8 inch
- Net weight: 0.0885 kg
- Gross weight: 0.368 lb
- Net weight: 0.195 lb
- Tare weight: 0.0785 kg
- Tare weight: 0.173 lb

Product dimensions

- Height: 14.8 cm
- Width: 12.2 cm
- Depth: 6.5 cm
- Width: 4.8 inch
- Height: 5.8 inch
- Depth: 2.6 inch
- Weight: 0.076 kg
- Weight: 0.168 lb

Accessories

- Quick start guide: Included
- USB cable: Included for charging

Design

- Colour: Teal



Issue date 2024-03-12

Version: 5.0.7

EAN: 69 51613 99307 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Actual results may vary