



Philips
Portable DVD Player

7" LCD

PET748



Watch your favourite TV programmes and DVDs anywhere

with easy setup

Enjoy free-to-air TV programmes with the built-in TV receiver on the PET748 portable DVD player. With the 7" TFT LCD swivel screen, you can indulge in movies, music and photo enjoyment on the go.

Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard playback of DivX videos
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

Enjoy portable TV entertainment in real-time

- 7" swivel color LCD panel for improved viewing flexibility
- Watch free-to-air TV broadcasts in real-time
- Supports PAL and SECAM TV standard
- Easy installation and automatic channel search

Extra touches for your convenience

- Enjoy up to 3 hours playback with a built-in battery*
- USB connection for photo and music playback from USB devices
- AC adapter, car adapter and AV cable included

PHILIPS
sense and simplicity


Highlights

7" swivel color LCD panel




7" swivel color LCD panel for improved viewing flexibility

DivX Certified

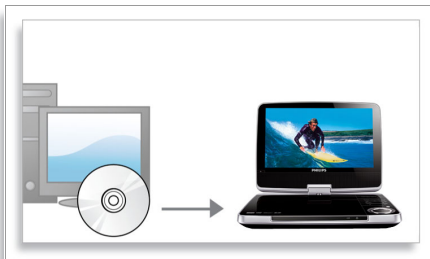

With DivX® support, you are able to enjoy DivX® encoded videos. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

DVD, DVD+/-RW, (S)VCD, CD

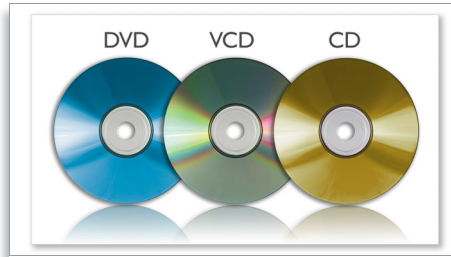

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can

be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

USB connection for photo/music



Simply plug in your portable device to the USB connector on your Philips portable DVD player and playback directly from USB or select your digital music or photos. Now you can share your favourite moments with family and friends.



Specifications

Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polariser
- Diagonal screen size (inch): 7 inch
- Resolution: 480(w) x 234(H) x 3(RGB)
- Brightness: 120 cd/m²
- Contrast ratio (typical): 200:1
- Effective viewing area: 154.1 x 86.6 mm
- Response time (typical): 30 ms

Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 10 mW RMS (earphone)
- Signal to noise ratio: >80 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, DVD+RW, DVD+R, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, Divx

Audio Playback

- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps

Connectivity

- AV output: Composite (CVBS) x 1

- DC in: 9 V, 1 A
- Headphone jack: 3.5 mm Stereo Headphone x 1
- TV connection: Antenna jack

Convenience

- Battery charging indication
- Shock proof

Tuner/Reception/Transmission

- Tuner bands: UHF, VHF
- Video Playback: PAL (all versions), SECAM

Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3 hrs*

Accessories

- AC/DC Adapter: DC 9 V, 1 A, 110-240 v, 50/60 Hz
- Cables: 1 x AV Cables
- Car kit: cigarette outlet adapter, 12vDC
- Included accessories: Aerial antenna
- Remote control: Slim remote
- User Manual: English/Russian/Ukrainian

Dimensions

- Product dimensions (W x H x D):
199 x 41 x 159 mm
- Packaging type: D-box
- Product weight: 0.71 kg
- Packaging dimensions (W x H x D):
235 x 255 x 70 mm
- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 4.12 kg



Issue date 2009-12-21

Version: 1.0.3

12 NC: 8670 000 50563
EAN: 87 12581 47037 1

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* Battery life varies by use and settings.

* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.