

PHILIPS

网关

1000 Series

TAI1102/93



www.philips.com/welcome



2021 © MMD Hong Kong Holding Limited. All rights reserved. Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

TAI1102/93



产品概述

飞利浦吸顶式无线网关。同时配备2.4GWIFI模块和蓝牙mesh无线模块，可连接其他无线智能控制器等产品，通过手机APP或语音音箱实现对智能设备控制，以及智能控制系统应用配置工作，并实现设备远程监控功能。

技术参数

产品名称	网关
额定电压	DC12V
WAN口	数量1（百兆）
WIFI 2.4G	支持802.11 b/g/n协议
加密方式	支持WPA-PSK/WPA2-PSK
工作温度	-20°C~50°C
工作湿度	0%~90%(无冷凝，无凝露)
通讯协议	蓝牙mesh
产品尺寸	φ100mmx30mm


注意事项

- 为确保正确使用本产品，墙面开关必须由专业电工安装拆卸
- 安装或拆卸墙面开关前必须要切断电源总闸，以防触电
- 安装或拆卸本产品所控制的灯或灯具前必须要切断电源总闸以防触电
- 本产品在安装和使用过程中需要远离火源和水源
- 本产品不能在潮湿环境中使用（比如浴室）

使用说明


- ① 双色LED指示灯
- ② Set按键孔
(长按5s进入测试模式，在测试模式下快速按5次，恢复出厂设置)
- ③ 底座及安装孔
- ④ WAN网线接口

接线及端口图示

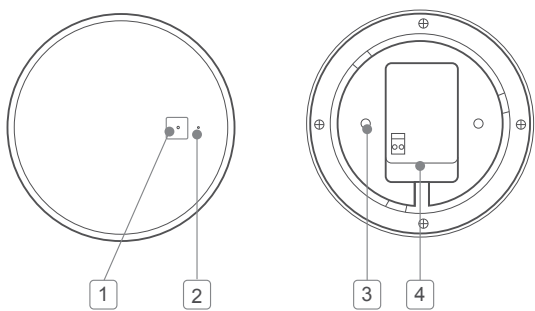

尺寸示意图

尺寸 (单位: mm) :
直径100mm*高30mm

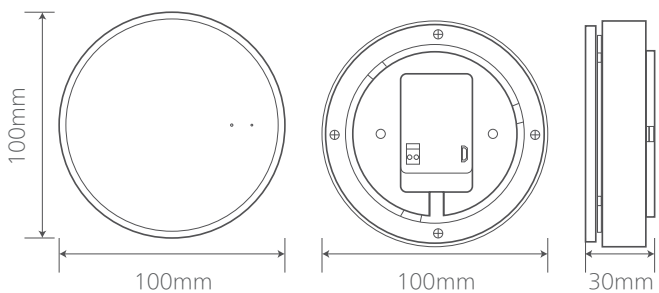

安装图示

