


Philips  
Dual screen portable DVD  
player

**17.8 cm (7") LCD**  
Dual screens

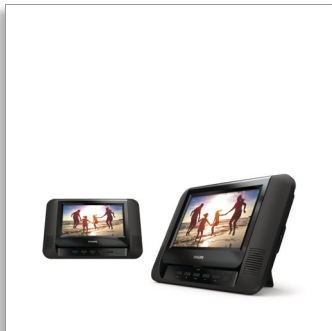

**TAP4805**

## Enjoy your movies on the road

with two widescreen LCDs

Play your films and music in the car! The Philips TAP4805 features two 7"/17.8 cm TFT LCD display screens that let you indulge in enjoying your DVD films, music and photos on the road. Install and mount easily for in-car enjoyment.

### **Play your movies, music and photos on the go**

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### **Enrich your AV entertainment experience**

- 17.8 cm (7") TFT colour LCD display in 16:9 widescreen format
- Expand movie enjoyment with dual TFT LCD screens
- Built-in stereo speakers

### **Extra touches for your convenience**

- Car adapter and mounting strap included
- AC/DC adapter included
- Stereo headphone jack for better personal music enjoyment

# PHILIPS

# Highlights

## 7" TFT colour LCD (16:9)




The colour LCD display brings images to life, showing off your treasured photos, favourite movies and music with the same 'real life' rich detail and vibrant colours as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at the top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

## MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## DVD, DVD+/-RW, (S)VCD, CD

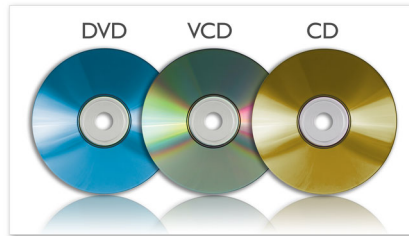

The Philips Portable DVD player is compatible with most DVD and CD discs available in the

market. DVD, DVD+/-R, DVD+/-RW, (S)VCD and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## Dual TFT LCD display screens

Dual screens allow you to display the same videos or images from the portable DVD player. Simply plug in and mount the screens on the headrests in your car. Now you can enjoy your favourite DVD movies and JPEG photos with family and friends in the back seats easily and comfortably.

# Specifications

## Picture/Display

- Display screen type: LCD TFT
- LCD panel type: TN
- Diagonal screen size (inch): 7 inch
- Resolution: 800(w) x 480 (H) x 3 (RGB)
- Brightness: >100 LUX
- Contrast ratio (typical): 800:1
- Response time (typical): 30 ms

## Sound

- Output Power: 1.5 W RMS x 2 (built-in speakers)
- Output power (RMS): 20 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >70 dB (earphone and speakers)

## Video Playback

- Playback Media: DVD, SVCD, DVD-R/-RW, DVD-Video, MP3-CD, CD-R/CD-RW, WMA, DVD+R/+RW, CD, Video CD, Picture CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat
- Video disc playback system: NTSC, PAL
- Compression formats: MPEG4, AVI

## Audio Playback

- Compression format: Dolby Digital, MP3, WMA
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 16 - 320 kbps
- WMA bit rates: 16 - 320 kbps

## Connectivity

- AV output: 3.5 mm jack (L/R) x 1
- DC in: 12 V, 2 A
- Headphone jack: 3.5 mm
- USB
- SD/MMC card slot

## Convenience

- Shock proof

- Battery charging indication
- Charge time: 3.5 hours

## Video Decoding

- Aspect Ratio: 16:9, 4:3

## Accessories

- AC/DC Adapter: DC-in 12 V, 2 A; 100-240 v, 50/60 Hz
- Cables: AV cable x 1; DC power cable x 1 (main unit to monitor)
- Remote control
- 2 x AAA batteries
- Car charger included
- Mounting material included
- Quick start guide
- Warranty certificate

## Product dimensions

- Product dimensions (W x H x D): 25 x 4.2 x 17 cm
- Weight: 1.5 kg

## Packaging dimensions

- EAN: 48 95229 11177 6
- Number of products included: 1
- Packaging type: Box
- Type of shelf placement: Standing
- Packaging dimensions (W x H x D): 34.3 x 21.8 x 13 cm
- Gross weight: 1.8 kg
- Net weight: 1.5 kg
- Tare weight: 0.3 kg

## Outer Carton

- GTIN: 1 48 95229 11177 3
- Number of consumer packages: 5
- Outer carton (L x W x H): 66.5 x 35.5 x 23.4 cm
- Gross weight: 9.5 kg
- Net weight: 7.5 kg
- Tare weight: 2 kg



Issue date 2022-05-12

Version: 3.1.1

12 NC: 8670 001 69502  
EAN: 48 95229 11177 6

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.  
\* Battery life varies by use and settings.  
\* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.