




Philips
Soundbar 3.1 with wireless
subwoofer

600 W max. Wireless subwoofer
Dolby Atmos. Cinema Experience
Play-Fi. Home Sound Made Easy
Connects with voice assistants

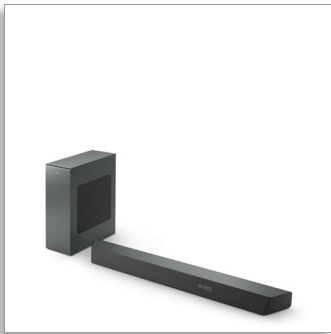

TAB8507B

The One that brings the cinema home

The One Soundbar with wireless subwoofer gives you the true cinema experience. Dedicated centre-channel speakers provide great vocal clarity and Dolby Atmos delivers incredible, immersive surround sound.

Easy control. Distinctive looks.

- Two angled speakers for wider sound
- Connects to your favourite voice assistant-enabled devices
- Easily connect to your favourite sources
- HDMI 4K pass through for Ultra HD Audio

Unpack. Connect. Enjoy.

- Philips Wireless Home System. Home sound made easy
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in
- DTS Play-Fi. Multi-room audio set-up
- HDMI eARC. Enjoy the high-quality and latest audio formats

The sound that you want for the content that you love


- DTS Play Fi Home Theatre. Wireless surround sound
- 3.1 channels. 600 W max power output. Rich, powerful sound
- Dolby Atmos. Immersive cinematic sound at home
- Stadium EQ Mode. Bring the stadium home

PHILIPS

Soundbar 3.1 with wireless subwoofer
600 W max. Wireless subwoofer Dolby Atmos. Cinema Experience, Play-Fi. Home Sound Made Easy,
Connects with voice assistants


Highlights

3.1 channels. 600 W max power

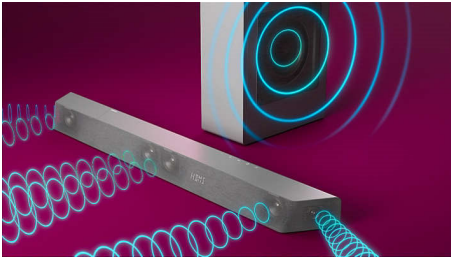


This soundbar brings max 600 W (300 W RMS at 10% THD) of powerful and rich sound to everything you watch. 3.1 channels fill any room with spellbinding soundtracks, thunderous effects, and crystal clear dialogue. The wireless subwoofer adds impact to every explosion and every beat.

Dolby Atmos®

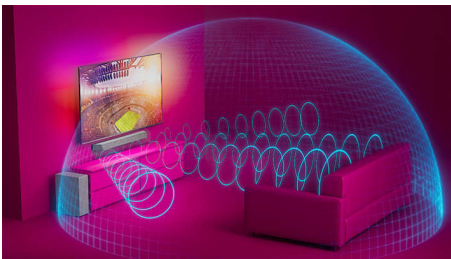


Increase the drama no matter what you watch. This Dolby Atmos-compatible soundbar reproduces depth as well as height, creating virtual three-dimensional surround sound that flows above and around you.

Wider soundstage

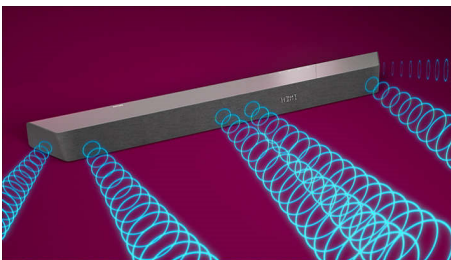


Widen the sound! Two extra tweeter speakers at either end of the soundbar broaden the audio to give you a clear separation of instruments. Pick them out easily and hear every instrument in the orchestra like you're really in the hall!

Stadium EQ Mode

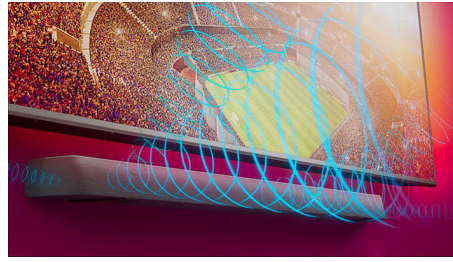


Experience the excitement of live sports, right there in your living room. Stadium EQ Mode immerses you in ambient crowd noise, as if you were sitting in the stadium! Be thrilled by every crucial moment and still hear crystal-clear commentary.

Philips Wireless Home System

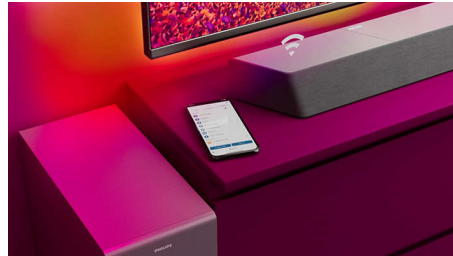

This Play-Fi-compatible soundbar gives perfect home-cinema sound. Connect the soundbar to any external and smart devices in your home. DTS Play-Fi connectivity and the Philips Sound App let you play your sounds throughout your home Wi-Fi network.

DTS Play Fi Home Theatre

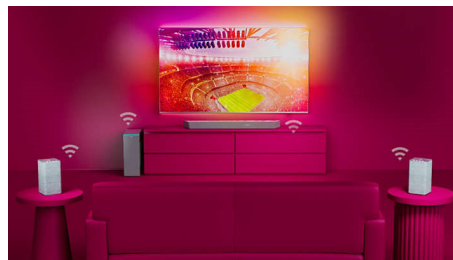

This Play-Fi-compatible soundbar gives perfect home-cinema sound. It streams perfectly synced, high-quality audio between any compatible speakers, TVs and soundbars, creates a true surround-sound that elevate your home audio experience.

DTS Play-Fi. Multi-room audio

Easy Play-Fi compatibility makes this soundbar the star of your multi-room set-up. You can sync Play-Fi-compatible speakers for multi-room audio or even create a true surround-sound that flows above and around you.

HDMI eARC

Lose nothing from the mix when you're immersed in the drama. This soundbar is compatible with HDMI eARC, a high-speed connection that lets you experience the full effect of advanced audio formats like Dolby Atmos.

All of your favourite sources

Easily connect to your favourite sources

HDMI 4K pass through

HDMI 4K pass through for Ultra HD Audio

Spotify Connect. Bluetooth.

Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

Connect with voice assistants



Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.



Soundbar 3.1 with wireless subwoofer
600 W max. Wireless subwoofer Dolby Atmos. Cinema Experience, Play-Fi. Home Sound Made Easy,
Connects with voice assistants

Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Audio sync
- Equalizer settings: Movie, Music, Voice, Stadium, Custom
- Total harmonic distortion: 10%
- Speaker system output power: 600 W max/300 W RMS
- Surround mode: UPMIX, Standard, AI

Loudspeakers

- Subwoofer freq range: 35-150 Hz
- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Number of sound channels: 3.1
- Number of woofers: 1
- Woofer diameter: 6.5"
- Soundbar freq range: 150–20,000 Hz
- Soundbar impedance: 6x 8 ohm
- Centre drivers: 2 full range
- Front drivers: 2 full range (L+R), 2 tweeters (L+R)
- External subwoofer enclosure: Bass reflex

Connectivity

- Bluetooth: Receiver
- Bluetooth version: 5.3
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
- EasyLink (HDMI-CEC)
- Aux in: 3.5 mm
- USB playback
- Optical input x 1
- HDMI content protection: HDCP 1.4/2.3
- HDMI Out (eARC/ARC) x 1
- Wi-Fi: 2.4 GHz/5 GHz, IEEE 802.11 a/b/g/n/ac
- HDMI IN x 1
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker technology: DTS Play-Fi Multi-room, DTS Play-Fi Home cinema
- Smart Home: Built-in Chromecast, Spotify Connect, Works with Alexa, Works with Apple AirPlay 2, Works with OK Google
- Wireless speaker connection: Subwoofer

Supported Audio Formats

- HDMI ARC/eARC: Dolby Atmos®, Dolby Digital, Dolby Digital plus, Dolby TrueHD, Dolby MAT, LPCM 2ch
- Play-Fi: AIFF, FLAC, MP3, MPEG4 AAC, MPEG4 M4A, WAV
- HDMI IN1: Dolby Atmos®, Dolby Digital, Dolby Digital plus, Dolby TrueHD, Dolby MAT, LPCM 2ch
- Bluetooth: SBC
- USB: MP3, WAV, FLAC
- Optical: Dolby Digital, LPCM 2ch

Outer Carton

- Length: 107 cm
- Number of consumer packages: 2
- Width: 60 cm
- Gross weight: 23.6 kg
- Height: 21 cm
- GTIN: 1 48 95229 12825 2
- Net weight: 16.6 kg
- Tare weight: 7 kg

Convenience

- Remote Control
- Display type: 5 digit 14 segment LED display
- Night mode: No

Compatibility

- Smartphone/tablet APP control

Power

- Main unit power supply: 100-240 V AC, 50/60 Hz
- Subwoofer power supply: 100-240 V AC, 50/60 Hz
- Subwoofer standby power: $\leq 0.5\text{ W}$
- Main unit standby power: $\leq 0.5\text{ W}$
- Auto standby

Packaging dimensions

- Height: 18.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 105 cm
- Depth: 45 cm
- Number of products included: 1
- EAN: 48 95229 12825 5
- Gross weight: 11 kg
- Net weight: 8.3 kg
- Tare weight: 2.7 kg

Accessories

- Included accessories: Remote Control (with battery), Power cord, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

Design

- Colour: Anthracite
- Wall mountable

Dimensions

- Main Unit (W x H x D): 940 x 65 x 106 mm
- Main Unit Weight: 2.7 kg
- Subwoofer (W x H x D): 150 x 410 x 309 mm
- Subwoofer Weight: 5.6 kg

Video

- 3D pass-through
- Video Enhancement: 4K Video Pass-through, Dolby Vision, HDR10, HDR10+, HLG



Issue date 2024-05-06

Version: 6.2.1

EAN: 48 95229 12825 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

