



Philips  
Over-ear wireless  
headphones

### Noise Canceling Pro

Clear calls. Attachable mic  
Bluetooth multipoint  
Up to 55 hours play time



TAH8507BK

## Clear calls. Great sound.

Whether in the office, home or commuting in between these over-ear, wireless headphones with attachable mic are made for business. Advanced noise cancellation removes environmental distractions and you get clear calls for every meeting too!

### Simple connection. Built for business

- Bluetooth multipoint. Connect to two devices at once
- Attachable boom mic for amazing call clarity
- Busy mode lights up to show others you are on a call
- Plug-in Bluetooth dongle for quick connectivity

### Great sound. Sleek looks

- Crystal-clear vocal clarity
- Sleek design with Noise Canceling Pro
- Great audio from 40 mm drivers
- Up to 55 hours play time\*

### Made with you in mind

- Philips Headphones app. Custom sound and more
- Touch controls. Swipe, tap and press to control
- Lightweight and comfortable to wear
- Smart-looking case keeps the headphones safe

# PHILIPS

Over-ear wireless headphones  
Noise Canceling Pro Clear calls. Attachable mic, Bluetooth multipoint, Up to 55 hours play time

TAH8507BK/00

# Highlights

## Noise Canceling Pro




These lightweight, wireless headphones look great and let you focus on what you want to hear. Advanced noise cancellation filters out unwanted sounds from the outside world. Awareness mode lets you bring the world back in when you need to.

## Great sound



Perfectly tuned 40 mm drivers deliver great detail and bass for every song or podcast. Use the included audio cable to plug in for hi-res audio from your favorite streaming service. When you're done, the hard case keeps the headphones safe.

## Bluetooth multipoint

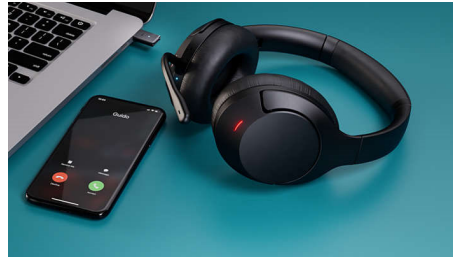

Watch a movie on your tablet. Take a call on your phone. With Bluetooth multipoint connectivity, you can connect up to two smart devices to the headphones simultaneously. Switch between them as you need!

## Up to 55 hours play time\*



With noise canceling off, you get up to 55 hours to enjoy your tunes, podcasts and more. With noise canceling on, it's up to 45 hours. A full charge takes two hours and, for a boost, you get an extra four hours with a quick 15-minute charge.

## Attachable boom mic



These fantastic headphones feature an innovative, attachable boom microphone.

When you need to make a call simply attach the mic to achieve crystal-clear vocal clarity. When you're done, detach the mic and carry on listening!

## Plug-in BT dongle



Get a stable connection to your smartphone and laptop-at the same time. Use your headphones to pick up calls on either, and switch between devices as you need. Simply plug the included dongle into your computer's USB-C socket or connect to USB-A sockets via the included adapter.

## Philips Headphones app



The Philips Headphones app puts you in charge of the music you're listening to. Adjust levels yourself or choose from preset sound styles. You can also use the app to switch between preset noise-cancellation modes.



# Specifications

## Sound

- Frequency range: 7 - 40,000 Hz
- Speaker diameter: 40 mm
- Impedance: 32 Ohm
- Maximum power input: 30 mW
- Sensitivity: 96 dB (1K Hz)
- Driver type: Dynamic
- Hi-Res Audio

## Connectivity

- Bluetooth version: 5.0
- Wireless
- Bluetooth profiles: A2DP, AVRCP, HFP
- Detachable cable
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: AAC, SBC
- Type of wireless transmission: Bluetooth
- Headphone socket: 2.5 mm

## Outer Carton

- Length: 23.1 cm
- Number of consumer packagings: 3
- Width: 21.1 cm
- Gross weight: 2.231 kg
- Height: 26 cm
- GTIN: 1 48 95229 12630 2
- Nett weight: 1.584 kg
- Tare weight: 0.647 kg

## Convenience

- Automatic power off
- Volume control
- Philips Headphones app support
- Firmware updates possible
- Type of controls: Touch

## Power

- Rechargeable
- Number of batteries: 1 pcs
- Charging time: 2 hour(s)
- Music play time (ANC on): 45 hour(s)
- Music play time (ANC off): 55 hour(s)
- Fast charging time: 15 mins for 4 hrs
- Battery weight (Total): 14.936 g
- Battery capacity(Headphones): 800 mAh
- Battery type(Headphones): Lithium Polymer (built-in)

## Packaging dimensions

- Height: 25.1 cm

- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 18.8 cm
- Depth: 6.8 cm
- Number of products included: 1
- EAN: 48 95229 12630 5
- Gross weight: 0.667 kg
- Nett weight: 0.528 kg
- Tare weight: 0.139 kg

## Product dimensions

- Height: 20.5 cm
- Width: 18.5 cm
- Depth: 4.5 cm
- Weight: 0.282 kg

## Accessories

- Others: 1 pcs hard carrying case, 1 pcs attachable boom mic
- Audio cable: 2.5-3.5mm stereo cable, L=1.2m
- Quick Start Guide
- Charging cable: USB-C cable, 500 mm
- Included adapters: Airplane adapter, Bluetooth dongle

## Design

- Color: Black
- Wearing style: Headband
- Foldable design: Flat / In-ward
- Ear coupling material: Synthetic leather
- Ear fitting: Over-ear
- Earcup type: Closed-back

## Telecommunication

- Microphone for call: 1 mic

## UPC

- UPC: 8 40063 20231 3

## ANC features

- ANC technology: Hybrid
- Awareness mode
- Microphone for ANC: 4 mic
- ANC (Active Noise Canceling)

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support



Issue date 2024-06-04

Version: 6.0.3

EAN: 48 95229 12630 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Battery life of playtime is approximate and may vary depending on application condition.