


Philips Streamium  
Wi-Fi component Hi-Fi  
system



**Streamium**

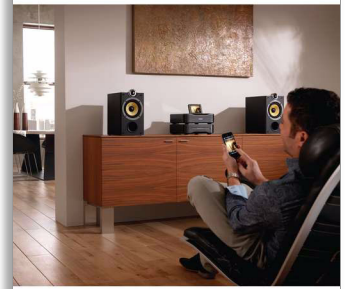

**MCI8080**

## Experience high fidelity music in every room

### Obsessed with sound

Enjoy high fidelity sound in every room with Multiroom Music. True-to-original audio is delivered by ClariSound speakers and FLAC Digital Lossless, giving you an exceptionally wide soundstage and CD quality to your compressed digital music.

#### **All your music on one wireless system**

- Multiroom Music plays your songs throughout your entire home
- 160 GB hard disk to store up to 2000 music albums
- Tune in and explore thousands of Internet radio stations
- Wireless stream music and photos from your PC/MAC

#### **Enrich your experience**

- Full colour touch screen for easy navigation
- Play DVD, DivX<sup>®</sup>, MP3, Non-DRM AAC, WMA, FLAC, OGG and JPG

#### **Ready to connect**

- Works with home broadband connection and Wi-Fi router
- Optional iPod/iPhone dock for convenient music playback
- Turn your Smartphone into a remote for Philips AV products


#### **Quality sound performance**

- FullSound enriches your music with fuller bass and clarity
- 2 x 50 W RMS Hi-Fi sound with Class "D" Digital Amplifier

**PHILIPS**

# Highlights

## 2 x 50 W RMS Hi-Fi sound/Class D

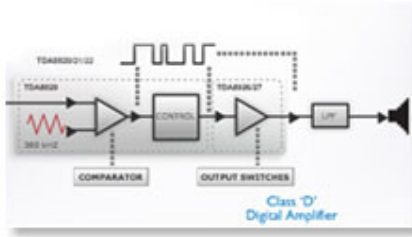


Fill a room with your favourite music with the 2 x 50 W RMS music output power and Class "D" Digital Amplifier. The Amplifier takes an analogue signal, converts it into a digital signal and then amplifies it. The signal then enters a demodulation filter to produce the final result. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. The Amplifier also has more than 90% efficiency compared to a traditional AB amplifier. This high efficiency translates into a powerful amplifier with a small footprint.

## 160 GB hard disk/2000 albums



The 160-GB hard disk of this Philips sound system provides a very large capacity for you to store your PC/MAC digital music files, easily holding up to 2000 music albums. Space saving, smart music collection management, easy access and all in one place.

## Multiroom Music

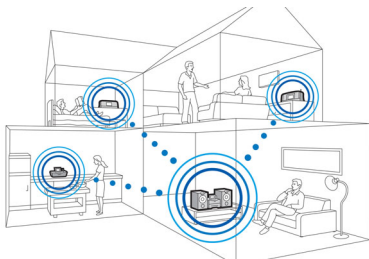

Play your favourite songs and fill your home with delightfully rich and clear sound. The

Multiroom Music feature lets you stream music wirelessly in your Philips Multiroom audio system. To activate, simply press the Multiroom Music icon when playing your favourite song, and as long as each station is connected, it becomes part of your very own music sharing and enjoyment - without any complicated setup. Share your best music with family and friends.

## MyRemote app



The Philips MyRemote app lets you use your iPhone, iPod Touch or Android Smartphone as a remote to control your Philips networked AV products. The app automatically recognises your Philips Blu-ray player, Home theatre or Streamium audio system connected to your home Wi-Fi network, and gives you instant control over the devices from anywhere in your home. And if you have more than one Philips networked AV product, the app will allow you to switch between them and control each one independently. This free app is created exclusively by Philips.

## Full colour touch screen



Touch-screen control allows you to control your device by simply pressing on-screen buttons rather than physical buttons on the device. Simply power up the device and the touch-screen user interface will show up on the LCD display with all the control options for the device. Touch-screen control combines LCD display technology with pressure sensors

and a powerful digital micro processor. When you press on a specific area of the screen with your finger, the relevant signal is sent to the processor and the command is immediately executed.

## Optional iPod/iPhone dock



Your choices just got wider. Not only can you play music from CDs, and via MP3 Link, AUX-in and wireless PC/MAC streaming, you can now play from your iPod and iPhone. Simply dock your iPod or iPhone, switch to docking mode, and select the songs you want to hear using the remote control. The docking cradle, available as an optional accessory, unleashes your personal collection onto a superb sound system.

## Wireless stream music and photos



Your PC/ MAC is filled with music that you can now conveniently stream onto your Philips audio device - without messy cables. Share your favourite songs with others at a party, or simply enjoy them in the comfort of your home. Do the same for your photo collections, and view them at leisure while you listen to music. Unlock your PC/ MAC treasures with the convenience of wireless streaming.



# Specifications

## Sound

- Equalizer settings: Neutral, Treble and Bass Control
- Sound Enhancement: Class "D" Digital Amplifier
- Volume Control: up/down
- Output Power: 2 x 50 W RMS

## Loudspeakers

- Main Speaker: 2-way, Speaker grilles detachable

## Audio Playback

- Compression format: MP3, WMA, non DRM AAC (m4A), eAAC+, FLAC, Ogg Vorbis
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Loader Type: Tray, Motorised
- Sample frequencies: 8-48 kHz (MP3)
- PC Link playback mode: MP3 streaming via network, Wi-Fi wireless connection
- USB Direct Modes: Play/Pause, Previous/Next, Repeat, Shuffle, Stop
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
- Hard Disk Playback Mode: Album, All tracks, Genre, Playlist, Same Artist, Same Genre
- ID3-tag support
- Internet Radio
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: up to 192 kbps, CBR/VBR

## Connectivity

- Headphones: 3.5 mm
- Wireless connections: Wireless LAN (802.11 n), Wireless LAN (802.11 g), Wireless LAN (802.11b)
- Wireless Universal Plug and Play: UPnP client, UPnP server
- LAN wired: Ethernet (RJ 45) 1 x
- Encryption/security: WEP 128 bit, WEP 64 bit, WPA, WPS-PBC, WPS-PIN, WPA2
- Antenna: FM Dipole
- Audio Connections: Analogue Audio In (L/R)
- USB: USB host
- Video Output - Analogue: Composite CVBS (yellow cinch)
- Video output — Digital: HDMI
- Connector pin: DCK3060 iPod/iPhone dock

## Storage Media

- Hard Disk Capacity: 160 GB
- Type: USB HDD (External)

## Convenience

- Display Type: Touch screen LCD
- Backlight colour: White
- On-Screen Display languages: English, Dutch, French, German, Italian, Spanish, Portuguese, Swedish, Russian, Simplified Chinese, Traditional Chinese

- Eco Power Standby: 1 watt
- Headphone jack
- Clock: On main display, Internet time
- Alarms: Buzzer Alarm, CD Alarm, Radio Alarm, Sleep timer, HDD alarm
- Display Enhancements: Brightness Control, Touch screen control
- Indications: DIM mode

## Tuner/Reception/Transmission

- Auto digital tuning
- RDS: Programme Type, Radio Text, RDS Clock Set, Station Name
- Tuner Bands: FM Stereo
- Tuner Enhancements: Auto Store

## Accessories

- 160 GB USB HDD (External)
- Included accessories: AC Power Cord, RCA cable (Yellow/Red/White), FM antenna, World Wide Warranty leaflet
- Remote control: 1-way Remote
- Batteries: 2 x AAA
- Quick start guide: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian, Polish
- User Manual: English, French, German, Spanish, Italian, Dutch, Norwegian, Swedish, Finnish, Portuguese, Danish, Russian, Polish (in USB HDD)
- Warranty Card: Warranty Card
- TwonkyMedia (in USB HDD)

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upsampling, Video upscaling

## Still Picture Playback

- On-device display: JPEG from USB, Streaming from PC
- Picture Compression Format: JPEG
- Playback Media: Picture CD to TV

## Video Playback

- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, OSD, Resume Playback from Stop, Slow Motion, Zoom
- Playback Media: DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video, Picture CD, Video CD/SVCD

## Power

- Power supply: 50 Hz, 200-240 V

## Dimensions

- Main speaker dimensions (W x H x D): 180 x 319 x 282 mm
- Set dimensions (W x H x D): 251 x 216 x 274 mm
- Set weight: 3.08 kg



Issue date 2017-04-04

Version: 3.1.5

12 NC: 8670 000 63721  
EAN: 87 12581 54743 1

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Napster is available only in Germany and the United Kingdom.