

Philips
DVD player

DVP5220X



Simply plays it all

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos, with absolutely no compromise to picture quality.

Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- High-quality outputs for analogue and digital audio
- Progressive Scan component video for optimised image quality

Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

Plays all your movies and music

- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

PHILIPS
sense and simplicity

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 80 dB
- Crosstalk (1 kHz): 80 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DVD+R/+RW
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW
- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA, PCM

Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-

- R/RW, Picture CD, Kodak Picture CD
- Picture compression format: JPEG
- Picture enhancement: Flip photos, Rotate, Slideshow, Zoom

Connectivity

- Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive

Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English

Power

- Power consumption: < 10 W
- Standby power consumption: < 1 W
- Power supply: 230-240 V, 50 Hz

Accessories

- Included Accessories: 2 x AAA Batteries, Remote Control, User manual, Audio/Video cable, Power cord, World Wide Warranty leaflet

Dimensions

- Set dimensions (H x D): 38 x 210 mm
- Packaging dimensions (W x H x D): 490 x 82 x 296 mm



Highlights


192 kHz/24-bit audio DAC

192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theatre system - in the comfort of your living room.

Progressive Scan

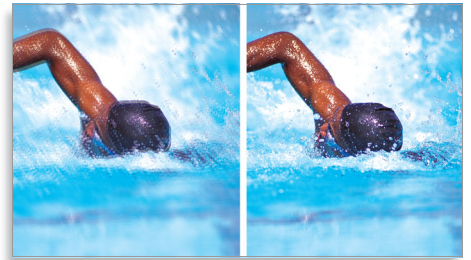

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



Issue date 2009-04-20

Version: 1.0.3

12 NC: 8670 000 37485
EAN: 87 12581 39947 4

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com