



Philips  
DVD player

USB 2.0



TAEP200



## Enjoy it all — from DVD and USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player TAEP200 delivers your movies and music entertainment experience.

### Bring audio and video to life

- 12-bit/108 MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalised image settings

### Play all your movies and music

- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

### Connect and enjoy multiple sources


- USB Media Link for media playback from USB flash drives

# PHILIPS

DVD player  
USB 2.0


# Highlights

## 12-bit/108 MHz video processing

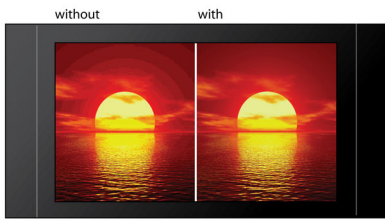

12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.


## Plays it all

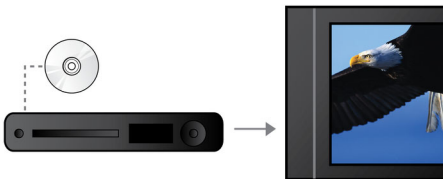

Play virtually any disc you want - whether it be a CD, (S)VCD, DVD, DVD+R, DVD-R,

DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.


## Screen Fit

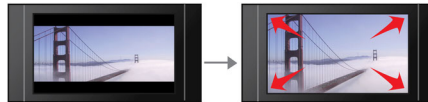

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen


TAEP200/10

## USB Media Link

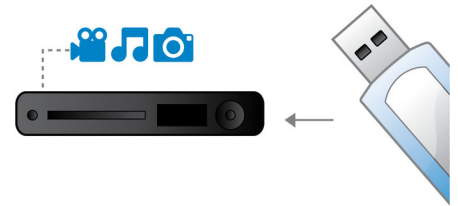

The Universal Serial Bus, or USB, is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## Smart Picture

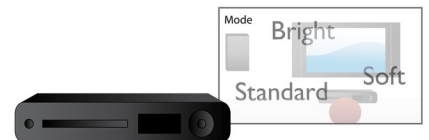

Smart Picture provides the optimum picture settings for colour, brightness, saturation, contrast, sharpness and so on, to enhance your overall viewing experience at all times.

# Specifications

## File Format

- Video: avi, mpg
- Audio: mp3, wma
- Picture: JPG, JPEG

## Video Playback

- Video supported formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL, AUTO
- Audio format: Dolby Digital, WMA, MP3

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

## Audio Playback

- Audio supported formats: MP3, WMA
- MP3 bit rates: 16 kbps - 320 kbps
- WMA bit rates: 16 kbps - 320 kbps

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Video upsampling

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, HDMI output

## Convenience

- Child Protection: Child Lock, Parental Control

## Power

- Power consumption: 15 W
- Power supply: 100-240 V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Sound

- Crosstalk (1 kHz): > 100 dB
- D/A converter: 24-bit, 192 kHz
- Distortion and Noise (1 kHz): <= -65 dB
- Dynamic Range (1 kHz): > 90 dB
- Frequency response: 30–20000 Hz
- Signal to noise ratio: >= 90 dB
- Sound System: Dolby Digital

## Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, Quick start guide, World Wide Warranty leaflet, Safety warranty sheet

## Product dimensions

- Product dimensions (W x H x D): 22.5 x 4.3 x 19.6 cm
- Weight: 0.92 kg

## Packaging dimensions

- Type of shelf placement: Standing
- Packaging dimensions (W x H x D): 24.8 x 27 x 8 cm
- Gross weight: 1.25 kg
- Net weight: 1.05 kg
- Tare weight: 0.2 kg
- EAN: 48 95229 11116 5
- Number of products included: 1
- Packaging type: Carton

## Outer Carton

- Outer carton (L x W x H): 41.5 x 26 x 28.6 cm
- Gross weight: 6.8 kg
- Tare weight: 1.55 kg
- GTIN: 1 48 95229 11116 2
- Number of consumer packages: 5
- Net weight: 5.25 kg

## Design

- Colour: Black



Issue date 2022-05-21

Version: 4.0.1

12 NC: 8670 001 69252  
EAN: 48 95229 11116 5

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)