



Philips  
In ear headphones with mic

White



SHE3805WT

## Extra bass

### Compact headset with oval sound tube

The small and colorful SHE3805 packs a punch with its efficient speakers that deliver ultra dynamic bass. Soft ear caps with oval tube inserts ensure ergonomic fit while the built-in microphone switches you from music to calls easily.

#### Enjoy quality sound

- Efficient 8.6mm drivers deliver clear, precise sound
- Closed in-ear design for enhanced bass and noise isolation

#### Wearing comfort

- Ergonomic oval sound tube for a truly comfortable fit
- Choose from 3 pairs of ear caps for the perfect fit for you

#### Design for convenience

- Reinforced cable relief enhances durability and connectivity

#### Stay connected to your music and friends

- Built-in microphone switches you from music to phone calls

# PHILIPS

In ear headphones with mic  
White


# Highlights

## Built-in microphone



The built-in microphone lets you easily switch from music listening to taking phone calls - easily, so you'll always stay connected with what matter most to you.

## Choice of 3 pairs of ear caps

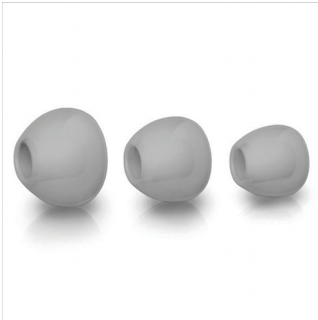

Ear caps come in a choice of 3 sizes – small, medium and large – for a personalized and perfect fit.

## Efficient 8.6mm drivers




Small and efficient 8.6mm speaker drivers deliver clear sound for enhanced listening enjoyment on the go.

## Ergonomic oval sound tube

The oval shape of the sound tube came about based on extensive research on the human ear. Designed to fit any ear comfortably, the ergonomic shape ensures optimal fit and comfort for total music enjoyment.

## Noise isolating ear caps

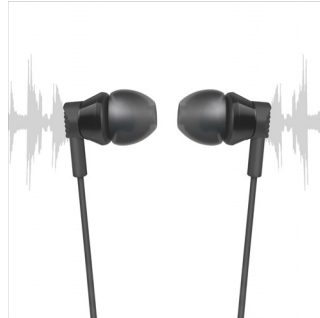

Ultra small in-ear design ensures a snug and comfy fit to block out ambient noise, while its closed structure deliver enhanced bass performance.

## Reinforced cable relief

To extend the life of your headphones, a soft rubber relief between them and the cable protects the connection from damage through repeated bending.

SHE3805WT/00

# Specifications

## Sound

- Diaphragm: PET
- Frequency response: 10–22 000 Hz
- Magnet type: Neodymium
- Voice coil: CCAW
- Sensitivity: 107 dB
- Speaker diameter: 8.6 mm
- Maximum power input: 20 mW
- Impedance: 16 ohm
- Acoustic system: Semi-closed

## Design

- Color: White

## Connectivity

- Cable Connection: symmetrical
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: nickel plated

## Packaging dimensions

- Packaging type: Blister
- Type of shelf placement: Both
- EAN: 69 23410 72529 2
- Packaging dimensions (W x H x D): 5 x 17.2 x 3 cm
- Gross weight: 0.035 kg
- Nett weight: 0.013 kg
- Number of products included: 1
- Tare weight: 0.022 kg

## Inner Carton

- Gross weight: 0.142 kg
- GTIN: 2 69 23410 72529 6
- Inner carton (L x W x H): 18.2 x 9.8 x 6.4 cm
- Nett weight: 0.039 kg
- Number of consumer packagings: 3
- Tare weight: 0.103 kg

## Outer Carton

- Gross weight: 1.32 kg
- GTIN: 1 69 23410 72529 9
- Outer carton (L x W x H): 37.4 x 20.6 x 14 cm
- Nett weight: 0.312 kg
- Number of consumer packagings: 24
- Tare weight: 1.008 kg

## Product dimensions

- Product dimensions (W x H x D): 2 x 2 x 1.2 cm
- Weight: 0.0115 kg



Issue date 2016-07-15

Version: 4.0.5

12 NC: 8670 001 09655  
EAN: 69 23410 72529 2

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)