

Philips
Soundbar Home theatre

DVD playback
Wireless subwoofer

HSB4383



Bring your movie to life

with wireless subwoofer

Bring your movies to life with great surround sound. With 300w of sound power, a built-in DVD player, HDMI 1080p upscaling and a wireless subwoofer, you can now enjoy your movies in high-quality sound and picture, without the clutter!

Great listening experience

- Dolby Virtual Speaker for realistic surround sound

Designed to enhance your living space

- Flexible placement on the wall or tabletop
- Wireless subwoofer for incredible bass without the wires
- SoundBar design best fitting an 81 cm (32") flat TV or larger


Connect and enjoy all your entertainment

- Built-in FM tuner
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI 1080p upscales to high definition for sharper pictures
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- MP3 Link plays music from portable media players
- 300 W RMS total output power

PHILIPS


Highlights

300 W RMS total output power

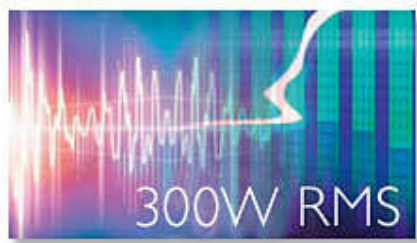

300 W RMS total output power

Built-in FM tuner

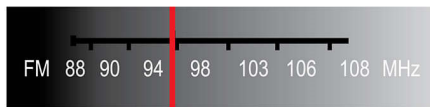

Built-in FM tuner

Dolby Virtual Speaker



Dolby Virtual Speaker is a sophisticated audio virtualisation technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high-quality stereo source is transformed into true-to-life, multi-


channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Flexible placement

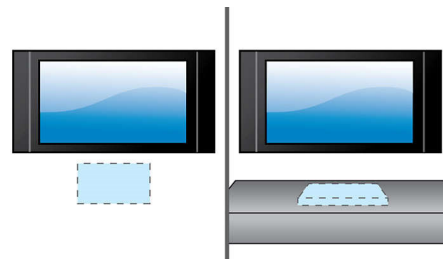


Flexible placement on the wall or tabletop

HDMI 1080p

HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the


line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

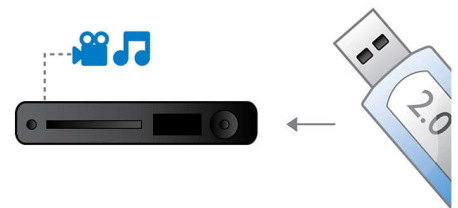

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

MP3 Link

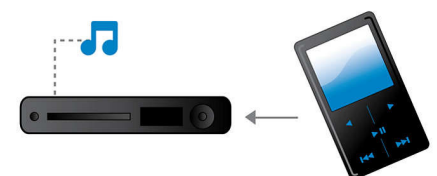

MP3 Link allows playback of MP3 files directly from your portable media player on your home theatre system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.

Specifications

Sound

- Output power (RMS): 300
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

Loudspeakers

- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

Connectivity

- Front/Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit Speaker Connectors, HDMI output, TV in (audio, cinch)

Tuner/Reception/Transmission

- Tuner Bands: FM
- RDS: Station Name

Outer Carton

- EAN: 87 12581 48004 2
- Length: 56.5 cm
- Number of consumer packages: 1
- Width: 39.5 cm
- Gross weight: 13.2 kg
- Height: 35 cm
- Net weight: 10.4 kg
- Tare weight: 2.8 kg

Power

- Power supply: 220-240 V, 50 Hz
- Standby power consumption: <1 W

Packaging dimensions

- Height: 39.5 cm
- Packaging type: Carton
- Width: 56.5 cm
- Depth: 35 cm
- Number of products included: 1
- EAN: 87 12581 48004 2
- Gross weight: 13.2 kg

- Net weight: 10.4 kg
- Tare weight: 2.8 kg

Accessories

- Included accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Dimensions

- Set Width: 800 mm
- Weight incl. Packaging: 11 kg
- Set Height: 140 mm
- Set Depth: 97 mm
- Subwoofer Depth: 340 mm
- Subwoofer Height: 430 mm
- Subwoofer Width: 170 mm

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

Audio Connection

- Wireless Connection: Frequency Band: 2.4 GHz, Modulation: GFSK, Technology: Adaptive Frequency

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL



Issue date 2024-04-13

Version: 3.0.6

EAN: 87 12581 48004 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com