




Philips  
Hi-fi headphones

Powerful bass

SHP8500

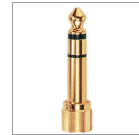

## Dynamic hi-fi sound performance

Comfortable and fully adjustable headphones with neodymium speaker drivers deliver dynamic sound performance

### The perfect listening experience

- 40mm speaker driver delivers sound without distortion
- The whole ear is covered to optimize sound quality
- High quality Linear Crystal Oxygen Free Copper cable

### You'll forget you're wearing them!

- Easy adjustable headband ensures optimum fit and comfort

### Always ready to go

- The 3m-long cable is ideal for use with headsets
- Single-sided cable reduces tangling and improves comfort
- Gold-plated adaptor for ultra reliable connection

# PHILIPS

# Specifications

## Sound

- Acoustic system: open
- Magnet type: Neodymium
- Frequency response: 10 - 28 000 Hz
- Impedance: 32 ohm
- Maximum power input: 1500 mW
- Sensitivity: 106 dB
- Speaker diameter: 40 mm

## Connectivity

- Cable Connection: one-sided
- Cable length: 3 m
- Finishing of connector: gold-plated

## Accessories

- Adaptor plug: gold-plated 3.5 - 6.3 mm
- Included: Velcro cable strap

## Packaging dimensions

- Packaging dimensions (W x H x D):  
23.5 x 30.1 x 11 cm
- Gross weight: 0.56 kg

- Nett weight: 0.29 kg
- Tare weight: 0.27 kg
- EAN: 87 10895 95747 2
- Number of products included: 1
- Packaging type: Carton

## Outer Carton

- Gross weight: 9.8 kg
- Outer carton (L x W x H): 52.8 x 38.5 x 61.1 cm
- Nett weight: 3.48 kg
- Tare weight: 6.32 kg
- EAN: 87 10895 95749 6
- Number of consumer packagings: 12

## Inner Carton

- Gross weight: 2.06 kg
- Inner carton (L x W x H): 34.5 x 25 x 28 cm
- Nett weight: 1.68 kg
- Tare weight: 0.38 kg
- EAN: 87 10895 95748 9
- Number of consumer packagings: 3

# Highlights

## 3m cable

A handy cable length to make it easier for you to move freely around while using your headphones.

## 40 mm speaker driver

The 40 mm speaker driver is made of a composite mylar material for a highly sensitive yet powerful element that delivers sound without audible distortion.

## Single-sided cable

The cable is conveniently connected to just one side, considerably reducing the risk of tangling and simplifying winding the cable up for storage.

## Easy adjustable headband

The easily adjustable mechanism provides a comfortable close fitting acoustic seal between the ear cushion and ear, ensuring optimal performance.

## Gold-plated adaptor

Be assured of a perfect connection and high-quality sound regardless of whether your audio devices are fitted with 3.5 or 6.35 mm jack sockets.

## Full size design

Full-size earshells of these Philips headphones not only cover your whole ear for better sound quality, but also provide space for a larger, higher performance driver.

## LC-OFC cable

The extremely pure copper used for this cable minimizes transmission losses and delivers superb signal quality to the headphone, and pure sound to your ears.

