

High-resolution audio

In-ear Ultra-soft silicone caps Flat cable



S2KB

High fidelity, premium quality

Wherever you go

Philips Fidelio S2 headphones are precisely engineered to deliver natural, balanced sound, revealing every detail as the artist intended. Amazing sound presented in a lightweight yet durable design for true comfort and pleasure on the go.

Designed for precision

- High-resolution audio reproduces music in its purest form
- · Layered motion control drivers for refined high frequencies
- High-powered 13.5-mm neodymium drivers for exceptional sound
- Engineered metal housing reduces vibration and resonance
- · Handpicked, tuned and tested drivers for a precise match

Listen in comfort

- · Copper alloy outer housing for lightweight durability
- Anti-scratch matt coating
- Ergonomic earphones fit perfectly while dispersing pressure
- 2 Comply™ Foam Tips for a comfy fit and noise isolation
- Ultra-soft silicone tips in 5 sizes for a custom, snug fit

Created for convenience

- Durable flat cable keeps your headphones tangle-free
- Switch between music and calls with in-line control and mic



PHILIPS Fidelio

Highlights

High-resolution audio


High-resolution audio offers the best in audio performance, reproducing original studio master recordings more faithfully than 16 bit/44.1 kHz CD formats. This uncompromising quality makes high-resolution audio the best sound companion for the music lover. Fidelio headphones meet the stringent standards required for the Hi-Res Audio stamp of quality. Whether you are enjoying your Hi-Res collection or a more traditional music source, the smooth extended high frequencies of the Fidelio headphone range help you get more from your music.

13.5-mm neodymium drivers




Each speaker driver is carefully handpicked, tuned and tested before being paired to ensure delivery of the most balanced, natural sound. The 13.5-mm drivers utilise high-power neodymium magnets to deliver deep bass impact, transparent mid-range and refined high frequencies.

Copper alloy outer housing

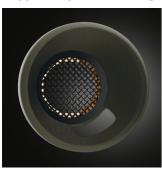

Copper alloy outer housing for lightweight durability

Engineered metal housing

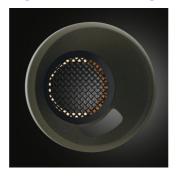

The metal housing is meticulously engineered to reduce resonance and vibration, delivering authentically precise sound marked by incredible sound detail.

Handpicked, tuned and tested



Each speaker driver is specially tested and handpicked for ideal stereo pairs, together delivering superbly deep bass, transparent midrange and refined high frequencies.

Ergonomic earphones



The Fidelio S2 earphones are ergonomically shaped to fit your ear's natural curve, all the while dispersing pressure. Its lightweight copper alloy construction and superior

materials ensure long-lasting comfort, allowing you to experience true comfort as you enjoy your music to the fullest.

In-line control and mic



The Fidelio S2 in-ear headphones feature an inline remote and microphone so you can switch easily between your music and calls. Stay connected with important people – and your music, always.

Soft and durable flat cable



Every aspect of your Fidelio in-ear headphones is carefully designed for an exceptional music enjoyment experience – always. Their innovative dual-colour flat cable – made from high-quality, durable yet stylish material – has anti-tangle properties, allowing you to freely get into your music on the go, without spending any time and energy sorting out the cable. Smart, smooth and easy all the way.

Anti-scratch matt coating

The ergonomically designed ear shell is protected by a matt finish, which imparts not only a premium look and feel but also durability and resistance to scratches. The protective coating makes the earphones easy to clean and even easier to bring along with you anywhere you go. Just give them a wipe and they'll look as good as new.

Specifications

- Acoustic system: Semi-closed
- Frequency response: 5-40 000 Hz
- Sensitivity: 107 dB
- Speaker diameter: 13.5 mmMaximum power input: 40 mW
- Impedance: 22 ohm

Connectivity

- Cable Connection: 3.5 mm 4 pole (1.2 M)
- · Compatible with:: iPhone®, BlackBerry®, HTC, LG, MOTOROLA, Sony, Nokia*, SAMSUNG*. *Extra connector available through customer support for Sony Ericsson and older models from NOKIA and SAMSUNG

Accessories

• Storage pouch



Issue date 2015-11-01

© 2015 Koninklijke Philips N.V. All Rights reserved.

Version: 7.0.3

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 001 10433 EAN: 69 23410 72605 3

www.philips.com