



Philips  
Portable DVD Player

18cm/ 7" LCD  
3hr playtime  
USB

PD7030



## Movies that travel with you

with USB for video, photo and music

Enjoy your movies anytime, anyplace! The portable PD7030 DVD player featuring 7"/18cm LCD display lets you indulge in the pleasure of enjoying DVD/DivX® movies, MP3-CD/CD music and JPEG photos on the go.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard DivX video playback
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Built-in stereo speakers

### Extra touches for your convenience

- Enjoy up to 3 hours playback with a built-in battery\*
- Full Resume on Power Loss
- Car adaptor included
- USB connection for video, photo and music playback

# PHILIPS

# Highlights

## MP3-CD, CD and CD-RW playback



MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## View JPEG from picture disc




Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!

## DVD, DVD+/-RW, (S)VCD, CD

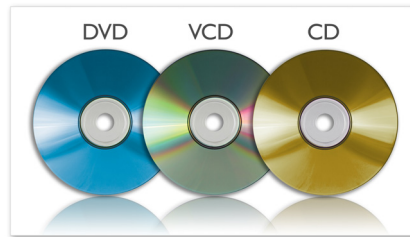

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the

## DivX Certified

With DivX® support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified® Philips device.



# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
19,5 x 3,75 x 15,4 cm
- Weight: 0,624 kg

## Packaging dimensions

- Packaging dimensions (W x H x D):  
23 x 22,5 x 7 cm
- Nett weight: 0,814 kg
- Gross weight: 1,035 kg
- Tare weight: 0,221 kg
- EAN: 87 12581 59578 4
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

## Outer Carton

- Outer carton (L x W x H): 24 x 22,5 x 27 cm
- Nett weight: 2,442 kg
- Gross weight: 3,333 kg
- Tare weight: 0,891 kg
- Number of consumer packagings: 3

## Picture/Display

- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w)x234(H)x3(RGB)
- Display screen type: LCD TFT

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out),  
>76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Zoom, Resume

Playback from Stop

- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1
- USB

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adaptor: DC 9V, 0.8A, 110-240v, 50/60Hz
- User Manual: English
- Car kit: cigarette outlet adaptor, 12vDC

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 3hrs\*

## Dimensions

- Master carton dimensions: 225 x 270 x 240 mm
- Master carton quantity: 3
- Master carton weight: 3.95 kg
- Packaging dimensions (W x H x D):  
230 x 255 x 70 mm
- Product dimensions (W x H x D):  
195 x 38 x 153 mm
- Product weight: 0.71 kg
- Packaging type: D-box



Issue date 2014-06-06

Version: 1.0.5

12 NC: 8670 000 74773  
EAN: 87 12581 59578 4

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.