

PHILIPS

Professional DJ headphones

Professional DJ headphones

On-ear

Soft ear cushions

Flat folding

A1PRO



Professional DJ Headphones

in collaboration with Armin van Buuren

Created in collaboration with 5-time world's best DJ award winner, Armin van Buuren, the A1PRO headphones are made for the electronic music life. On the move or by the mixing desk these headphones will add power and vibrance to every tune.

Comfortable for long sessions

- Detachable, replaceable and comfortable ear cushions
- Dual-sided rotating arms for single ear monitoring
- Soft, comfortable headband cushioning

Functional and durable

- Coiled cable stretches to 1.8 m for more freedom of movement
- Fold flat design for easy storing and carrying
- TR90 nylon constructed headband for exceptional durability

Ideal DJ accessories

- Replaceable cushions

For DJs and audio professionals

- 40-mm (1.6"), 2500mW drivers ensure distortion-free music
- Closed-back and isolating cushions for total sound isolation
- Excellent sound isolation for use in high-noise environments
- Source-accurate sound for as-recorded music enjoyment


Highlights

40-mm (1.6") drivers handling 2500mW



High powered 40-mm (1.6") neodymium drivers, engineered for 2500mW of power deliver clear, dynamic and distortion-free music even at high volumes or with high audio input power.

Closed-back design

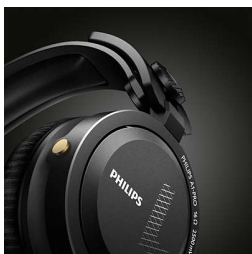

A closed-back architecture maximises bass and helps you listen to your music as loud as you want without leaking, while supra-aural cushions seal the gap between your ears and the headphones for superior sound isolation.

Coiled cable expands to 1.8 m

Enjoy greater freedom of movement with a 1.4-m-long cable with a coiled section that can extend to 1.8 m. The coil also reduces the strain on parts caused by pulling, while providing extra extension without the tangled mess of cables.

Excellent sound isolation

Soft sealing cushions isolate your ears from the outside world, so you can focus on the beat without distraction.

Flat fold design

Designed to give you the best experience on the go, your Philips professional DJ headphones can be folded away for perfect portability and easy storage. Smart design and careful selection of components, like well-built hinges, allow the headphone parts to be manoeuvred with ease.

Replaceable cushions



Bayonet mount ear cushions easily twist and click into place with the same secure mechanism as a camera lens. The soft ear cushions provide long-wearing comfort.

Source-accurate sound

Source-accurate sound reproduction brings you sound as it was recorded in the booth, without distortion or alteration, so the sound you hear is true to the original.

TR90 nylon made headband

TR90 nylon constructed headband for exceptional durability

Specifications

Sound

Acoustic system: closed

Frequency response: 13 - 23,000 Hz

Diaphragm: PET

Magnet type: Neodymium

Type: Dynamic

Maximum power input: 2500 mW

Speaker diameter: 40 mm

Sensitivity: 108 dB

Impedance: 16 ohm

Distortion (THD): < 0.5%

Connectivity

Cable Connection: one-sided

Outer Carton

Length: 22 cm

Number of consumer packages: 3

Width: 19 cm

Gross weight: 1.39 kg

Height: 24 cm

GTIN: 1 69 23410 72870 2

Net weight: 0.7155 kg

Tare weight: 0.6745 kg

Packaging dimensions

Height: 23.2 cm

Packaging type: Carton

Type of shelf placement: Both

Width: 16.8 cm

Depth: 6.5 cm

Number of products included: 1

EAN: 69 23410 72870 5

Gross weight: 0.3995 kg

Net weight: 0.2385 kg

Tare weight: 0.161 kg

Product dimensions

Height: 17.5 cm

Width: 16 cm

Depth: 5 cm

Weight: 0.2385 kg

