







**PHILIPS** 




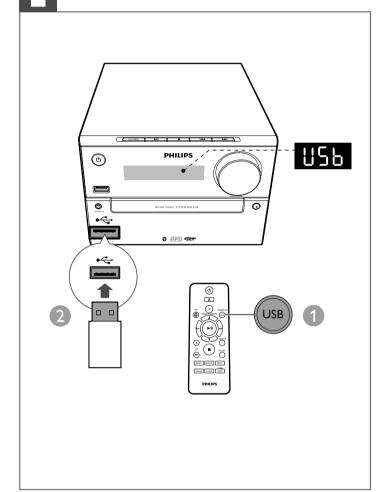


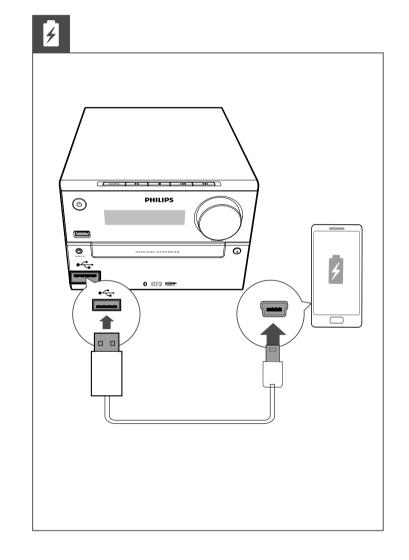

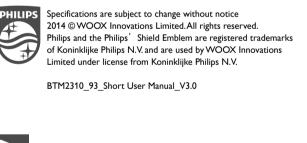

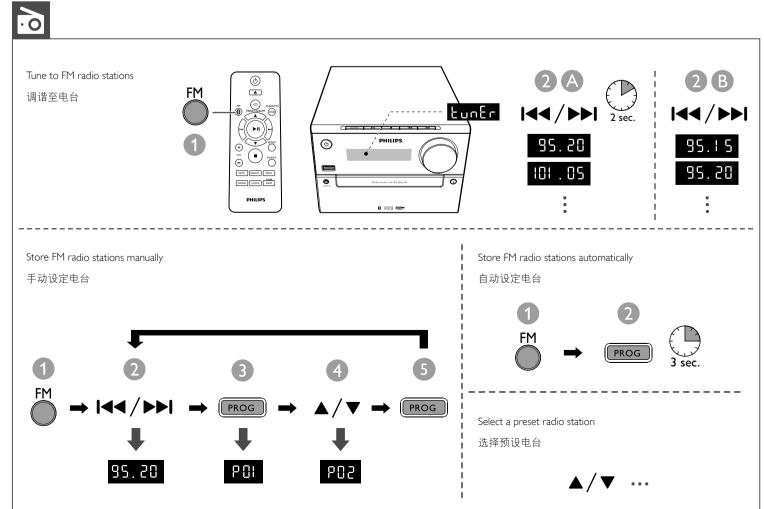

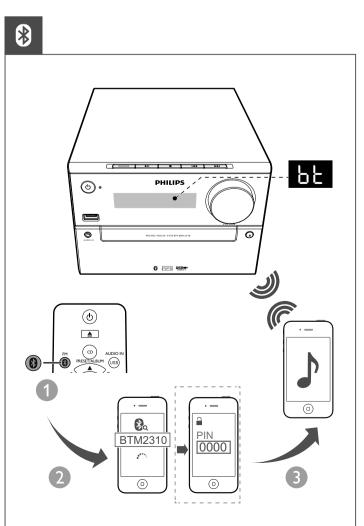

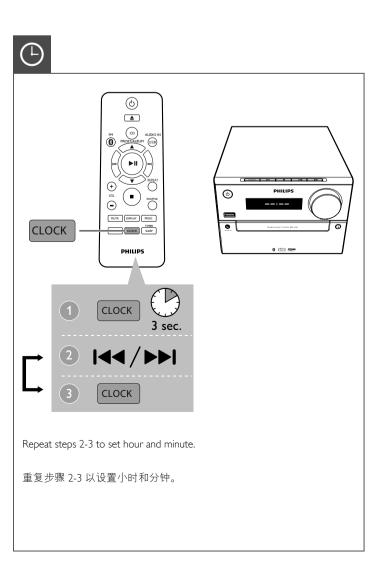

Repeat steps 2-3 to set minute, select a source (CD, FM, or USB), and adjust volume.

SLEEP

重复步骤 2-3 可设置分钟、选择来源(CD、FM 或 USB)及调节音



- Speaker Box

十四 十年

- 音箱


### **Specifications** Maximum Output Power 15 W Speaker Impedance 6 ohm Speaker Driver Full range 3" Speaker Sensitivity >83 dB/m/W Bluetooth Version V3.0 Bluetooth Frequency Band 2.4 GHz ~ 2.48 GHz ISM Band Bluetooth Range 10 m (free space) 87.5-108 MHz Tuner Tuning Range Tuner Tuning grid 50 KHz USB Direct Version 2.0 full speed USB 5 V Power <1 A Disc Diameter 12 cm/8 cm Support Disc CD-DA, CD-R, CD-RW, MP3-CD 100-240 V~, 50/60 Hz AC power Operation Power Consumption 18 W Eco Standby Power Consumption < 0.5 W Dimensions 180 × 121 × 247 mm Main Unit (W $\times$ H $\times$ D) - Speaker Box ( $W \times H \times D$ ) $150 \times 238 \times 125 \text{ mm}$ Weight - Main Unit 1.6 kg


规格				
	15 瓦			
—————————————————————————————————————	6 欧姆			
扬声器驱动器	全频 3 英寸			
扬声器灵敏度	>83 dB/m/VV			
蓝牙版本	V3.0			
蓝牙频段	2.4 GHz ~ 2.48 GHz ISM 频段			
蓝牙工作范围	10 米(开阔空间)			
调谐器调谐范围	87.5-108 兆赫			
调谐器调谐栅	50 千赫			
USB 直放版本	2.0 全速			
	≤1 安			
 光盘直径	12 厘米/8 厘米			
	CD-DA、CD-R、CD-RW和MP3-CD			
 交流电源	约 100-240 伏,50/60 赫兹			
 操作功耗	18 瓦			
 环保节能待机功耗	< 0.5 瓦			
 尺寸				
- 主装置(宽×高×厚)	180×121×247 毫米			
- 音箱(宽×高×厚)	150×238×125 毫米			
 重量				
- 主装置	1.6 千克			

2×0.98 千克

 $2 \times 0.98 \text{ kg}$ 



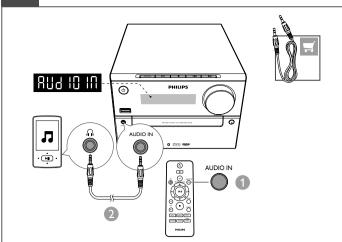

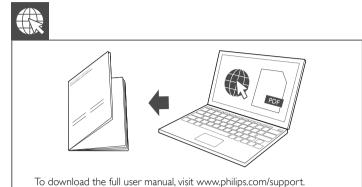



## Compatible USB devices

- USB flash memory (USB2.0 or USB1.1)
- USB flash players (USB2.0 or USB1.1)
- Memory cards (requires an additional card reader to work with this unit)

要下载完整用户手册, 请访问 www.philips.com/support。

### Supported formats

- USB or memory file format: FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- File name in Unicode UTF8 (maximum length: 32 bytes)

## Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 128 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1 kHz, 48 kHz Supported Bit-rates: 32~256 (kbps), variable bit rates

# 兼容的 USB 设备:

- USB 闪存(USB2.0 或 USB1.1)
- USB 闪存播放机(USB2.0 或 USB1.1) 存储卡(需要额外的读卡器才能用于本装置)

## 支持的 USB 格式

- USB 或内存文件格式: FAT12、FAT16、FAT32(扇区大小: 512 个字节)
- MP3 位速率(数据速率): 32-320 Kbps 和可变位速率
- 目录嵌套最多可达8层 专辑/文件夹数量: 最多 99
- 曲目/标题数量: 最多 999
- Unicode UTF8 类型的文件名(最大长度:32 个字节)

## 支持的 MP3 光盘格式

- ISO9660, Joliet 最大标题数: 128(视文件名长度而定)
- 最大专辑数: 99
- 支持的采样频率: 32 千赫、44.1 千赫、48 千赫

- 支持的比特率: 32~256 (kbps), 可变位速率

# **Important**

## Safety



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the

CAUTION: To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

## Important Safety Instructions

- Follow all instructions
- Heed all warnings.
- Do not use this device near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's
- Do not install near any heat sources such as radiators, heat registers, stoves, or other
- devices (including amplifiers) that produce heat.

  Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the device.

Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the device. When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.



- Unplug this device during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or
- moisture, does not operate normally, or has been dropped.
  Battery usage CAUTION –To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline etc.) Batteries (packed or installed) shall not be exposed to excessive heat such as
  - sunshine, fire or the like. Remove batteries when the unit is not used for a long time
- The device shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## Warning

- Never remove the casing of this device.
- Never lubricate any part of this device.
- Never place this device on other electrical equipment
- · Keep this device away from direct sunlight, naked flames or heat.
- · Never look into the laser beam inside this device.
- Ensure that you always have easy access to the power cord, plug, or adaptor to disconnect this device from the power.

## Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment. Disposal of your old product




Your product is designed and manufactured with high quality materials and components, which

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point or recycling. By doing this, you help to preserve the

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are

## Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license. This apparatus includes this label:

CLASS 1 LASER PRODUCT



• The type plate is located on the back of the device.

# 安全

## 了解这些安全标志



此"闪电标志"表示设备中的未绝缘材料可能导致触电。 为了您家中每个人的安全,

"惊叹号"表示需要对某些功能多加注意,您应仔细阅读附带的说明书以防止出现操 作和维护问题。 警告: 为减少火灾或触电危险, 此设备应避免淋雨或受潮, 不得将装有液体的物体(

如花瓶)放在此设备上。 注意: 为防止触电, 请完成插入插头。 (对于具有极化插头的区域: 为防止触电, 请 将宽插片插入宽插槽。)

## 重要安全说明

- 遵循所有说明。
- 注意所有警告 不要在靠近水的地方使用本设备。
- 不要在手起小时起力及几乎发展。 只能使用于布进行清洁。 不要堵塞任何通风口。 按照制造商的说明进行安装。 不要在任何热源附近安装,如散热器、蓄热器、炉具或其它发热设备(包括功
- 所证电源线被踩踏或挤夹,特别是在插头、电源插座和设备电源线出口位置。 仅使用制造商指定的附件/配件。
- 仅使用制造商指定或随设备销售的手推车、支座、三脚架、支架或桌台。使用
- 手推车时,请小心移动载有产品的手推车/设备,以避免翻倒造成伤害。



- 在雷电天气期间或长期不用的情况下,请拔下本设备的电源插头。 所有维修均应由合格的维修人员来执行。 本设备有任何损坏时,如电源线或插头损坏,液体泼溅到或物体跌落到设备上,设备淋雨或受潮,无法正常运行,或
- 电池使用注意事项 为防止电池泄漏而造成人身伤害、财产损失或装置损坏,
  - 按照装置上标明的 + 极和 极, 正确安装所有电池。
  - 请勿混合使用电池(旧电池与新电池或碳电池与碱性电池,等等)。 不可将电池(电池组或安装的电池)置于高温环境,如阳光直射处、明火
- 等。 一若打資长期不用本装置,应取出电池。 切勿将设备暴露在漏水或溅水环境下。 不要将任何危险源放在本设备上(例如装有液体的物体、点燃的蜡烛)。
- 将电源插头或产品耦合器用作断开设备时,该断开设备应可以随时使用。 仅于海拔2000米以下地区使用该产品。



- 切勿拆下本设备的外壳。 • 切勿润滑本设备的任何部件
- 切勿将本设备放在其他电器设备上面。
- 应让本设备远离阳光直射、明火或高温。
- 切勿直视本设备内部的激光束。 • 确保始终可轻易地接触到电源线、电源插头或适配器,以便于将本设备从电源 上断开。

# 注意

如果用户未经 WOOX Innovations 的明确许可而擅自对此设备进行更改或修改,则可能 导致其无权操作此设备。 弃置旧产品



本产品采用可回收利用的高性能材料和组件制造而成。

弃置产品时,请不要将其与一般生活垃圾一同丢弃,应将其交给政府指定的回收中心 或回收。这样做有利于环保。

已省去所有不必要的包装。 我们努力使包装易于分为三种材料: 纸板(盒)、泡沫塑 料(缓冲物)和聚乙烯(袋 保护性泡沫片) 您的系统包含可回收利用的材料(如果由专业公司拆卸)。 请遵守当地有关包装材




料、废电池和旧设备的处理的规定。

本商品采用版权保护技术,受美国 专利和 Rovi Corporation 的其它知识产权保护。 禁 止反向工程或反汇编。

# Bluetooth

蓝牙® 字样和徽标均为 Bluetooth SIG, Inc. 所有,WOOX Innovations 对这些字样和徽标 的任何使用均属合法。 本装置包括此标签:





• 型号铭牌位于设备背面。

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance						
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
Housing 外壳	0	0	0	0	0	0	
Loudspeakers 喇叭单元	0	0	0	0	0	0	
PWBs 电路板组件	×	0	0	0	0	0	
Accessories (Remote control & cables) 附件(遥控器,电源 线,连接线)	х	0	0	0	0	0	

本表格依据SJ/T 11364的规定编制。

The table is compiled according to SJ/T 11364.

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。 O: Indicates that this toxic or hazardous substance contained in all of the homoge part is below the limit requirement in GB/T 26572.

×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.



This logo refers to the period ( 10 years ) 电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,电子信息产品用户使 用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period ( 10 years ) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.