




Philips
Car coaxial speaker

7" x 10" (18 cm x 26 cm)

5-way 550 W Peak

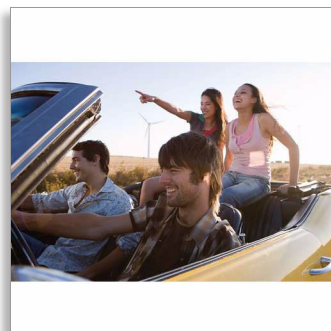

CSP7020

Your mobile music theatre

with 5-way stereo for powerful sound

Feel your music with the Philips Car stereo speakers CSP7020. These 18 x 26 cm 5-way speakers have peak power at 550 W, and feature an oval fibre-composite cone with a soft PEI dome tweeter so you can enjoy vivid music details and deep bass.

Powerful music on the road

- Fibre-composite cone delivers sound with lowest distortion
- Soft PEI dome tweeter for warm and textured tones
- Butyl rubber surround for maximum smooth response
- Strong ferrite magnet for high power performance
- 85 W RMS power handling

High durability, sustainable performance

- Stylish speaker grille protects against damage
- Endurance and performance stability in extreme conditions
- Sturdy fibre-composite cone for all-weather performance

Easy to use and install

- Simple wires plug-in for designated speaker terminals
- Fits perfectly in all 18 cm x 26 cm speaker openings

PHILIPS
sense and simplicity

Specifications

Loudspeakers

- Speaker type: Coaxial speaker
- Number of ways: 5-way
- Number of Loudspeakers: 2
- Speaker size: 18 x 26 cm (7 x 10")

Sound

- Output power (RMS): 85 W
- Impedance: 4 Ohms
- Frequency response: 26–33k Hz
- Sensitivity: 91 dB

Woofers

- Diaphragm: Cone
- Diaphragm material: Fibre-composite
- Surround: Rubber
- Voice coil: Single
- Voice coil material: Copper
- Magnet: Ferrite
- Damper: Conex
- Magnet mass: 22 oz

Mid-range

- Diaphragm: Cone
- Diaphragm material: Paper

- Magnet: Neodymium
- Size: 55 mm (2-1/6")

Tweeter

- Size: 25 mm (1")
- Diaphragm: Dome
- Diaphragm material: PEI
- Magnet: Neodymium

Supertweeter

- Diaphragm: Dome
- Diaphragm material: PEI
- Size: 15 mm (3/5")

Accessories

- Speaker grille: With metal net
- Quick start guide: English, Spanish, Portuguese, Russian, Chinese
- Cables: Speaker wires

Dimensions

- Mounting depth: 85
- Product dimensions (W x H x D):
282 x 85 x 214 mm



Issue date 2013-03-03

Version: 2.0.5

12 NC: 8670 000 65519
EAN: 69 23410 70356 6

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com