

Philips  
Blu-ray Disc/ DVD player

3D playback  
DivX Plus HD



BDP2180



# Enjoy the 3D experience at home

## With Blu-ray 3D

This Philips Blu-ray DVD player has stunning 3D effect and 1080p up-conversion provide the picture depth and action that leap off the screen and draw you deep into the viewing experience, even on DVD!

### Engage more

- Enjoy all your movies and music from CD and DVD
- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- EasyLink to control all HDMI CEC devices via a single remote
- Turn your Smartphone into a remote for Philips AV products
- SimplyShare to connect & stream all entertainment wirelessly
- USB 2.0 plays video/music from USB flash/hard disk drive

### Hear more

- Dolby TrueHD for high fidelity sound

### See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Full HD 1080p for razor sharp images
- Subtitle Shift for widescreen without any missing subtitles

# PHILIPS

Blu-ray Disc/ DVD player  
3D playback DivX Plus HD

# Highlights

## BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.


## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX

technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Dolby TrueHD

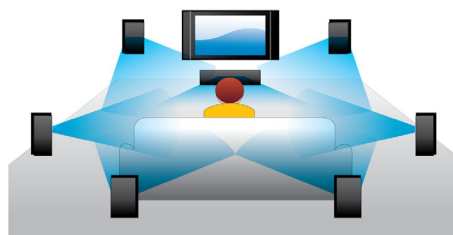

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

BDP2180/12

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Enjoy movies and music



Enjoy all your movies and music from CD and DVD

## Full HD 1080p



Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best possible TV picture quality available today - so prepare to feast your eyes.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- D/A converter: 12Bit/148MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- BD Region Code: B
- DVD Region Code: 2
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet, HDMI output

## Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Power

- Power consumption: 11 W
- Power supply: 220-230V, 50Hz
- Standby power consumption: < 1W

## Accessories

- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Product Registration Card, Quick start guide, Remote Control

## Dimensions

- Packaging (W x H x D): 420 x 90 x 303 mm
- Product (W x H x D): 310 x 40 x 203 mm
- Product weight: 1.25 kg
- Weight incl. Packaging: 2.0 kg

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 35,5 x 27,9 x 8,7 cm
- Gross weight: 1,56 kg
- Nett weight: 1,2 kg
- Tare weight: 0,36 kg
- EAN: 87 12581 67250 8

## Packaging dimensions

- Packaging type: Dummy
- Number of products included: 1
- Type of shelf placement: Dummy
- Packaging dimensions (W x H x D): 35,5 x 27,9 x 8,7 cm
- Gross weight: 1,56 kg
- Nett weight: 1,2 kg
- Tare weight: 0,36 kg
- EAN: 87 12581 67250 8

## Product dimensions

- Product dimensions (W x H x D): 31 x 3,95 x 21,7 cm
- Weight: 1,02 kg



Issue date 2015-08-07

Version: 3.0.7

12 NC: 8670 000 98909  
EAN: 87 12581 67250 8

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)