



Philips Fidelio  
wireless portable speaker

### Bluetooth®

USB port for charging  
Rechargeable battery  
20W, Stereo with bass radiator



P8BLK

## High-fidelity sound made portable

### Obsessed with sound

The Philips Fidelio wireless speaker is high performance and portable. It gives great, clear, dynamic sound and is perfect to use at home or on the go. With wireless music streaming via Bluetooth, it gives you fuss-free musical enjoyment.

#### Peerless sound quality

- Quality drivers deliver natural sound with deep bass
- High-performance amplifier for great loudness and dynamics
- 20 W RMS total output power

#### Designed to go places

- Premium design with aluminium finishing
- Built-in rechargeable Li-ion battery for playback anywhere
- Includes a pouch for protection during travel

#### Advanced versatility

- Wireless music streaming via Bluetooth
- USB port to charge any mobile device
- Battery level shows automatically when speaker is touched
- Audio-in for easy connection to almost any electronic device


**PHILIPS**  
Fidelio

Wireless portable speaker  
Bluetooth® USB port for charging, Rechargeable battery, 20W, Stereo with bass radiator

P8BLK/10

## Highlights

### Quality drivers

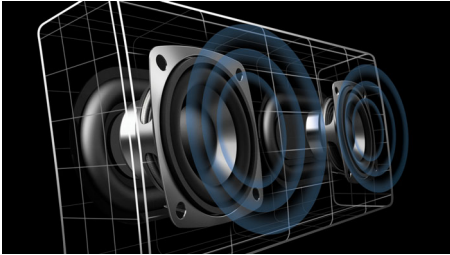

Despite a very compact acoustic volume, the bass is solid and surprisingly deep, making it possible to enjoy all types of music. This is achieved by using a combination of a high-power full-range woofer and one large area passive radiator per channel, all within a very stiff enclosure that does not lose any bass energy. The large moving mass of the passive radiator makes it possible to tune the system to a very low frequency of 80 Hz, while preventing air turbulence that would otherwise appear with a ported design. Feel the rhythm of the music — don't miss a beat.

### High-performance amplifier

Loudness and dynamics are great, thanks to a high-performance amplifier coupled with 4 high-efficiency transducers. The woofers have been tailored to this unique product and have a high force factor, resulting in sound that is dynamic and impressive at all listening levels. Music is lively, dynamic and simply enjoyable in any circumstances.


### Wireless music streaming



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient.


The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

### USB port

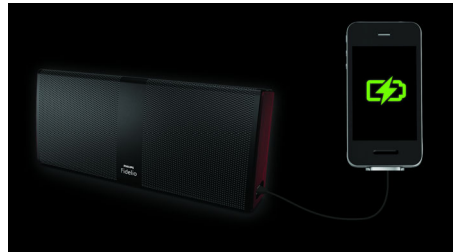

This speaker features a USB port. If your smartphone is running out of battery power either at home or on the go, this portable speaker allows you to transfer the battery power stored in the speaker to your mobile device.

### Battery level

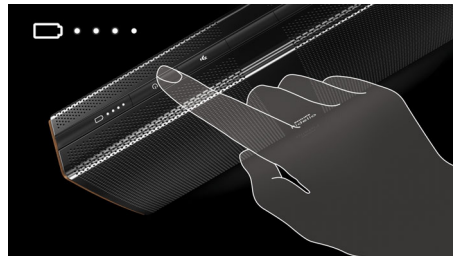

Just touch the speaker lightly and it will display the battery level.

## Specifications

### Compatibility

- iPad: iPad 1, iPad 2, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
- iPod touch: 3rd generation or later
- Android tablets and smartphones
- other Bluetooth-enabled device

### Loudspeakers

- Loudspeaker enhancement: wOOx Bass Radiator
- Speaker drivers: 2 x 2.5" full-range woofer
- Output power (RMS): 20 W

### Accessories

- Included accessories: AC-DC Adapter, Quick install guide, Warranty certificate, World Wide Warranty leaflet

### Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- USB charging

### Dimensions

- Product dimensions (WxDxH): 287 x 63 x 127 mm
- Packaging dimensions (WxDxH): 326 x 101 x 224 mm

### Power

- Power supply: 100-240 VAC, 50/60 Hz
- Battery type: Li-ion (built-in)
- Operating time on battery: 8 hr



Issue date 2014-07-18

Version: 6.0.6

12 NC: 8670 000 96395  
EAN: 08 71258 16628 51

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)