



Philips
Original radio mini

with Lightning connector
for iPod/iPhone
FM, dual alarm
4W



ORD2105B

Set the trend with the Original Radio mini

Enjoy all your music and the appealing retro design of the Philips Original radio mini. Play from your iPod/iPhone, while the radio charges and auto synchronizes its clock with your Apple device.

Enrich your sound experience

- Fast charging and play music via Lightning connector
- FM digital tuning
- Bass Reflex Speaker System delivers a powerful, deeper bass

Easy to use

- Auto sync time via iPod/iPhone dock with Lightning connector
- Dual alarm to wake you and your partner at different times
- Gentle wake for a pleasant wake up experience
- Sleep timer for easy falling asleep to your favorite music
- Audio-in for easy portable music playback

Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

PHILIPS

Original radio mini
with Lightning connector for iPod/iPhone, FM, dual alarm, 4W

ORD2105B/12

Highlights

Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to work about the battery running out.

FM digital tuning



FM digital tuning

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the

woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Auto sync time


Auto sync time via iPod/iPhone dock with Lightning connector

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Dual alarm

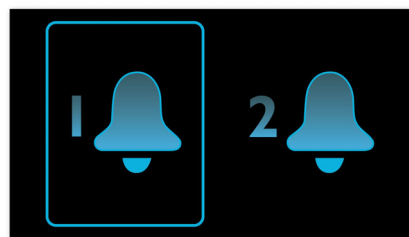

The Philips audio system comes with two alarm times. Set one alarm time to wake you

up and the other time to wake up your partner.

Gentle wake



Start your day right by waking up gently to a gradually escalating alarm volume. Normal alarm sounds with a preset volume are either too low to wake you up or are so uncomfortably loud that you are rudely jolted awake. Choose to wake up to your favorite music, radio station or buzzer alarm. Gentle wake's alarm volume gradually increases from subtly low to reasonably high in order to gently rouse you.

Sleep Timer



Sleep timer lets you decide how long you want to listen to music or a radio station of your choice before falling asleep. Simply set a time limit (up to 2 hours) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch off to a power-efficient, silent stand-by mode. Sleep Timer lets you fall asleep to your favorite CD or radio DJ without counting sheep or worrying about wasting power.



Original radio mini
with Lightning connector for iPod/iPhone, FM, dual alarm, 4W

Specifications

iPhone compatibility

- via Lightning connector: iPhone 5, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE

iPod compatibility

- via Lightning connector: iPod nano 7th generation, iPod touch 5th generation

Audio Playback

- Playback mode: Charging iPod, Charging iPhone

Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: (FM) 87.5-108 MHz
- Auto digital tuning

Alarm

- No. of alarms: 2
- Alarm source: Dock, FM radio, Buzzer
- Snooze (repeat alarm): Yes, 9mins
- Sleep timer: 15/ 30/ 60/ 90/ 120 mins

Connectivity

- Audio in (3.5mm)

Convenience

- Display Type: LCD white
- Display brightness: High/ Mid/ Low

Sound

- Sound System: Mono
- Volume control: rotary (digital)

Loudspeakers

- Built-in speakers: 1

Power

- Power type: AC input

Dimensions

- Product dimensions (WxDxH): 245 x 133 x 122 mm
- Packaging dimensions (WxDxH): 336 x 158 x 183 mm

Accessories

- Included accessories: User Manual, Warranty certificate



Issue date 2016-07-03

Version: 5.0.6

12 NC: 8670 001 00367
EAN: 08 71258 16782 41

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com