




Philips
Mini Hi-Fi System

3-CD changer, MP3-CD

USB Direct
FM
550W, 2.1 system

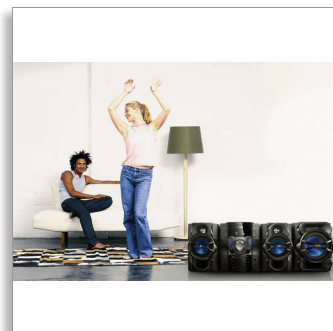

FWM6000

Powerful, clear and magnificent sound

Obsessed with sound

The FWM6000 pumps up the power in music with 550W RMS and 7500W PMPO power output. A subwoofer delivers rich bass notes, while UniSound offers clear and natural sound. Also enjoy music directly from USB devices and portable music players.

Powerful sound you can hear and feel

- Subwoofer for powerful bass
- MAX Sound for instant power boost
- Dual amplifier for better sound performance
- UniSound for natural and crystal-clear sound
- 7500W PMPO/ 550W RMS total output power

Multiple source MP3 music

- Compatible with MP3-CD
- Enjoy MP3 music directly from your portable USB devices
- Rip music from CDs, radio and karaoke onto USB device
- MP3 Link for portable music playback
- Optional dock for convenient playback from your iPod/iPhone

Convenient and easy to use

- 3-disc changer for convenient multi-disc playback
- Digital tuning with preset stations for extra convenience

PHILIPS

Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is


also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

3-disc changer



With a three-disc changer for music playback, you can choose between three different CDs inside the device at any one time. This convenient feature allows you to savor a variety of music while saving you precious time from changing CDs frequently.


UniSound

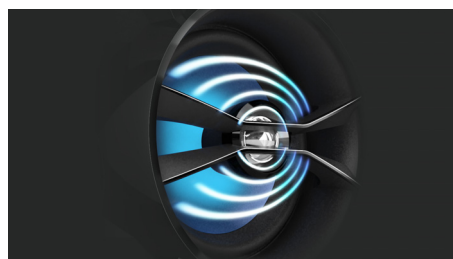

Get ready for music that is undeniably clearer and more natural. The UniSound technology harnesses acoustic design and engineering expertise to deliver sound the way it was meant to be heard. In conventional speakers, the tweeter and woofer deliver sound from

different locations. This creates strong interferences that distort sound, resulting in unnatural, flat and stifled audio. UniSound frees music by placing the tweeter and woofer in unique positions and incorporating rigorous crossover engineering, vastly reducing interference and delivering natural sound that is true to the original.

Rip music onto USB device

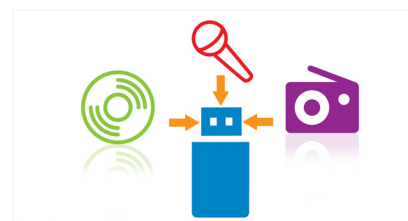

Rip music from CDs, radio and karaoke onto USB device

Optional dock



Attach this dock to your home theater system and you can enjoy your music, videos and pictures from your iPod devices and iPhone. Dock is sold as an optional accessory.

Specifications

Sound

- Total Sound Power (RMS): 550 W
- Sound enhancement: MAX sound, Dynamic Bass Boost 3 steps, incredible surround, digital sound control 4 modes, virtual ambience control, UniSound
- Output power: 7500W PMPO

Loudspeakers

- Number of speaker boxes: 3
- Speaker drivers: 2" tweeter, 3 way, 5.25" woofer
- Subwoofer types: 8" woofer, passive
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: repeat/one/all/program, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

Audio recording

- USB recording modes: instant record, programmed tracks, schedule radio program, single disc, single track
- USB recording sources: AUX, CD, microphone in, tuner
- Recording media: USB device

Tuner/Reception/Transmission

- Station presets: 40
- Tuner bands: MW, FM
- Antenna: FM antenna, MW antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

Connectivity

- USB: USB host

- MP3 Link: 3.5mm stereo line in
- Microphone: Microphone socket
- PC in (Aux in): 2xRCA (Audio)

Convenience

- Alarms: CD alarm, USB alarm, radio alarm
- Number of discs: 3
- Loader type: 3 CD carousel
- Clock: on main display, sleep timer
- Display type: LCD display
- Karaoke: MIC volume, echo control

Accessories

- Remote control: 28-key with 2xAAA batteries
- Cables/Connection: MP3 Link cable, *Flat pin adaptor
- Others: batteries for remote control, FM/MW antenna, Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 25 kg
- Main speaker dimensions (W x D): 200 x 314 mm
- Main speaker height: 320 mm
- Subwoofer width: 250 mm
- Subwoofer depth: 465 mm
- Subwoofer height: 330 mm
- Main unit width: 265 mm
- Main unit depth: 380 mm
- Main unit height: 322 mm
- Packaging width: 1030 mm
- Packaging depth: 553 mm
- Packaging height: 413 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2014-06-12

Version: 2.0.4

12 NC: 8670 000 87039
EAN: 87 12581 63461 2

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel
because this may damage your hearing.