

Philips
DVD player with USB

DivX

DVP3252



Straight from USB to TV

With Hi-Speed USB 2.0 Link

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- High-quality outputs for analogue and digital audio
- Progressive Scan component video for optimised image quality

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays media from USB flash drives

Easy to use

- Create MP3s directly from CDs

Plays all your movies and music

- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- DivX Certified for standard playback of DivX videos

PHILIPS
sense and simplicity

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: >90
- Distortion and Noise (1 kHz): >65 dB
- Crosstalk (1 kHz): >70 dB
- Dynamic Range (1 kHz): >80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-

- R/RW, Picture CD, Kodak Picture CD
- Picture compression format: JPEG
- Picture enhancement: Flip photos, Rotate, Zoom, Slideshow

Multimedia Applications

- Playback Formats: DivX, JPEG Still pictures, MP3

Connectivity

- Rear Connections: Analogue audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English

Power

- Power consumption: < 10 W
- Power supply: 50 Hz, 230-240 V
- Standby power consumption: < 1 W

Accessories

- Included Accessories: 2 x AAA Batteries, Remote Control, User manual, Audio/Video cable, World Wide Warranty leaflet


Dimensions

- Packaging dimensions (W x H x D): 415 x 82 x 282 mm
- Set dimensions (W x H x D): 360 x 37 x 209 mm



Highlights

Plays it all

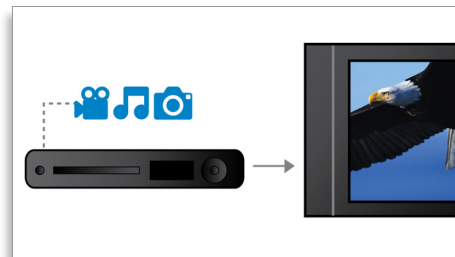


Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

192 kHz/24-bit audio DAC


192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Progressive Scan

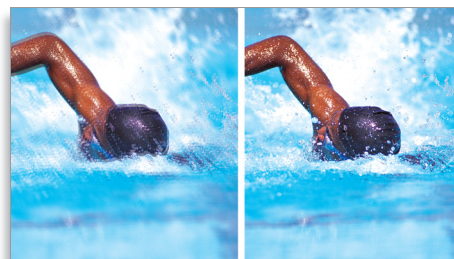

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Create MP3s

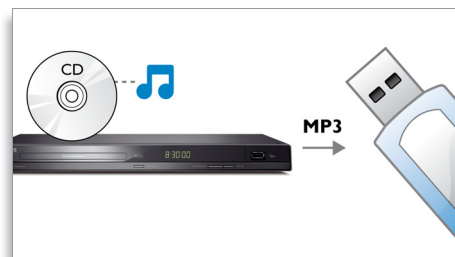

Convert the contents of your favourite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.



Issue date 2009-04-22

Version: 1.0.10

12 NC: 8670 000 36014
EAN: 87 12581 38689 4

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com