



Philips
HD camcorder



CAM200WH



Simply swipe your great moments to your TV or the Web

via built-in Wi-Fi

The Philips ESee CAM200 lets you take videos and photos with ease, and brings sharing to a whole new level of simplicity. Swipe on the 3" touchscreen to share your shots on your TV or on the Internet—instantly, wirelessly.

Take quick and easy videos in full HD quality

- Relive memories in great detail with full HD videos
- Up to 10 megapixel resolution for high quality photos
- 3" touch-screen for smooth and intuitive control
- Shoot clearer and steadier videos with advanced anti-shake
- Flash, auto focus, face and smile detection

Swipe to share your favourite moments wirelessly

- Built-in Wi-Fi for sharing without wires or a PC
- Swipe to share videos or photos on your TV
- Direct Wi-Fi upload to Facebook, YouTube and Twitter without a PC
- Wirelessly save your videos and photos on your computer
- Go Live for wireless video broadcast to website via UStream


Bring it with you anywhere

- Small and slim design to fit easily into your pocket
- Extra long battery life lets you shoot more

PHILIPS
sense and simplicity


Highlights

Full HD (1080p) videos

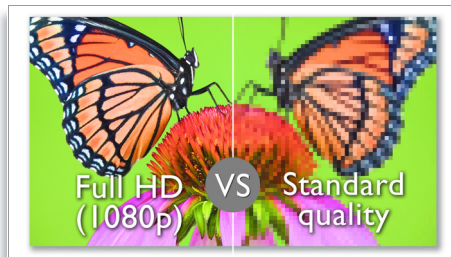

Capture and enjoy videos in full high definition quality (full HD 1080p). "1080" refers to the display resolution in terms of the number of horizontal lines on screen. "p" stands for progressive scan, or the sequential appearance of the lines in each frame. 1080p gives video quality that is superior to that found in typical mobile phones and digital cameras. In addition, the camcorder uses the same video format as Blu-ray players and discs — H.264. This highly sophisticated format delivers superb HD picture quality, letting you savour crystal clear memories on video.

Advanced anti-shake

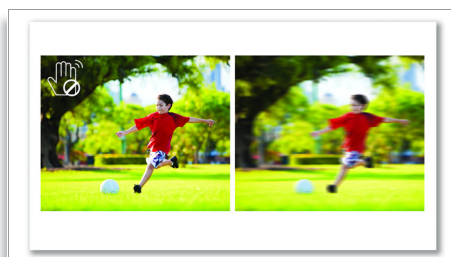

Advanced anti-shake lets you take great videos that you will always be proud to share. Steady and undistorted videos are ensured by gyro sensors that are armed with advanced algorithms. The sensors take measurements of the distance between the ground and the camera lens, and make the necessary corrections whenever the camcorder wobbles. This advanced technology gives you blur-free pictures every time, letting you capture the best moments in life in amazing videos.

Built-in Wi-Fi

The camcorder has built-in Wi-Fi, letting you share your photos and videos instantly—

without a computer and without wires. The camcorder connects wirelessly to Philips SimplyShare devices and DLNA compatible TVs, Blu-ray players, network media players, home cinema systems and photo frames, letting you enjoy your favourite moments on a bigger screen. You can also upload your shots and footage onto Internet sites, with easy-to-use built-in applications for Facebook, Twitter, YouTube and Picassa. Philips ESee makes sharing truly simple.

SimplySwipe



Simply swipe on the ESee camcorder's touchscreen to share photos and videos. As you browse through pictures and footage on your camcorder, you can decide what to share by simply swiping across the shot. Watch your favourites directly on your Philips SimplyShare devices or DLNA compatible TVs, Blu-ray players, network media players and home cinema systems. You can even swipe and share your shots on Philips photo frames and tablets.

Instant upload to Facebook



Uploading directly from the camcorder to Internet sites like YouTube, Facebook, Twitter and Picassa is easy—all you have to do is swipe on the camcorder's touchscreen to share photos and videos with the selected social network and they will be uploaded wirelessly.

Go Live



Broadcast events live with the Esee camcorder, and share all that is happening, as it's happening. All you have to do is establish a Wi-Fi connection and select 'Go Live'. What you are recording will then start streaming onto the UStream website, where it can be viewed by family and friends wherever they are. Let loved ones take part in your experiences and share all of life's greatest moments as they take place.

Up to 10 megapixel photos



Up to 10 megapixel resolution for high quality photos

3" touch-screen



3" touch-screen for smooth and intuitive control

Specifications

Video Quality

- Resolution: Full HD (1920 x 1080p) at 30 fps, HD (1280 x 720) at 30 fps, Sport Mode (1280 x 720p) at 60 fps
- Photo Resolution: 10 MP, 8 MP
- Formats: H.264 video compression, MP4 files format, AAC Audio compression, Still: JPEG
- Scene Mode: Fine-Skin, Back-light, Night, Snow/Beach, Sunset, Auto
- Effects: Black and White, Negative, Normal, Sepia, Analogue, Colour filter, Seventies
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Lens and Sensor

- Lens: Auto Focus (0.1 m to infinity)
- Aperture: F2.8
- Zoom: Fast multi-step 5x digital
- Sensor: 1:3.2 inch, 8 MP CMOS sensor

Camcorder features

- SimplySwipe: to share videos or photos on your TV, digital photo frame or Internet
- Enhancement: Autofocus, Face tracking, Smile detection
- Flash Light: LED Flash for dark environment
- 3 Second Pre-Recording
- Power-up Time: 2 seconds
- Auto Shut-Down: 3 minutes
- Tripod Mount

Wireless Sharing

- Wi-Fi: 802.11b/g/n Wi-Fi
- SimplyShare: compatible with DLNA devices
- Go Live: live broadcasting to online site UStream
- Social media sharing: Facebook, Picasa, Twitter, YouTube

Battery

- Type: Li-Ion Battery
- Life: 120 Minutes
- Charge Time: 3 hrs. via adapter, 4 hrs. via computer USB

Philips Arcsoft software

- Easy Sharing: direct upload to Facebook, direct upload to YouTube, upload button for email, upload button for websites
- Video Editing: add titles, music and credits, create movies, cut video

Display

- 3 inch LCD (diagonal)
- 960 by 240 pixel resolution

Capacity

- Recording Media: Micro SD Card (up to 32 GB)
- Recording Time: 1 hour @ 4 GB for Full HD, 1 hour @ 2 GB for HD, 2 hours @ 1 GB for SD

Input and Output

- TV Out: HDMI
- USB: Mini-USB port
- Audio-out: via HDMI
- Speaker: Built-in Speaker
- Microphone: Stereo directional microphone

Dimensions

- Product dimensions (W x H x D):
107 x 54 x 19.5 mm

Minimum Requirements

- Windows: 1 GB RAM and 64 MB Video RAM, PENTIUM 4 - 2.8 GHz processor, Internet Explorer 6.0, Windows 7, Windows Vista, Windows XP
- MAC: MAC 1.66 GHz Intel Core Duo, MACINTOSH 10.4, MACINTOSH 10.5, MACINTOSH 10.6, Safari 1.1
- Other: 300 MB free hard disc space, USB v1.1, 1024 x 768 display resolution

Accessories included

- USB cable
- Wrist Strap
- Soft protective case
- Quick Start Guide
- Philips Arcsoft Software: .



Issue date 2013-04-08

Version: 2.3.8

12 NC: 8670 000 84719
EAN: 87 12581 62574 0

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com