

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

PET739



---

EN	User manual	3
ZH-CN	用户手册	25

---

**PHILIPS**

# Contents


---

<b>1</b>	<b>Important</b>	4
	Important safety instructions	4
	Notice	6
<hr/>		
<b>2</b>	<b>Your portable DVD player</b>	8
	Introduction	8
	What's in the box	9
	Overview of the main unit	10
	Overview of the remote control	12
<hr/>		
<b>3</b>	<b>Get started</b>	14
	Charge the battery	14
	Install remote control battery	15
	Connect additional equipment	16
<hr/>		
<b>4</b>	<b>Play</b>	17
	Turn on	17
	Select OSD language	17
	Play discs	17
	Play from USB	18
	Play options	18
<hr/>		
<b>5</b>	<b>Watch TV</b>	20
	Setup your TV	20
<hr/>		
<b>6</b>	<b>Adjust settings</b>	21
<hr/>		
<b>7</b>	<b>Product information</b>	22
<hr/>		
<b>8</b>	<b>Troubleshooting</b>	23

# 1 Important

---

## Important safety instructions

- ① Read these instructions.
  - ② Keep these instructions.
  - ③ Heed all warnings.
  - ④ Follow all instructions.
  - ⑤ Do not use this apparatus near water.
  - ⑥ Clean only with dry cloth.
  - ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - ⑩ Only use attachments/accessories specified by the manufacturer.
  - ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
  - ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
  - ⑭ Apparatus shall not be exposed to dripping or splashing.
  - ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

- 16 This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).



## Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

## Hearing safety

### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

### Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.

- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



## Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

---

## Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

### Environmental information


All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

---

## Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

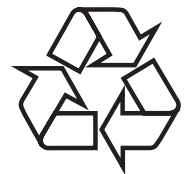

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



Always bring your product to a professional to remove the built-in battery.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.



RMVB is a trademark or a registered trademark of RealNetworks, Inc.



**This apparatus includes this label:**



## 2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---









### Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up).

You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can restrict the play of discs that are not suitable for children.

You can play the following discs and files on the DVD player (including CD-R, CD-RW, DVD±R, DVD±RW and RMVB):

---

	DVD-Video
	Video CD
	
	Audio CD
	MP3 CD
	DivX
 JPEG	Discs with JPEG files
	RMVB (RealMedia Variable Bitrate)

---


## What's in the box

Check and identify the contents of your package:

- Portable DVD player
- Remote control
- AC power adaptor
- Car adaptor
- AV cable
- Antenna
- User manual
- Quick Start Guide




# Overview of the main unit

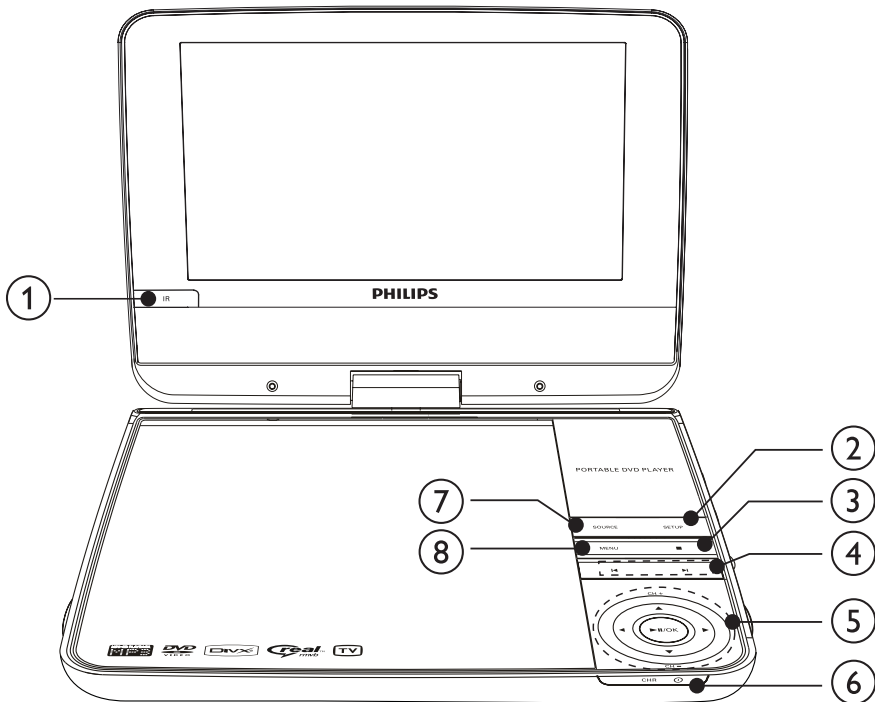

- 1 **IR**
  - Remote control sensor.
- 2 **SETUP**
  - Accesses or exits the setup menu.
- 3 **■**
  - Stops disc play.
- 4 **⏮/⏭**
  - Skips to the previous or next title, chapter, or track.
- 5 **▲ (CH+), ▼ (CH-), ◀, ▶**
  - Navigates through the menus.**▲ (CH+), ▼ (CH-)**
  - Switches to the next or previous channel.**◀, ▶**
  - Searches backward/forward at different speeds.**▶||/OK**
  - Confirms an entry or selection.
  - Starts, pauses or resumes disc play.
- 6 **CHR/Ⓚ**
  - Charging indicator / Power indicator.
- 7 **SOURCE**
  - Switches between DVD, USB, and TV.

## 8 MENU

- For DVD, accesses or exits disc menu.
- For VCD, turns on or off PBC (Playback Control) mode.
- For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.
- For TV, turns on the TV setup menu.
- For data disc, it goes to the file manager screen.

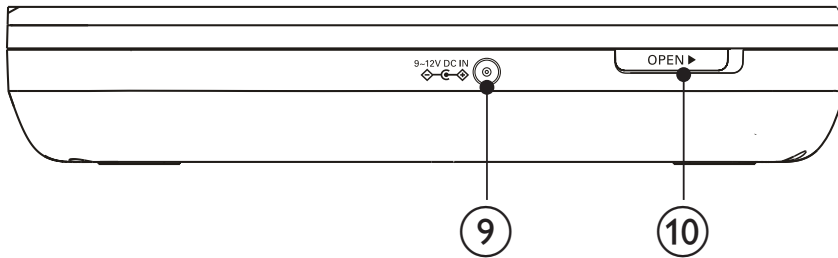


## 9 DC IN

- Power supply socket.

## 10 OPEN ►

- Opens the disc compartment.

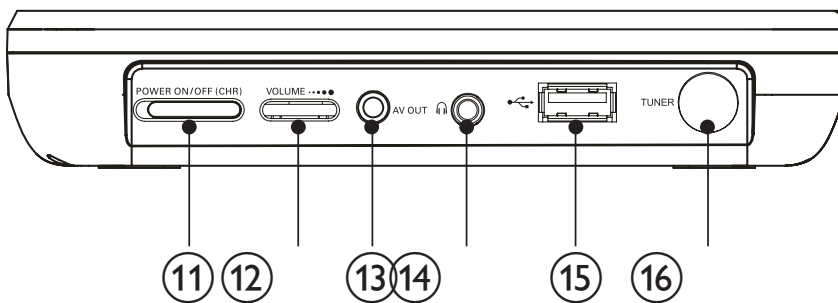

## 11 POWER ON/OFF

- Turns on/off DVD player.

## 12 VOLUME .....>

- Increases or decreases volume.

## 13 AV OUT

- Audio/video output jack.

## 14

- Headphone jack.


## 15

- Connects USB device.

## 16 TUNER

- Antenna jack.

# Overview of the remote control

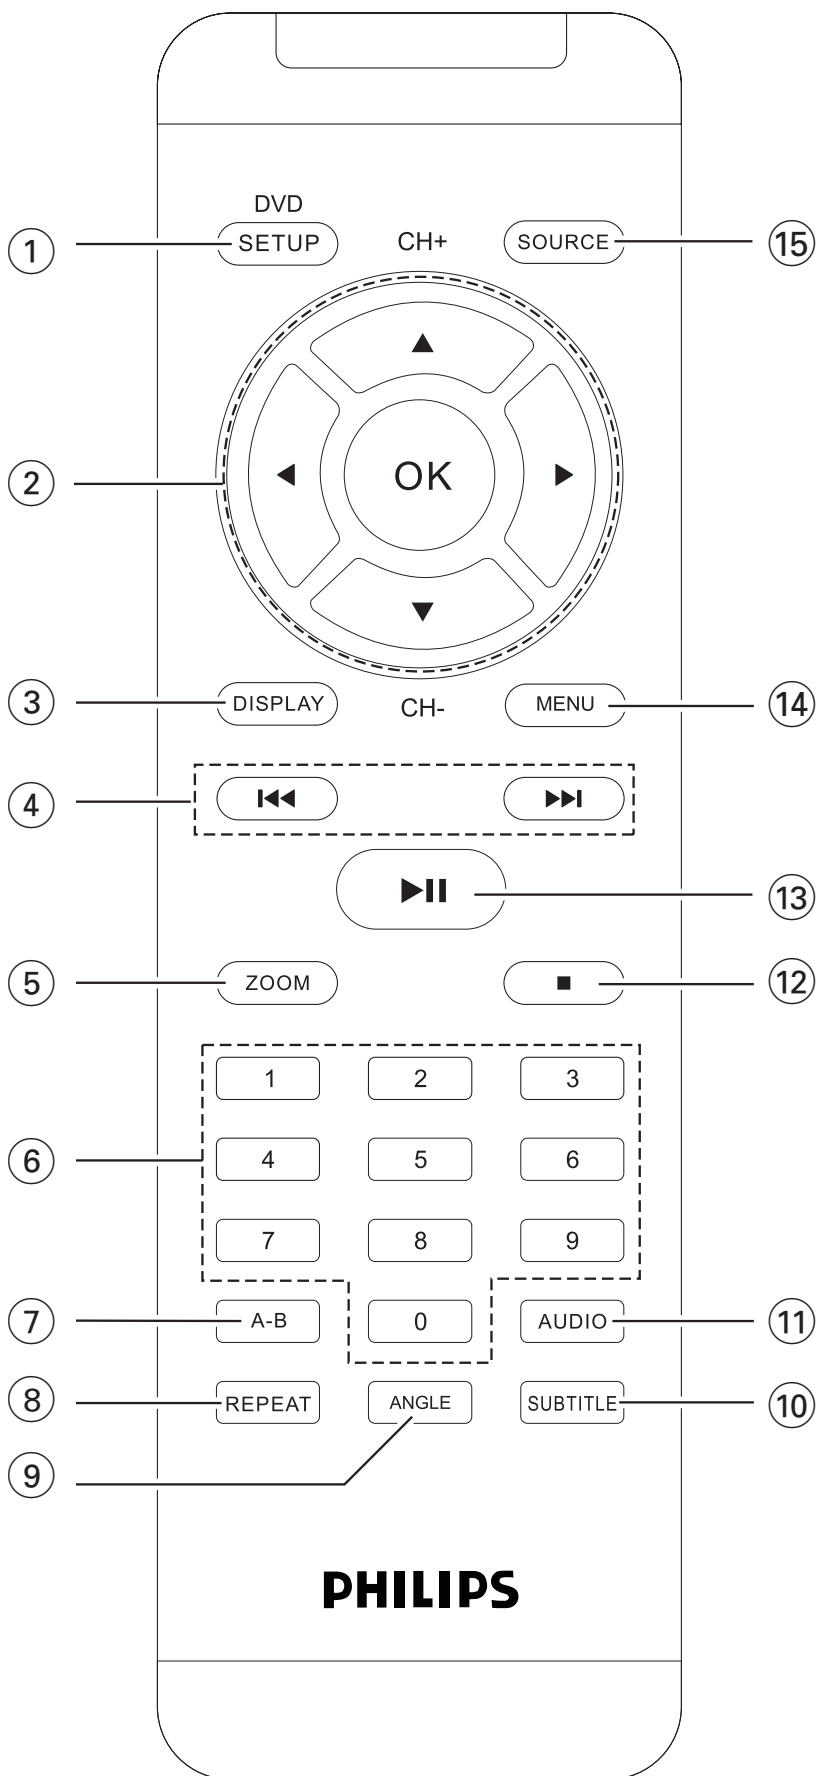

- ① **SETUP/DVD**
  - Accesses or exits the setup menu.
- ② **▲ (CH+), ▼ (CH-), ◀, ▶**
  - Navigates through the menus.
- ▲ (CH+), ▼ (CH-)**
  - Switches to the next or previous channel.
- ◀, ▶**
  - Searches backward/forward at different speeds.
- ▶||/OK**

Confirms an entry or selection.

  - Accesses or exits the channel list.
- ③ **DISPLAY**
  - Adjusts the display value of the system.
- ④ **⏮, ⏭**
  - Skips to the previous or next title, chapter, or track.
- ⑤ **ZOOM**
  - Zooms in or out of the picture.
- ⑥ **0-9**
  - Numeric keypad.
- ⑦ **A-B**
  - Marks the section for repeat play.
- ⑧ **REPEAT**
  - Repeats a chapter/track/title.
- ⑨ **ANGLE**
  - Selects a different viewing angle of a DVD.
- ⑩ **SUBTITLE**
  - Selects DVD subtitle language.
- ⑪ **AUDIO**
  - For DVD, selects an audio language.
  - For VCD, selects an audio mode.
- ⑫ **■**
  - Stops disc play.
- ⑬ **▶||**
  - Starts or resumes disc play.
- ⑭ **MENU**
  - Accesses or exits the disc/TV menu.
- ⑮ **SOURCE**
  - Switches between DVD, USB, and TV.

# 3 Get started



## Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Charge the battery



## Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



## Note

- The type plate is located on the bottom of the player.
- You can only charge the battery when it is in power-off mode.

- 1 Slide the **POWERON/OFF** switch to **OFF** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

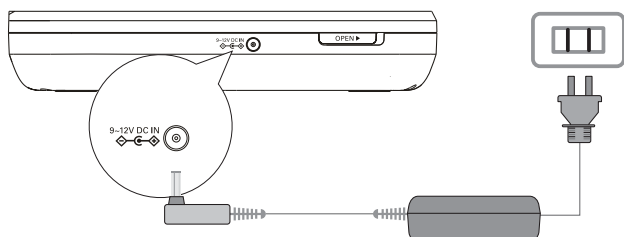

- ↳ The charge indicator turns on. It takes less than 6 hours to fully charge the battery.

↳ When the battery is fully charged, the charge indicator turns off.

## Install remote control battery



### Caution


- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### For first-time use:

**1** Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

- 1** Open the battery compartment.
- 2** Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3** Close the battery compartment.

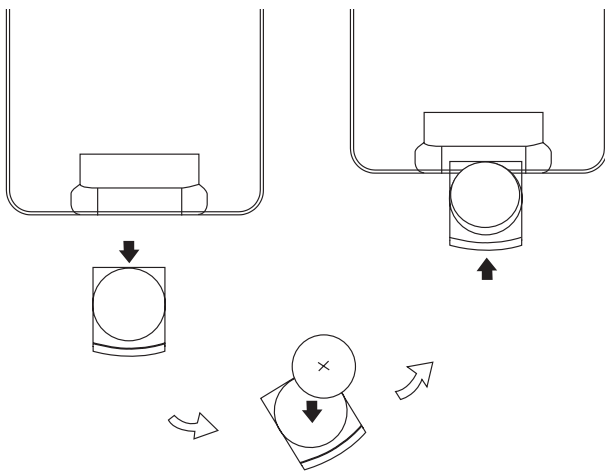

---

# Connect additional equipment

---

## Connect a TV




### Caution

- Turn off your player before connecting to any additional equipment.

You can connect the player to a TV to enjoy DVD.


- Match the color of the AV cables (not supplied) with the jacks: the yellow cable is for the yellow video jack, the red/white cable is for the red/white audio jacks.

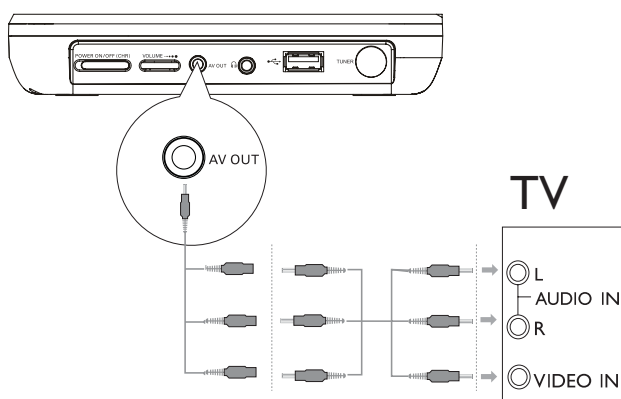

---

## Connect TV antenna

You can connect your player to the supplied antenna or home antenna to receive digital TV program.

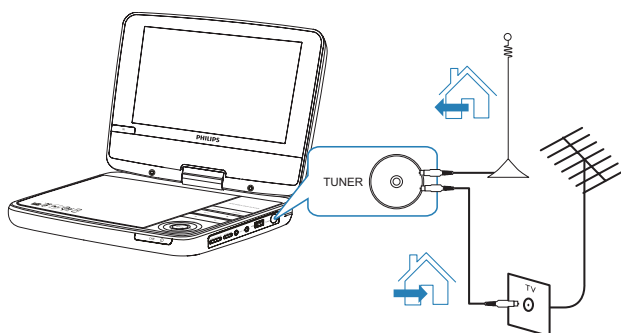

- 1 Fix the antenna to the vacuum cup.
- 2 Connect the antenna to the **TUNER** jack.



## Tip

- Fully extend the antenna for better reception.
- The vacuum cup can be fixed onto any flat surface for your convenience.

# 4 Play

---

## Turn on

Slide the **POWERON/OFF** switch to the **ON** position.


↳ The **Ⓜ** indicator turns on.

---

## Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **SETUP**.  
↳ The setup menu appears.

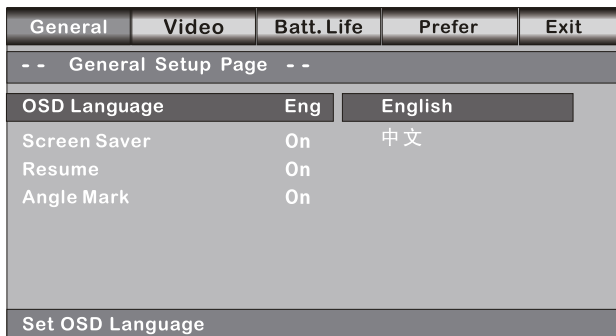

- 2 Go to [-- General Setup Page --] > [OSD Language].
  - 3 Press **▶** to select an option.
  - 4 Press **▶|||/OK** to confirm.
  - 5 Press **SETUP** to exit.
- 

## Play discs

- 1 Press **SOURCE** to switch to DVD mode.
- 2 Slide **OPEN▶** on the player.
- 3 Insert the disc with label side facing up.



- 4 Push down to close the disc compartment.  
↳ Play starts automatically. If not, press ►||/OK.
  - If a menu appears, select an item, then press ►||/OK to start play.
  - To pause, press ►||/OK. Press again to resume play.
  - To stop, press ■ twice.
  - To select the previous/next item, press ◀ or ▶.
  - To start search within video/audio, press ◀/▶ once or more.

---

## Play from USB

This player plays/views RMVB, DivX, VOB, MP3, or JPEG files that are stored on USB devices.

- 1 Press **SOURCE** to switch to USB mode.
- 2 Connect the USB device to the player.  
↳ The content menu appears.
- 3 Select a file, then press ►||.  
↳ Play starts.
- 4 To stop play, press ■ or remove the USB device.

---

## Play options

---

### Select audio language

For DVDs that contain two or more audio languages.

- During play, press **AUDIO** repeatedly until the language is selected.

---

### Select subtitle language

For DVDs that contain two or more subtitle languages.

- During play, press **SUBTITLE** repeatedly until the language is selected (not available for RMVB files).

---

## Repeat

- During play, press **REPEAT** repeatedly to select different repeat options.



### Tip

- For VCDs, if PBC is on, you cannot repeat items.

---

## Repeat a section

You can repeat a specific section of audio/video within a title/chapter/track (repeat A-B).

- 1 During play, at the chosen start point, press **A-B**.  
↳ **[↻ A]** is displayed.
- 2 At the chosen end point, press **A-B** again.  
↳ **[↻ AB]** is displayed.  
↳ The selected section plays repeatedly.
- 3 Press **A-B** to cancel.

---

## Zoom

For DVDs, VCDs and JPEG CDs, you can zoom in and out for video images or pictures.

- 1 Press **ZOOM** repeatedly to zoom in and out.
- 2 When the video image or picture is enlarged, press **▲, ▼, ◀, ▶** to pan through it.

---

## Rotate pictures

For JPEG CDs only. While the JPEG is displayed:

- Press **◀** to rotate counter-clockwise.
- Press **▶** to rotate clockwise.
- Press **▲** to flip up/down.
- Press **▼** to flip left/right.

# 5 Watch TV



## Note

- Before you start, ensure that you have connected the antenna to the player.
- Make sure you are in an area with sufficient signal coverage. You can check the signal coverage with the TV broadcast authority of your country or visit [www.philips.com/support](http://www.philips.com/support).

---

## Setup your TV

- 1 Press **SOURCE** to select TV mode.
- 2 Press **MENU**.
  - ↳ The TV menu is displayed.

TV Menu	
Auto Search	Start
TV System	AUTO
TV Sound	DK
Fine tune	..... .....
Del. Channel	

- 3 Press **▲/▼** to switch to an item.
- 4 Press **◀/▶** to select an option.
- 5 Press **▼** to switch to **Auto Search**, and press **▶** to start.
  - ↳ Auto search starts.
  - ↳ All available TV channels will be searched and stored.
    - To watch another channel, press **▲/▼**.
    - To delete a channel, switch to the channel, and select **Menu > Del . Channel**.



## Tip

- For users in Mainland China, select **PAL** for **TV System** and **DK** for **TV Sound**.
- For users in Hongkong and Shenzhen, select **PAL** for **TV System** and **I** for **TV Sound**.

## 6 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press **SETUP**.  
↳ The setup menu is displayed.
- 2 Press **▲▼** to select an option and press **▶||/OK** to confirm.

[-- General Setup page --]	
[OSD Language]	Select on-screen display language.
[Screen Saver]	Activate/deactivate screen saver.
[Resume]	Select whether to start play from the point where it was last stopped.
[Angle Mark]	Select angle mark display options.
[-- Video Setup Page --]	
[Brightness]	Adjust screen brightness.
[Contrast]	Adjust screen contrast.
[Screen Display]	Select display aspect ratio.
[System Type]	Select video output format to TV system.
[-- Battery Life Setup Page --]	
[LCD Backlight]	Adjust the default brightness level of screen backlight.
[-- Preference Page --]	
[Audio]	Select audio language.
[Subtitle]	Select subtitle language.
[Disc Menu]	Select disc menu language.
[Parental]	Select parental level.
[Password]	Change password (3308 by default).
[DivX(R) VOD]	Get DivX registration code.
[Default]	Restore original settings.

- 3 Press **◀** to go back to previous menu level.
- 4 Press **SETUP** to exit.

# 7 Product information



## Note

- Product information is subject to change without prior notice.

Dimensions	200 × 160 × 43 mm
Weight	0.9 kg
Power supply	Input: 100-240V 50/60Hz 0.3A Output: DC 9V 1.5A
Power consumption	9 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video system	NTSC & PAL
Frequency response	20Hz-20KHz ± 3dB
Signal/noise ratio	≥ 80 dB
Audio distortion + noise	≤ -80 (1KHz)
Channel separation	≥ 80 dB
Dynamic range	≥ 80 dB
Audio out (analog audio)	Output level: 2V ± 10%
RMVB	Video: peak bit-rate 4Mbps Audio: Real 8(COOK, 96Kbps), Real 10(AAC mp4)
Load impedance	10 KΩ
Video out	Output level: 1V <sub>p-p</sub> ± 20%
Load impedance	75 Ω

# 8 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

### No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

### No sound

- Ensure that the AV cable is connected correctly.

### No response to the remote control

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

### Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

**No response to operating commands**


- The operation is not permitted by the disc.

**The player feels warm**

- When the player is in use for a long period of time, its surface will be heated. This is normal.

**No/weak signal displayed on the screen**

- TV signal is too weak or out of TV signal covering area.
- Make sure you are in an area with sufficient coverage.
- Receiving TV in a driving car may cause signal problems.

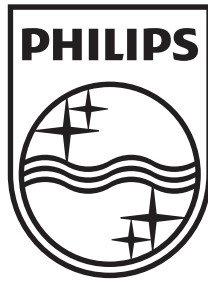

© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

PET739\_93\_UM\_V1.2

