

Philips
CD Soundmachine with
Dynamic Bass Boost

DAB
CD

AZB500B



Enjoy music wherever you go

Bring big sound out with you for music on the go with this portable stereo system equipped with DAB, FM radio and multi-type CD playback

The ultimate listening experience

- DAB+, DAB and FM for full radio experience
- Play CD, CD-R and CD-RW discs

Easy to use

- 20-track CD programmable
- CD Shuffle/Repeat for personalized music enjoyment
- Audio-in for easy portable music playback

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

PHILIPS

Highlights

DAB+, DAB and FM


DAB+/DAB (Digital Audio Broadcasting) digital radio is, on top of FM analog transmission, a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear and crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can be found. With DAB+ or DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no returning on the move.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

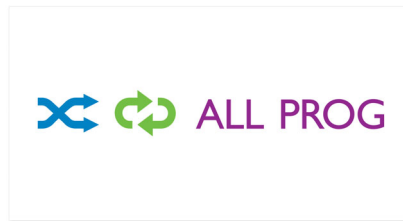

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Specifications

Audio Playback

- Loader Type: Top
- Playback Media: CD, CD-R, CD-RW
- Disc Playback Modes: Fast Forward/Backward, Next/Previous Track Search, Repeat Play, Shuffle Play
- Programmable Tracks: 20

Tuner/Reception/Transmission

- DAB/DAB+: Info display, Menu, Smart scan
- Tuner Bands: FM Stereo
- RDS: Program Type, Radio Text, Station Name
- Antenna type: Telescopic

Sound

- Output power (RMS): 2 X 1W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 3"
- Volume Control: rotary

Loudspeakers

- Built-in speakers: 2

Convenience

- Display Type: LCD

Connectivity

- 3.5mm stereo line in: (AUDIO IN)

Power

- Battery type: LR14
- Battery voltage: 1.5 V
- Number of batteries: 6
- Mains power: 220V - 240V

Accessories

- Power cord
- Warranty: Warranty leaflet
- User Manual

Dimensions

- Packaging dimensions (W x H x D): 326 x 275 x 158 mm
- Product dimensions (W x H x D): 300 x 240 x 133 mm
- Weight: 2 kg
- Weight incl. Packaging: 2.4 kg



Issue date 2014-08-19

Version: 1.0.4

12 NC: 8670 001 19786
EAN: 48 95185 60352 0

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com