



Philips
Soundbar 2.1 with wireless
subwoofer

240W max. Wireless subwoofer

Dolby Atmos®
DTS Play-Fi compatible
Connects with voice assistants



TAB8405

The one with front-row sound

Heighten the sound of every movie, sports event, and playlist. This sleek soundbar with wireless subwoofer and Dolby Atmos gives you better bass and clearer voices. Plus it's easy to incorporate into a multi-room setup.

The sound you want for the content you love

- Smart soundbar. Cinematic sound
- 2.1 channels. 200W RMS. 240W max (10% THD)
- Dolby Atmos. Heighten the excitement
- Stadium EQ Mode. You'll feel like you're there

Unpack. Connect. Enjoy.

- Play-Fi. From multi-room audio to surround sound
- HDMI eARC. Enjoy the latest surround-sound formats
- 4K pass-through. Dual HDMI inputs
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

Easy control. Distinctive looks.

- Easily connect to your favorite sources
- Connects to your favorite voice assistant-enabled devices
- Distinctive geometric design. Easy placement

PHILIPS

Soundbar 2.1 with wireless subwoofer
240W max. Wireless subwoofer Dolby Atmos®, DTS Play-Fi compatible, Connects with voice assistants

TAB8405/10

Highlights

Cinematic sound



This soundbar brings a new dimension of sound to everything you watch, and every track you love. 2.1 channels make soundtracks richer, effects more thunderous, and dialogue clearer. The wireless subwoofer adds impact to every explosion and every beat.

Dolby Atmos




Increase the drama no matter what you watch. This Dolby Atmos-compatible soundbar reproduces depth as well as height, creating virtual three-dimensional surround sound that flows above and around you.

Stadium EQ Mode

Experience the excitement of live sports, right there in your living room. Stadium EQ Mode immerses you in ambient crowd noise, just as if you were sitting in the stadium! Be thrilled by every crucial moment—and still hear crystal-clear commentary.

Play-Fi. Multi-room and more

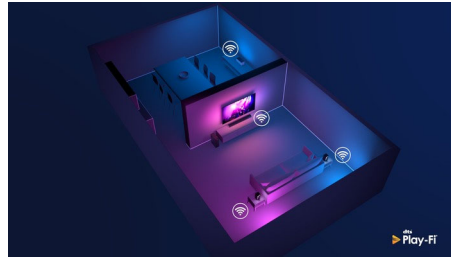

Easy Play-Fi compatibility will make this soundbar the star of your multi-room set-up. You can sync Play-Fi-compatible speakers for multi-room audio, or even create a true surround-sound system—all via the Philips Sound app, or the Play-Fi app.

All your favorite sources

For music, Spotify Connect lets you stream Spotify's best-quality signal over Wi-Fi. You can also stream hi-res playlists from your mobile device via Apple AirPlay 2 or Bluetooth. For movies and gaming, 4K pass-through lets you connect 4K HDR video sources with no loss of resolution.

HDMI eARC

Lose nothing from the mix when you're immersed in the drama. This soundbar is compatible with HDMI eARC, a high-speed connection that lets you experience the full effect of advanced audio formats like Dolby Atmos. The soundbar also has dual HDMI inputs.

Connect with voice assistants



Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.

Distinctive geometric design

This soundbar boasts a unique slanted design and a low profile. When it comes to placement, the included wall brackets keep your options open. The compact design of the powerful subwoofer makes it easy to conceal.

COMPATIBLE WITH
Dolby Vision

Dolby Atmos

dts play-fi



Works with
Apple AirPlay

HDMI™

works with
Ok Google

WORKS WITH
alexa

Specifications

Loudspeakers

- Number of sound channels: 2.1
- Front drivers: 2 full range (L+R), 2 tweeters (L+R)
- Soundbar freq range: 160 - 20k Hz
- Soundbar impedance: 8 ohm x 2 + 4 ohm
- Subwoofer type: Active, Wireless subwoofer
- External subwoofer enclosure: Bass reflex
- Number of woofers: 1
- Woofer diameter: 5.25"
- Subwoofer freq range: 40 - 160 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- USB playback
- HDMI IN x 2
- HDMI Out (eARC/ARC) x 1
- EasyLink (HDMI-CEC)
- HDMI content protection: HDCP 1.4/2.3
- Bluetooth: Receiver
- Optical input x 1
- Aux in: 3.5mm
- WiFi: IEEE 802.11 a/b/g/n/ac, 2.4GHz/5GHz
- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
- Multiple speaker connection
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Works with OK Google, Works with Alexa, Works with Apple AirPlay 2, Built-in Chromecast, Spotify Connect
- Wireless speaker connection: Subwoofer
- DLNA Standard: No

Sound

- Sound Enhancement: Treble and Bass Control, Subwoofer volume control
- Equalizer settings: Movie, Music, Voice, Stadium, Custom
- Speaker system output power: 240W max / 200W RMS (10 % THD)
- Total harmonic distortion: 10%

Video

- 3D pass-through
- Video Enhancement: 4K Video Pass-through, Dolby Vision, HDR10, HDR10+, HLG

Supported Audio Formats

- HDMI IN1/IN2: Dolby Atmos, Dolby Digital,

- Dolby Digital plus, Dolby TrueHD, LPCM 2ch, Dolby MAT
- HDMI ARC/eARC: Dolby Atmos, Dolby Digital, Dolby Digital plus, Dolby TrueHD, LPCM 2ch, Dolby MAT
- Optical: Dolby Digital, LPCM 2ch
- USB: MP3, WAV, FLAC
- Play-Fi: AIFF, FLAC, MP3, WAV, MPEG4 AAC, MPEG4 M4A
- Bluetooth: SBC

Design

- Color: Dark grey
- Wall mountable

Convenience

- Remote Control
- Night mode: No

Compatibility

- Smartphone/tablet APP control

Power

- Auto standby
- Main unit power supply: 100-240V AC, 50/60 Hz
- Main unit standby power: < 0.5 W
- Subwoofer power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W

Accessories

- Included accessories: Remote Control, 1 x CR2025 Battery, Power cord, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

Dimensions


- Main Unit (W x H x D): 900 x 57 x 110 mm
- Main Unit Weight: 2.4 kg
- Subwoofer (W x H x D): 122 x 403 x 300 mm
- Subwoofer Weight: 4.8 kg

Packaging dimensions

- Packaging type: Box
- Number of products included: 1
- Packaging dimensions (W x H x D): 103 x 15 x 42.5 cm
- Gross weight: 9.3 kg
- Nett weight: 7.2 kg
- Tare weight: 2.1 kg
- EAN: 48 95229 10995 7
- Type of shelf placement: Laying

Outer Carton

- Number of consumer packagings: 2
- Outer carton (L x W x H): 105.5 x 57 x 18 cm
- Gross weight: 20 kg
- Nett weight: 14.4 kg
- Tare weight: 5.6 kg
- GTIN: 1 48 95229 10995 4

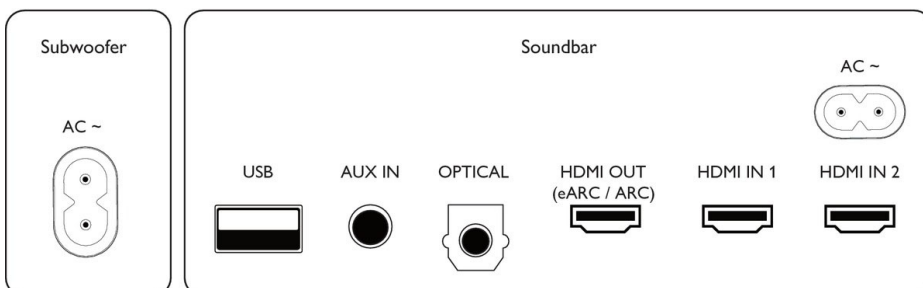

Issue date 2022-11-02

Version: 7.1.1

12 NC: 8670 001 68045
EAN: 48 95229 10995 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

