

Register your product and get support at
www.philips.com/welcome

HMP5000



EN	User manual	8
CS	Příručka pro uživatele	10
DA	Brugervejledning	12
DE	Benutzerhandbuch	14
EL	Εγχειρίδιο χρήσης	16
ES	Manual del usuario	18
FI	Käyttöopas	20
FR	Mode d'emploi	22
HU	Felhasználói kézikönyv	24
IT	Manuale utente	26

NL	Gebruiksaanwijzing	28
PL	Instrukcja obsługi	30
PT	Manual do utilizador	32
RO	Manual de utilizare	34
RU	Руководство пользователя	36
SK	Příručka uživateľa	38
SV	Användarhandbok	40
TR	Kullanım kılavuzu	42
UK	Посібник користувача	44

PHILIPS



EN	Please refer to the safety information before using the product.
CS	Před použitím výrobku si přečtěte informace o bezpečnosti.
DA	Se sikkerhedsoplysningerne, før du bruger produktet.
DE	Bitte lesen Sie die Sicherheitsinformationen, bevor Sie das Produkt verwenden.
EL	Ανατρέξτε στις πληροφορίες ασφαλείας πριν χρησιμοποιήσετε αυτό το προϊόν.
ES	Consulte la información de seguridad antes de utilizar el producto.
FI	Lue turvallisuustiedot ennen tuotteen käyttöä.
FR	Reportez-vous aux informations de sécurité avant d'utiliser le produit.
HU	Kérjük, hogy a termék használatba vétele előtt tekintse át a biztonsági tudnivalókat.
IT	Fare riferimento alle informazioni sulla sicurezza prima di utilizzare il prodotto.
NL	Raadpleeg de veiligheidsinformatie voordat u het product gebruikt.
PL	Przed użyciem produktu należy zapoznać się z informacjami dotyczącymi bezpieczeństwa.
PT	Consulte as instruções de segurança antes de utilizar o produto.
RO	Vă rugăm să consultați informațiile privind siguranța înainte de a utiliza acest produs.
RU	Перед использованием изделия ознакомьтесь со сведениями о безопасности.
SK	Pred použitím tohto produktu si pozrite bezpečnostné informácie.
SV	Läs säkerhetsinformationen innan du använder produkten.
TR	Lütfen ürünü kullanmadan önce güvenlik bilgilerine bakın.
UK	Перед використанням виробу ознайомтеся з інформацією про безпеку.

Trademark notice



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX®, DivX Certified®, DivX Plus™ HD and associated logos are registered trademarks of DivX, Inc. and are used under license.

DivX Certified® to play DivX® and DivX Plus™ HD (H.264/MKV) video up to 1080p HD including premium content






Real RMVB logo is a trademark or a registered trademark of RealNetworks, Inc.




Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.


Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



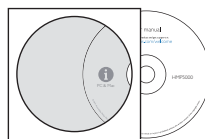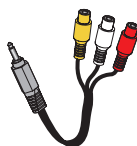

1

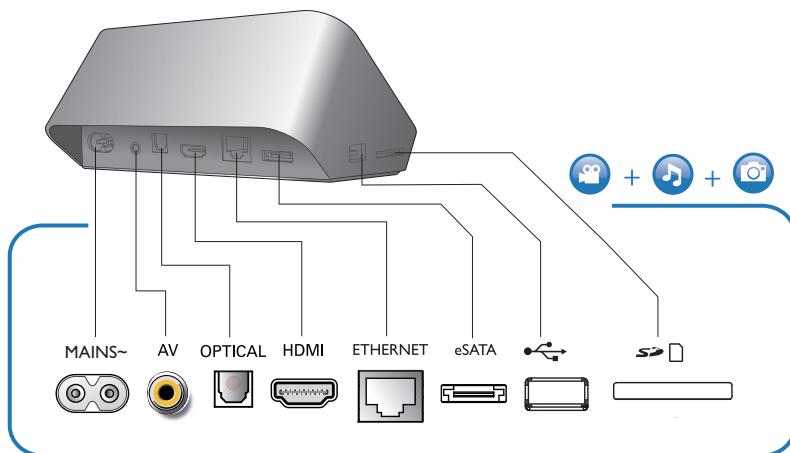

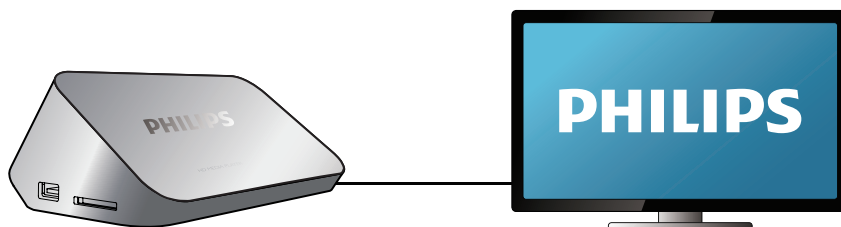


HDMI




TV OUT + AUDIO OUT



3

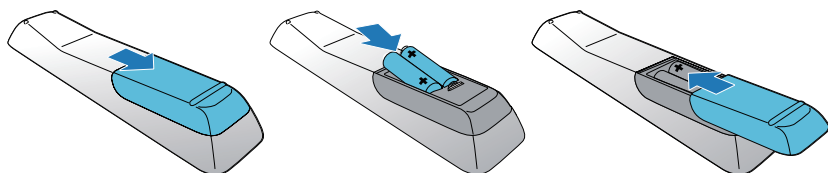

4

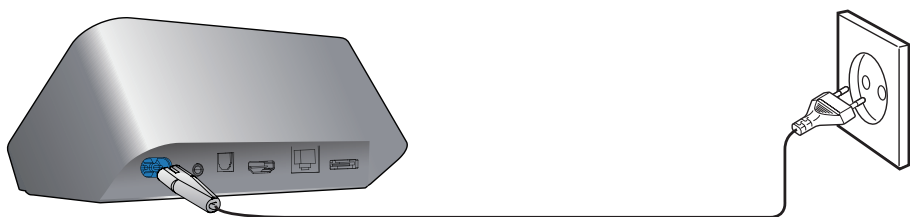

5







System
Audio
Video
Network
EasyLink
MISC

Ethernet
Wireless
Network Info

Connect1
Connect2
Connect3

Net 1 Net 2 Net 3 RTL 4 RTL 5

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	1	2	3	4	5	6	7	8	9	0	-
																				Space	→	OK	←													

ABC abc 000

Private AP Setting

W-LAN

1 Control and play

Use your remote control to control the play.

Function	Buttons / Actions
Stop the play.	■
Pause or resume the play.	▶
Skip to the previous/next media file.	◀ ▶
Return to the home page.	⬆
Zoom in or out.	Press  repeatedly. To pan through an enlarged photo, press ▲▼◀▶.
Search backward/forward fast.	Press ◀◀/▶▶ repeatedly to select a speed.
Access subtitle settings.	SUBTITLE
Rotate a photo.	Press ▲ / ▼.
Navigate menus.	▲▼◀▶
Confirm a selection or entry.	OK
Access option menus during play or in the file list.	≡
Access the file editing menu in the file folder list.	EDIT



2 Troubleshooting

If you contact Philips, you will be asked for the model and serial number of this player. The model number and serial number are at the bottom of this player. Write the numbers here:

Model No. _____

Serial No. _____

No picture.

- Refer to the TV user manual for how to select the correct video input channel

No sound output from the TV.

- Make sure that the audio cables are connected to the audio input sockets that are grouped with the selected video input sockets.

The contents of the USB storage device cannot be read.

- The format of this USB storage device is not supported.
- The supported memory size is 1TB maximum.
- Make sure that this player supports these files. (Refer to “Specifications” > “File”)
- DRM-protected video files that are stored on a USB/SD storage device cannot be played through an analog video connection (for example, composite). You need to use an HDMI connection to play these files.

DivX subtitles are not displayed correctly.

- Make sure that the subtitle filename is the same as the video filename.
- Make sure that the DivX video file and the subtitle file are saved under the same directory.

3 Specification



Note

- Specification and design are subject to change without notice.

File

- Video: MPEG 1/2/4(MPEG 4 Part 2), H.264, VC-1, H.263, VP6(640 × 480), DivX Plus HD, DivX 3/4/5/6, Xvid, RMVB 8/9, RM, WMV (V9), AVI, TS, M2TS, TP, TRP, ISO, VOB, DAT, MP4, MPG, MOV (MPEG 4, H.264), ASF, FLV(640 × 480), MKV, M4V.
- Audio: Dolby digital, AAC, RA, OGG, MKA, MP3, WAV, APE, FLAC, DTS, LPCM, PCM, WMA (V9), IMP/MS ADPCM, WMA Pro
- Picture: JPEG, JPG, PNG, TIFF, GIF (unanimated GIF), BMP, TIF, M-JPEG, HD-JPEG

USB storage device

- Compatibility: Hi-Speed USB (2.0)

Subtitle support

- .srt, .sub, .smi, .ssa, .ass, .txt, .psb, .idx+.sub

SD card

- Compatibility: SDHC 2.0 (up to 32 GB)

Video

- Signal system: PAL /NTSC
- Composite video output: 1 Vpp ~ 75 ohm
- HDMI output: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p, 1080p24

Audio

- Analog stereo output
- Signal to noise ratio (1 kHz): > 90 dB (A-weighted)
- Dynamic Range (1 kHz): > 80 dB (A-weighted)
- Frequency response: +/-0.2 dB
- Digital output: Optical

Main Unit

- Dimensions (L × W × H): 160 × 91 × 54.1 mm
- Net Weight: 0.34 Kg
- Input: 100-240V~ 50/60Hz, 15W

Power

- Power consumption: < 15 W
- Power consumption in standby mode: < 1 W

