Register your product and get support at

www.philips.com/welcome

CE131



EN	User manual		
ES-AR	Manual del usuario	23	
PT-BR	Manual do Usuário	51	
ZH-TW	使用手冊	77	
ZH-CN	用户手册	97	



Contents

1	Important	4
	Safety Notice	4
2	Your car audio system	6
	Introduction	6
	What's in the box	6
	Overview of the main unit	7
3	Get started	8
	Install the car audio	8
	Turn on	12
	Set clock	12
4	Listen to radio	13
	Tune to a radio station	13
	Store radio stations in memory	13
	Tune to a preset station	13
5	Play audio files	14
	Play from USB	14
	Insert a card	14
	Play options	14
	Connect external sound source	15
6	Adjust sound	16
	Adjust volume	16
	Mute	16
	Turn Dynamic Bass Boost (DBB) on/off	16
	Turn on/off MAX sound	16
	Select preset equalizer	16
	Switch music listening zone	16
	Other sound settings	16
7	Adjust system settings	17
	Turn beep sound on/off	17
	Select blackout setting	17
	Turn demo mode on/off	17
	Dimmer	18
	Dance	18

10	Troubleshooting	21
9	Product information	20
	Remove the unit	19
	Replace fuse	19
	Detach the front panel	19
8	Additional information	19
	Neset	10
	Reset	18
	Rear Aux	18

1 Important

Safety

- Read and understand all instructions before you use your apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- This apparatus is designed for negative ground (earth) 12 V DC operation only.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Clean the apparatus and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.
- Never place any objects other than discs into the apparatus.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Risk of damage to the apparatus screen!
 Never touch, push, rub or strike the screen with any object.

Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- The apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

Notice



Be responsible Respect copyrights

The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



This product complies with the radio interference requirements of the European Community.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2011 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

2 Your car audio system

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With the in-car audio system, you can enjoy your drive while listening to:

- FM or AM (MW) radio
- Audio from USB devices
- Audio from SD/SDHC card
- Audio from other external devices

The unit supports the following media format:







What's in the box


Check and identify the contents of your package:


- Main unit (with a sleeve)
- Front panel
- Trim plate
- Carrying case
- ISO male connector
- (6) Rubber cushion
- (7) Screw x 1 pc
- Disassembly tools x 2 pcs


- (9) User manual
- (10) Quick start guide

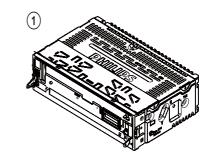


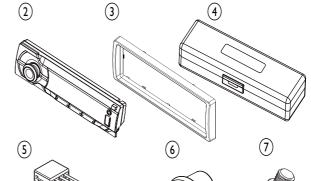

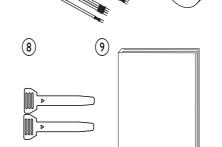

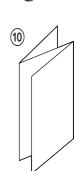

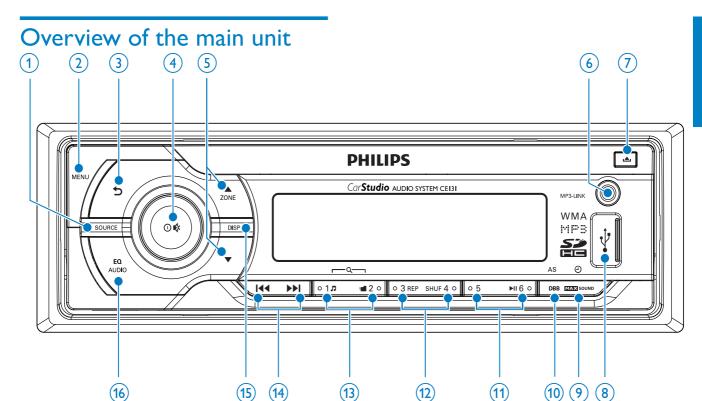

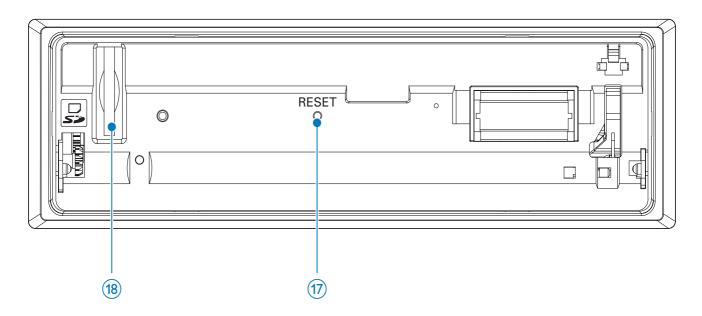

- (1) SOURCE
 - Select audio source.
- (2) MENU
 - Access system menu.
- (3) ع
 - Return to previous menu.
- (4) 0 / *****

- Turn the unit on or off.
- Confirm selection.
- Mute or unmute sound.
- Rotate to adjust volume.
- (5) ZONE **▲** / **▼**
 - Select tuner band.
 - Select MP3/WMA folder.
 - Switch music listening zone.

(6) MP3 LINK

Connect external audio device.

(7) 📤

• Unlock the panel.

(8) 🚓

USB socket.

9 MAX SOUND

- Turn on or off Maximizing volume.
- View clock.

(10) DBB

- Turn on or off Dynamic Bass Boost (DBB) sound.
- Access to tuner auto store.

(11) ►II

- Start play.
- Pause or resume play.
- Select preset radio station No.6.

(12) REP / SHUF

- Access to repeat play.
- Access to random play.
- Select preset radio station No.3/4.

(13) J / 📹

- Search for track/folder.
- Select preset radio station No.1/2.

(14) I**◄◄ / ▶▶**I

- Tune for radio station.
- Skip/search for track.
- Fast forward/backward playback.

(15) DISP

- Display current status.
- Select the dimmer high or low.

(16) EQ / AUDIO

- Select equalizer (EQ) setting.
- Access audio setting menu.

(17) RESET

- Restore default settings.
- (18) SD card slot

3 Get started



Caution

• Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your apparatus. The model number and serial number are on the bottom of your apparatus. Write the numbers here:

Model No.	
Serial No	

Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any questions regarding installation kits, consult your Philips car audio dealer.

!

Caution

- This unit is designed for negative ground (earth) 12 V DC operation only.
- Always install this unit in the car dashboard. Other locations can be dangerous as the rear of the unit heats up during use.
- To avoid short-circuit: before you connect, ensure that the ignition is off.
- Ensure that you connect the yellow and red power supply leads after all other leads are connected.
- Ensure that all loose leads are insulated with electrical tape.
- Ensure that the leads do not get caught under screws orin parts that will move (e.g. seat rail).
- Ensure that all ground (earth) leads are run to a common ground (earth) point.
- Use only the supplied mounting hardware for a safe and secure installation.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.

Note on the power supply lead (yellow)

 When you connect other devices to this system, ensure that the rating of the car circuit is higher than the total fuse value of all the connected devices.

Notes on speaker connection

- Never connect speaker wires to the metal body or chassis of the car.
- Never connect speaker wires with stripes to one another.

Connect wires: ISO male connectors




Caution

• Ensure that all loose leads are insulated with electrical tape.



Note


- Consult a professional to connect CE131 as instructed below.
- 1 Connect the supplied male connector to the unit.

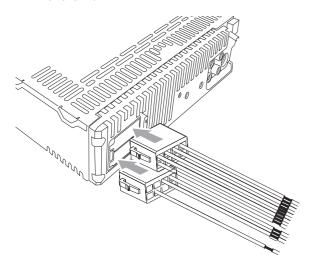

2 Check the car's wiring carefully and connect them to the supplied male connector.




• Risk of danger! Please consult a professional to perform the below steps!

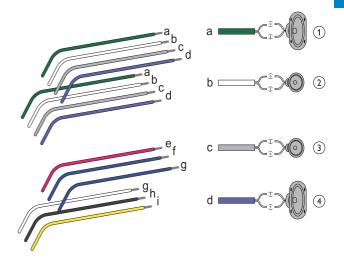

_
na
ol

3 Connect the antenna and amplifier as illustrated, if applicable.

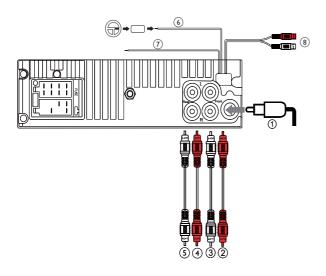


	Connector	Connect to
1	ANTENNA	Antenna
2	FRONT LINE OUT	Front right
	R (Socket)	speaker
3	FRONT LINE OUT L	Front left
	(Socket)	speaker
4	REAR LINE OUT R	Rear right
	(Socket)	speaker
5	REAR LINE OUT L	Rear left
	(Socket)	speaker
6	OE REMOTE	OE Remote
	(Purple)	
7	TEL MUTING (Blue)	To cellular
		phone system
8	REAR AUX (Yellow)	Aux right/left

- ***** T
- The pin arrangement for the ISO connectors depends on the type of vehicle you drive. Be sure to make proper connections to prevent damage to the unit.


Mount into the dashboard

1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.

- If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
- If the car battery is not disconnected, to avoid short-circuit, ensure that the bare wires do not touch each other.
- 2 Ensure that car dashboard opening is within these measurements:

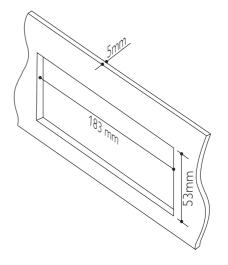

Remove the mounting sleeve with the supplied disassembly tools.

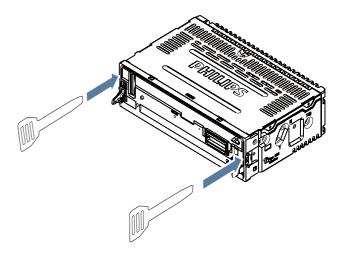


4 Install the sleeve into the dashboard and bend the tabs outward to fix the sleeve.




Note


• If the unit is not fixed by sleeve but by the supplied screws, skip this step.

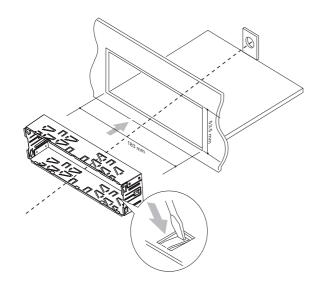

Place the supplied rubber cushion over the end of the mounting bolt.

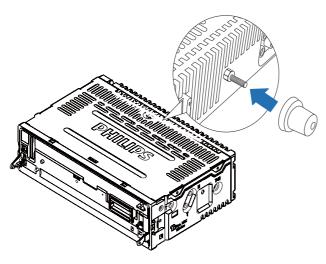


6 Slide the unit into the dashboard until you hear a click sound.

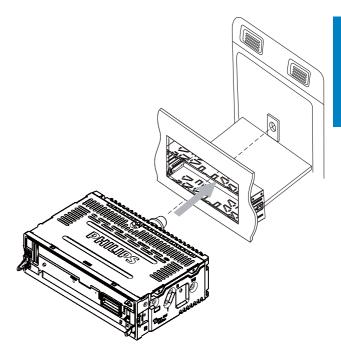


7 Reconnect the negative terminal of the car battery.

Attach the front panel

1 Attach the trim plate.

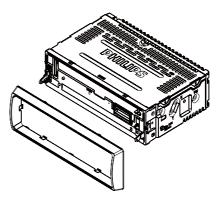

- 2 Insert the left side of the panel in the chassis until it is correctly engaged.
- 3 Press the right side of the panel until it is locked into place.

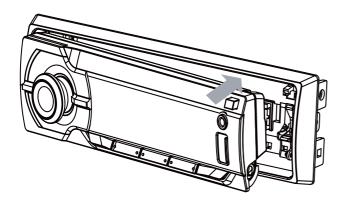

Turn on

To turn on the unit,

Press ①.

To turn off the unit,

press and hold

until the unit is turned off.

Select country/region



Note

- Select correct country/region for this unit, otherwise the unit can not work properly.
- 1 Press ① to turn on the unit.
 - → [SELECT OPERATING REGION] is displayed.
- 2 Rotate ① to select an option:
 - [USA] (United States)
 - **[EUR]** (Western Europe)
 - [RUS] (Russia)
 - [AUS] (Australia)
 - **[EAS]** (Middle East)
 - [ASI] (Asia Pacific)
 - [JAP] (Japan)
 - [LAT] (Latin America)
- **3** Press ① to confirm.

Set clock

- 1 Press MENU repeatedly until current time is flashed.
- 2 Rotate O to set hour.
- $\mathbf{3}$ Press $\mathbf{0}$ to confirm.
- **4** Rotate Φ to set minute.
- **5** Press ① to confirm.

Set clock format

- 1 Press MENU.
- Press ▲ or ▼ repeatedly until [CLOCK FORMAT] is displayed.
- **3** Rotate Φ to select a setting:
 - [CLOCK 12H]
 - [CLOCK 24H]

View clock

In any mode, press and hold **MAX SOUND** until the clock is displayed.

 Press any key to cancel the clock display.

4 Listen to radio

Tune to a radio station

- 1 Press **SOURCE** repeatedly to select radio mode.
- Press ZONE ▲ / ▼ repeatedly to select band: [FM1], [FM2], [FM3], [AM1], or [AM2].
- 3 Press and hold I or ▶ to tune to a radio station manually.
 - → The radio station is broadcast.
 - To search for a radio station automatically, press I◀◀ or ▶▶I.

Select tuner region

You can select suitable country/region of the radio.

- 1 Press **SOURCE** to select radio mode.
- 2 Press MENU repeatedly until [AREA] is displayed.
- **3** Rotate O to select:
 - **[USA]** (United States)
 - **[EUR]** (Western Europe)
 - [RUS] (Russia)
 - [AUS] (Australia)
 - **[EAS]** (Middle East)
 - [ASI] (Asia Pacific)
 - [JAP] (Japan)
 - **[LAT]** (Latin America)

Select tuner sensitivity

To receive more radio stations or only stations with strong signal, you can adjust the tuner sensitivity.

- 1 Press MENU repeatedly until [LOCAL] is displayed.
- **2** Rotate \odot to select a setting:
 - [LOCAL ON] (local on): Only stations with strong signal can be broadcast.
 - [LOCAL OFF] (local off): Stations with strong and weak signals can be broadcast.

Store radio stations in memory

You can store up to 6 stations in each band.

Store stations automatically

- 1 In Radio mode, press and hold **DBB** until [STORE - -] is displayed.
- **2** Press Φ to confirm.
 - → The six strongest stations of the selected band are saved in preset channel automatically.

Store stations manually

- 1 Tune to a station that you want to store. (see 'Tune to a radio station' on page 13)
- 2 Press a numeric button for 3 seconds.
 - → The station is saved in the selected channel.

Tune to a preset station

- 1 Press **ZONE** ▲ / ▼ to select band.
- 2 Press the numeric button to select a preset station.

5 Play audio files

Play from USB




Note

• Ensure that the USB device contains playable music.

Insert the USB device

- 1 Slide the USB socket cover marked to the left.
- Insert the USB device into the USB socket.

 → The unit starts to play from the USB device automatically.

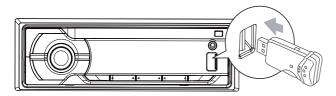

Remove the USB device


- 1 Press O to turn off the unit.
- **2** Remove the USB device.

Insert a card



Note

- This unit supports SD and SDHC cards.
- 1 Press **\(\rightarrow\)** to release the panel.
- 2 Insert the card into the card slot.
- 3 Close the front panel.
 - → The unit starts playing from the card automatically.

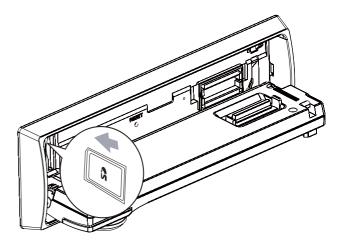

Remove the card

- **1** Press Φ to turn off the unit.
- Press the card until you hear a click sound.

 → The card is now disengaged.
- 3 Remove the card.

Play options

- To pause, press ► II.
- To resume play, press ► II again.
- To skip to the previous/next track, press

 【◀◀ / ▶】
- To search backward/forward rapidly within the current track, press I◄◄ / ▶▶I for 3 seconds.

Search for an MP3/WMA track

Search within the current folder

- 1 Press **□**.
 - → The name of the current track is displayed.
- **2** Rotate \oplus to select anther track in current folder.
- **3** Press ① to confirm.

Search in other folder

- 1 Press .
 - → The name of the current folder is displayed.
- 2 Rotate O to navigate through all folders.
- **3** Press ① to access the selected folder.
 - → The unit starts playing the first song from the selected folder automatically.



Tip

• To go back to upper level of a folder, press **5**.

View play information

During playing, press DISP repeatedly to view:

- Track number and elapsed play time
- Folder
- File
- Album
- Artist
- Title

Repeat play

- 1 During play, press REP.
 - → [REP] is displayed.
- 2 Rotate O to select a setting.
- **[REPTRK]** (repeat one track): play current track repeatedly.
- **[REP FLD]** (repeat a folder): play all tracks in the current folder repeatedly.
- **[REP ALL]** (repeat all tracks): play all tracks repeatedly.

Shuffle play

You can play the tracks in random order:

- 1 During play, press **SHUF**.
 - **→** [SHUF] is displayed.

- 2 Rotate O to select a setting:
 - **[SHUF FLD]**: start random play for all tracks in the current folder.
 - [SHUF ALL]: start random play for all tracks.
 - [SHUF OFF]: turn off random play.

Connect external sound source

- 1 Connect the external sound source to MP3 LINK socket with a 3.5 mm cable.
- Press SOURCE repeatedly until [MP3 LINK] is displayed.
- 3 Operate the external component (refer to the instructions supplied with the external component).

6 Adjust sound

Adjust volume

Turn ① clockwise/counterclockwise to increase/ decrease volume.

Mute

You can turn off the sound of your audio. During play, press Φ .

• To resume sound, press O again.

Turn Dynamic Bass Boost (DBB) on/off

- 1 Press **DBB** and the current setting is displayed:
 - → [DBB ON] :The Dynamic Bass Boost (DBB) function is on.
 - → [DBB OFF] :The DBB function is off.
- Press DBB again to change the DBB setting.

Turn on/off MAX sound

- 1 Press MAX SOUND.
 - ightharpoonup The current setting displays
 - → [MAX ON]: The maximum sound (max sound) function is on.
 - → [MAX OFF]: The maximum sound function is off.
- 2 Press 🗪 🕅 again to select an option.

Select preset equalizer

- 1 Press EQ / AUDIO.
 - → Current Equalizer setting is displayed.

- Press EQ / AUDIO again to select a preset EQ setting:
 - **[FLAT]** (flat)
 - **[POP]** (pop)
 - [USER] (user)
 - [TECHNO] (techno)
 - [ROCK] (rock)
 - [CLASSIC] (classic)
 - **[JAZZ]** (jazz)
 - [OPTIMAL] (optimal)

Switch music listening zone

Philips' innovative Zone technology enables driver or passengers to enjoy music with the best speakers balance and experience more vivid spacial effect as the artist is intended to create. You can switch the music listening zone from driver to passengers for the best speaker sound settings in car.

- 1 Press ZONE.
 - → The current setting is displayed.
- 2 Rotate O to select a setting:
 - [ALL]
 - **[FRONT -L]** (Front left)
 - **[FRONT -R]** (Front right)
 - [FRONT]

Other sound settings

You can also adjust the preset **EQ / AUDIO** settings.

- 1 Press EQ / AUDIO for 3 seconds.
- 2 Press ▲ or ▼ repeatedly to select the item to be adjusted:
 - [BAS] (bass) range: -7 to +7.
 - **[TRE]** (treble) range: -7 to +7.
 - [BAL] (balance) range: 12L to 12R.
 (L = left speaker, R = right speaker)

- [FAD] (fader) range: 12R to 12F. (R = rear speaker, F = front speaker)
- **3** Rotate ① to select a value.

7 Adjust system settings

Turn beep sound on/off

Each time you press a button, the unit beeps. You can turn off/on this beep sound.

- 1 Press MENU.
- 2 Press ▲ or ▼ repeatedly until [BEEP] is displayed.
- **3** Rotate \mathbb{O} to select a setting:
 - [BEEP ON]: Turn on the beep sound.
 - **[BEEP OFF]**:Turn off the beep sound.

Select blackout setting

You can set the screen to turn off automatically after the unit is idle for 10 or 20 seconds.

- 1 Press MENU.
- Press ► / ► repeatedly until [BKO] is displayed.
- **3** Rotate ① to select a setting:
 - **[BKO 10 S]**: Turn off the screen automatically 10 seconds after last operation.
 - **[BKO 20 S]**: Turn off the screen automatically 20 seconds after last operation.
 - [BKO OFF] : Never turn off the screen.

Turn demo mode on/off

- 1 Press MENU.
- Press ► / ► repeatedly until [DEMO] displays.
- **3** Rotate Φ to select a setting:

- **[DEMO ON]**: Turn on the demo mode. When the unit is idle for more than 10 seconds, all functions are displayed.
- [DEMO OFF] :Turn off the demo mode.

Note

 To support telephone call with this unit, connect TEL MUTING wire to your hands-free kit and audio out jack to the REAR AUX in jack of the unit.

Dimmer

- 1 Press MENU.
- 2 Press ▲ or ▼ repeatedly until [DIMMER] is displayed.
- **3** Rotate O to select a setting:
 - [DIMM HIGH] (dimmer high)
 - [DIMM LOW] (dimmer low)

Dance


You can turn on or off the spectrum on the LCD display.

- 1 Press MENU.
- Press ▲ or ▼ repeatedly until [DANCE] is displayed.
- **3** Rotate Φ to select a setting:
 - [DANCE ON] :Turn on the spectrum.
 - **[DANCE OFF]** :Turn off the spectrum.

Reset

You can reset the unit to its default setting.

- 1 Detach the front panel.
- Press the reset button by using a ball-point pen or a similar tool.
 - → Preset adjustments such as preset channels and sound adjustments are erased.

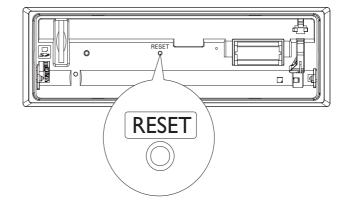

Rear Aux


- 1 Press MENU.
- Press ▲ or ▼ repeatedly until [TEL MUTE] is displayed.
- **3** Rotate \mathbb{O} to select a setting:
 - [NORMAL] : Mute the telephone, [MUTE] is displayed.
 - [REAR AUX] : Mute the telephone, [PHONE IN] is displayed.

8 Additional information

Detach the front panel

You can detach the front panel to deter theft.


- 1 Press to release the panel.
- 2 Push the left side of the panel rightward.
- 3 Pull the panel towards you to disengage it from the chassis.
- 4 Store the panel in the supplied carry case to protect it from dirt or damage.

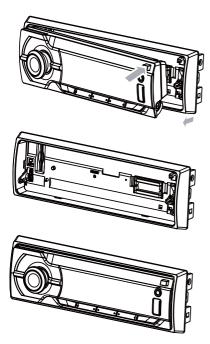

Replace fuse

If the fuse is damaged,

- 1 Check the electric connection.
- 2 Buy a fuse that matches the voltage of the damaged fuse.
- **3** Replace the fuse.

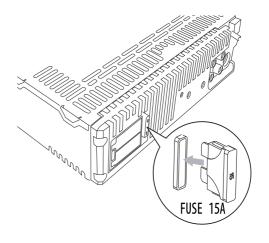




• If the new fuse gets damaged again, there may be an internal malfunction. Consult your Philips dealer.

Remove the unit

You can remove the unit from the dashboard.

- 1 Detach the front panel and the trim plate.
- 2 Pull out the unit by using the disassembly tools.

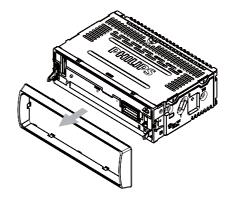

9 Product information



Note

 Product information is subject to change without prior notice.

Power supply	12 V DC (11 V - 16 V),
	negative ground
Fuse	15 A
Suitable speaker	4 - 8 Ω
impedance	
Maximum power	50 W x 4 channels
output	
Continuous power	$22 \text{ W} \times 4 \text{ RMS } (4 \Omega)$
output	10% T.H.D.)
Pre-Amp output	2.5 V
voltage	
Aux-in level	500 mV
Dimensions (W x H	182 × 52 × 144.7 mm
×D)	
Weight	0.86 kg

Radio

Frequency range - FM	87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search)
Frequency range - AM (MW)	522 - 1620 KHz (9 kHz) 530 - 1710 kHz (10 kHz)
Usable sensitivity - FM	8 μV
Usable sensitivity - AM(MW) (S/N = 20 dB)	30 μV

Compatible USB devices:

 USB flash memory: USB 1.1 host with interface reading all speed support (1.1, 2.0)

- USB flash players: USB 1.1 host with interface reading all speed support (1.1, 2.0)
- Memory cards (SD / SDHC)

Supported formats:

- USB or memory file format: FAT16, FAT32
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA V4, V7, V8, V9 (L1, L2)
- Supported sampling frequencies: 44.1 kHz, 48 kHz
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: USB or memory maximum 99
- Number of tracks/titles/files: USB or memory maximum 999
- ID3 tag v2.0 or later

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

10 Troubleshooting

Caution

• Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www. philips.com/support). When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

No power or no sound.

- Car engine is not on. Turn the car engine on.
- Cable is not correctly connected. Check connections.
- Fuse is burnt. Replace fuse.
- Volume is too low. Adjust volume.
- If the above solutions cannot help, press the RESET button.
- Ensure that the track played is of a compatible format.

Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from Stereo to mono.

Preset stations lost.

Battery cable is not correctly connected.
 Connect the battery cable to the terminal that is always live.

Display show ERR-12

• USB data error. Check the USB device.

Display show ERR-3

USB/SD data error.

11 Glossary

M

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

S

SD

Secure Digital. A type of memory card with a flash memory.

SDHC

Secure Digital High Capacity (SDHC) is a type of flash memory card based on the SDA 2.00 specification. The SDA 2.00 specification enables SD cards to reach higher capacities from 4GB to 32GB, and growing.



WMA (Windows Media Audio)

An audio format owned by Microsoft, is a part of Microsoft Windows Media technology. Includes Microsoft Digital Rights Management tools, Windows Media Video encoding technology, and Windows Media Audio encoding technology.

部件名称	有毒有害物质或元素 Hazardous/toxic Substance					
Name of the Parts	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	0	0	0	0	0	0
DVD/CD loader DVD/CD 光盒	Х	0	0	0	0	0
LCD Panel 液晶面板	Х	Х	0	0	0	0
PWBs 电路板组件	Х	0	0	0	0	0
Accessories (Remote control & cables) 附件(遥控器,电 源线,连接线)	Х	0	0	0	0	0
Batteries in Remote Control (ZnC) 遥控器电池	Х	0	0	0	0	0

- 〇: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 2006 标准规定的限量要求以下。 〇: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 — 2006.
- ×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 2006 标准规定的限量要求。
- X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 2006.



环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.



