



Philips  
Blu-ray Disc/ DVD player

3D Blu-ray Disc playback

DivX Plus HD  
USB2.0 Media Link



BDP2590B

## Philips' fastest Blu-ray player ever

with quick start-up & disc-loading

This Philips Blu-ray DVD player has stunning 3D effect and 1080p up-conversion provide the picture depth and action that leap off the screen and draw you deep into the viewing experience, even on DVD!

### See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- DVD video upscaling to 1080p via HDMI for near-HD images
- Subtitle Shift for widescreen without any missing subtitles
- Full HD 1080p for razor sharp images

### Engage more

- Enjoy all your movies and music from CD and DVD
- USB 2.0 plays video/music from USB flash/hard disk drive
- EasyLink to control all HDMI CEC devices via a single remote

### Hear more

- Dolby TrueHD for high fidelity sound
- DTS2.0 Digital Out


# PHILIPS

Blu-ray Disc/ DVD player  
3D Blu-ray Disc playback DivX Plus HD, USB2.0 Media Link

BDP2590B/98

# Highlights

## Enjoy movies and music

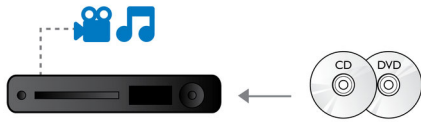

Enjoy all your movies and music from CD and DVD

## Blu-ray 3D Disc playback



Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

## DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX


technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

## Full HD 1080p



Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. This can only mean you get the best possible TV picture quality available today - so prepare to feast your eyes.

## Dolby TrueHD

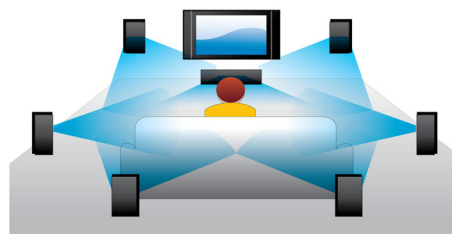

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



# Specifications

## Picture/Display

- Aspect ratio: 16:9, 21:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

## Video Playback

- Compression formats: DivX Plus™ HD, H.264, MPEG2, MPEG4 (AVC), XviD, MPEG1
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Deep Color, Progressive Scan, Video Upscaling, x.v. Color

## Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Connectivity

- Front Connections: USB 2.0
- Rear Connections: Digital coaxial out, Ethernet,

HDMI output

## Convenience

- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade

## Power

- Power consumption: 10 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: 2 x AAA Batteries, HDMI cable, Product Registration Card, Remote Control, User Manual

## Product dimensions

- Product dimensions (W x H x D): 27 x 4.1 x 19.93 cm
- Weight: 0.91 kg

## Packaging dimensions

- Number of products included: 1
- Packaging dimensions (W x H x D): 31.5 x 25.9 x 8.1 cm
- Gross weight: 1.3 kg
- Nett weight: 1.02 kg
- Tare weight: 0.28 kg
- EAN: 48 95185 62516 4
- Packaging type: Carton
- Type of shelf placement: Laying

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 31.5 x 25.9 x 8.1 cm
- Gross weight: 1.3 kg
- Tare weight: 0.28 kg
- EAN: 48 95185 62516 4
- Nett weight: 1.02 kg



Issue date 2022-05-15

Version: 1.0.2

12 NC: 8670 001 40946  
EAN: 48 95185 62516 4

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)