



Philips  
DVD player

DVP3030A



## See, hear, play everything

Does size matter? Ever heard of less is more? Introducing the best value DVD-player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### Great audio and video performance

- Integrated amplifier for true stereo sounds
- Progressive Scan component video for optimized image quality
- 192kHz/24 bit audio DAC enhances analogue sound input

### Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, VCD
- Music: CD, CD-R/RW and MP3-CD
- Photos: Picture CD (JPEG)

### Fits everywhere, goes anywhere

- 12V DC Input for versatile power usage
- Compact design
- Quick and easy set-up for no-fuss installation


**PHILIPS**  
sense and simplicity

# Highlights

## Integrated amplifier


Integrated amplifier for true stereo sounds

## Progressive Scan

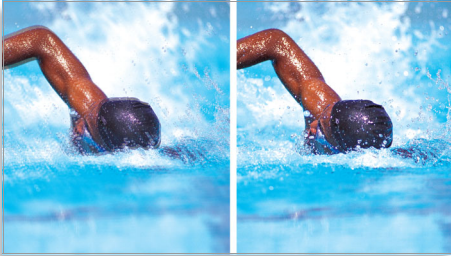

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## 192kHz/24 bit audio DAC

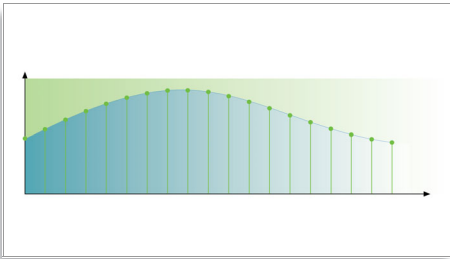

192kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information

is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## Multi format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

## Multi-format Music

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

## Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.


## 12V DC Input

12V DC Input for versatile power usage


## Compact design

Compact design

## Quick and easy set-up

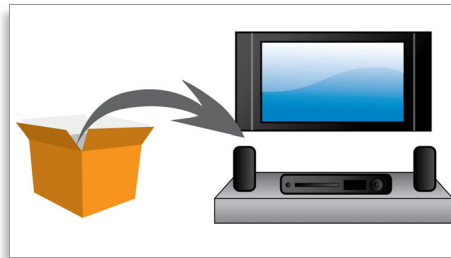

Quick and easy set-up for no-fuss installation



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 10 bit, 54 MHz
- Picture enhancement: Progressive Scan

## Sound

- D/A converter: 192kHz/24 bit
- Signal to noise ratio: 90dB
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital
- Total Sound Power (RMS): 5 W
- Output power (RMS): 2 x 2.5 W

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD, DVD, DVD-Video, DVD+R, DVD+RW, DVD-R, DVD-RW (Video mode)
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Compression format: MP3, PCM
- MP3 bit rates: 32 - 256 kbps

## Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow, Zoom

## Connectivity

- Other connections: Analog audio Left/Right out, Digital coaxial out, ComponentVideo out, Progressive, Composite video (CVBS) out, S-Video out, Speakerterminal Left, Speakerterminal Right

## Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, Hindi

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: 12 W
- Standby power consumption: 2.2 W

## Accessories

- Batteries: 1 x Lithium Coin Cell
- Cables: 1 x AV Cables
- Remote control: 3139 258 70131
- User Manual: English, Hindi
- Warranty Card

## Dimensions

- Set dimensions (W x H x D): 360 x 50 x 285 mm
- Set weight: 2.2 kg
- Packaging dimensions (W x H x D): 415 x 95 x 380 mm
- Weight incl. Packaging: 3.0 kg



Issue date 2009-07-03

Version: 2.0.4

12 NC: 8622 810 12631  
EAN: 87 10895 90338 7

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)