


Philips  
5.1 Home theater with  
360Sound

Blu-ray 3D playback



HTS9520

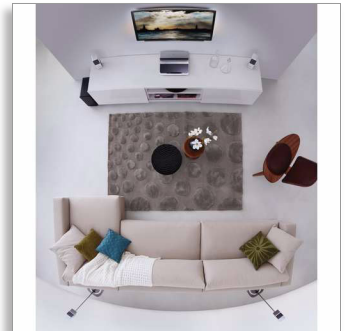

## Surround sound from all angles, like in the cinema

### Obsessed with Sound

Over 70% of people who took the sound challenge\* prefer Philips 360Sound. 360Sound speakers are designed with sound drivers in the front and on the sides to fill your room evenly with surround sound, just like in the cinema.

#### Ultimate listening experience

- 360Sound fills your room with sound from all angles
- Dolby TrueHD and DTS-HD for high fidelity surround sound

#### Designed to enhance your living space

- Iconic and compact speakers enhance your home environment
- Sophisticated design with high-quality aluminum finish

#### Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- DLNA Network Link to enjoy music & videos from your PC
- Access to the Internet and popular online services



2011



asimpleswitch.com

# PHILIPS

5.1 Home theater with 360Sound  
Blu-ray 3D playback


## Highlights

### Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

### Dolby TrueHD and DTS-HD

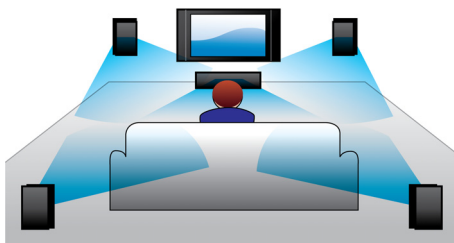

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

### Iconic and compact speakers

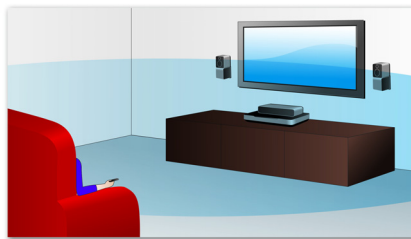

Iconic and compact speakers enhance your home environment

### Sophisticated design



Sophisticated design with high-quality aluminum finish

### DLNA Network Link



The DLNA Network link provides easy access to personal photos, music, videos or movies on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that assures that DLNA certified products will work together seamlessly. By connecting your TV, home theater or Blu-ray Disc player to your home network, you will be able to access information from all DLNA certified devices. You can access your world of entertainment at a simple push of a button with

HTS9520/55

the intuitive user interface, that is designed for easy browsing.



### EISA award

EISA recognizes the features to be appreciated by people seeking high quality & creative facilities.

Philips HTS 9520's novel satellite speakers, each comprising multiple drivers are the key. The lower cabinet features two side-firing units which act as dipoles while the top cabinet utilizes a conventional bass/treble arrangement. These are driven from Class D amplifiers in the HTS9520's main DVD/BD player, which also includes custom DSP to further enhance the system's surround sound. With a subwoofer providing a solid foundation for the midrange and treble, the result is a sound that surrounds you in new and exciting ways! This product is ready for both 3D TV and wireless access to your PC.



### iF award

iF award: product design 2011

There's cinematic surround sound - and there's Philips 360Sound,

the only system that produces high-quality sound that comes at you from all angles. This premium surround sound home theater achieves its effect through five speakers, one subwoofer and one Blu-ray center unit. Each speaker contains three drivers and one tweeter. Two of the drivers fire sound from the side, which increases the sense of immersion. The speakers are discrete yet powerful, and the system is constructed from high-end materials finished with brushed aluminum and chrome to complement the home interior.

**360**  
Sound

**Blu-ray**  
**3D**

**800W**  
Total Power

**DOLBY**  
**TRUEHD**

**dts-HD**  
Master Audio | Essential

wireless  
**SPEAKERS**  
ready

**DIVX**  
**ULTRA**

**DVD**  
**VIDEO**

**OnlineTV**

# Specifications

## Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone, RVSS9500 Wireless Rear Audio, STS1300 Floor stand, STS9500 Speaker stands, STS9501 Speaker stands, STS9510 Wall mount brackets, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, User Manual, VDE to 2-pin Flat Adaptor, World Wide Warranty leaflet

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 112 - 320 kbps
- WMA bit rates: 48 kbps - 192 kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: AVCHD, AVCSD, DivX Ultra, MPEG1, MPEG2, MPEG4, WMV SD
- Video disc playback system: NTSC, PAL

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Access to Content: DLNA, Internet browser, Online services
- Front / Side connections: MP3 Link, USB
- Rear Connections: AUX IN 1, AUX IN 2, Component Video output, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Connectors, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Subwoofer out, Wi-Fi USB, Wireless Rear Audio

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Deep color

## Dimensions

- Main Unit (W x H x D): 437 x 75 x 342 mm
- Main Unit Weight: 4.5 kg

- Front Speaker (W x H x D): 99 x 247 x 117 mm
- Front Speaker Weight: 1.17 kg
- Front Speaker cable length: 5 m
- Center Speaker (W x H x D): 435 x 85 x 111 mm
- Center Speaker Weight: 1.67 kg
- Centre Speaker cable length: 4 m
- Rear Speaker (W x H x D): 99 x 247 x 117 mm
- Rear Speaker Weight: 1.17 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 196 x 397 x 342 mm
- Subwoofer cable length: 4 m
- Subwoofer Weight: 6.4 kg
- Packaging (W x H x D): 560 x 554 x 400 mm
- Weight incl. Packaging: 23.5 kg

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Satellite Speaker: Magnetically shielded front
- Center speaker drivers: 1" soft-dome tweeter, 2 x 2.5" woofers
- Center speaker freq range: 150 - 20k Hz
- Center speaker impedance: 4 ohm
- Drivers per Satellite speaker: 1 x 1" Soft dome tweeter, 1 x 2.5" woofer, 2 x 2.5" Full range woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 125 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.22W

## Sound

- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, News, Sports, Gaming
- Signal to noise ratio: > 65 dB
- Sound Enhancement: Auto Volume Leveller, Dialog Enhancer, DoubleBass, FullSound, Night Mode, Dolby Digital Prologic II, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 96/24, DTS Digital Surround, dts ES, DTS-HD High Resolution Audio, DTS-HD Master Resolution
- Total Power RMS @ 30% THD: 800 W

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40



Issue date 2014-02-14

Version: 33.4.6

12 NC: 8670 000 59334  
EAN: 87 12581 52085 4

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Base on consumer sound tests carried out by Synovate in Nov 2010 in Germany vs. a leading competitor. Data on file.

\* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.

\* Adaptor supplied is needed for all Latin American countries, except in Brazil.