

Philips
DVD player

DivX playback

DVP3040



Discover your movie's potential

With DivX playback

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- 192kHz/24 bit audio DAC enhances analogue sound input

Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- Music: CD, MP3-CD, CD-R/RW & Windows Media™ Audio
- Photos: Picture CD (JPEG)

Fits everywhere, goes anywhere

- Compact design
- Ultra-slim design

PHILIPS
sense and simplicity


Highlights

Progressive Scan



Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

192kHz/24 bit audio DAC

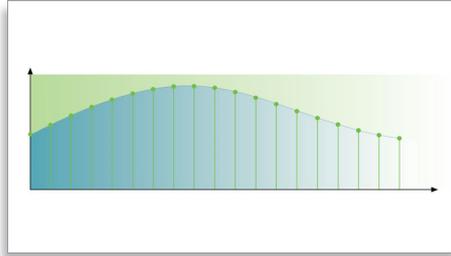

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Multi-format Movies with DivX

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Music: Windows Media™ Audio

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD (JPEG)

Multi-format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.

Ultra-slim design

The attractive enclosure has a very low profile.



Specifications

Picture/Display

- D/A converter: 12bit, 108MHz
- Picture enhancement: Video upsampling, Progressive Scan

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD-R/CD-RW, CD, DivX, DVD, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD
- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, WMA-CD
- Compression format: Dolby Digital, WMA, MP3, PCM
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-

- R/RW, Kodak Picture CD, Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Zoom

Connectivity

- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Canadian French, Mexican Spanish

Power

- Power supply: 120V, 60Hz
- Power consumption: < 10 W
- Standby power consumption: < 0.8 W

Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, Quick start guide, World Wide Warranty leaflet, Product Registration Card, User Manual

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 235 mm
- Packaging dimensions (W x H x D): 415 x 82 x 320 mm



Issue date 2009-07-03

Version: 6.1.12

12 NC: 8622 810 13443
UPC: 6 09585 11180 6

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com