


Philips  
wireless portable speaker

Bluetooth  
Blue

BT150A

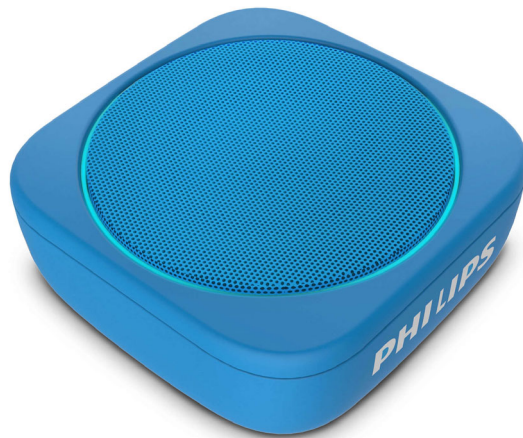

## Pool party. Shower party. Your party.

Wherever. Whenever. This waterproof Bluetooth speaker packs chunky bass into a tiny package and gives you surprisingly big sound. You get eight hours play time and audio-in. From the pool to the shower-make it your kind of party.

### **Bring the tunes. Anywhere.**

- Buttons on speaker for play and volume/skip tracks
- Finely knitted detachable carry strap
- Hang it from your bag, or on your bike. 9.5x9.5x3.8 cm
- LED lights around the speaker grille. Blue/random colors

### **Music or calls**

- Audio-in. Connect to almost any source
- Built-in mic. Take your calls via the speaker
- Up to 10 m wireless range

### **Turn it up. In the pool. In the shower.**

- 1.5" full-range speaker. A passive radiator boosts bass
- 8 hours play time. USB charging. Micro USB cable included
- Anti-clipping function. Play it loud without distortion
- Waterproof to 1 m for up to 30 minutes. IPX7-rated

# PHILIPS

# Specifications

## Sound

- Output power (RMS): 4W
- Sound System: Mono

## Design and finishing

- Color: Blue

## Connectivity

- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

## Convenience

- Display type: LED display (multi-color)
- Water resistance: IPX7

## Compatibility

- other Bluetooth-enabled device
- work with: up to iOS 10.2, Bluetooth 4.2 or below

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: up to 10 hour(s)

## Accessories

- Included accessories: Quick install guide, World Wide Warranty leaflet, carrying strap
- Cable: USB charging cable

## Dimensions

- Product dimensions (WxDxH): 9.5 x 9.5 x 3.95 cm
- Weight incl. Packaging: 0.3 kg
- Packaging dimensions (WxDxH): 11.5 x 5 x 15 cm
- Product weight: 0.21 kg

# Highlights

## Waterproof and ready to go

Poolside, lakeside, in the shower. This waterproof IPX7-rated speaker floats and can withstand being submerged in depths of up to 1 m for up to 30 minutes.

## 8 hrs play time. USB charging.

The battery gives you 8 hours play time from a full charge. Charging takes around 3 hours, and is easy via the included micro USB cable.

## Control your music

Control the music from buttons on the side of the speaker. Press for play and double-press the volume up/down buttons to skip tracks. The speaker grille has LED lights that glow a steady blue, or flash random colors.

## Crisp sound. Punchy bass.

The 1.5" full-range speaker delivers crisp, clear sound even when you play it loud. A passive radiator boosts the bass giving you that much more punch on the low-end tones.

## Built-in mic

Power on the speaker and it's ready to pair with your Bluetooth device. The wireless range is 10 m and the built-in mic lets you take calls out loud. When a call comes in, the music pauses automatically.

## Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.

## Anti-clipping function

Anti-Clipping lets you play music louder and keeps its high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

## Detachable carry strap

Finely knitted detachable carry strap

## Hang it from your bag

Hang it from your bag, or on your bike. 9.5x9.5x3.8 cm

## LED lights

LED lights around the speaker grille. Blue/random colors

## Up to 10 m wireless range

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wirelessly on this speaker easily.

