



Philips Fidelio  
SoundSphere mini wireless  
speakers

#### with AirPlay

USB port for play/charging  
50W



DS6800W

## Feel the emotions of a live performance

### Obsessed with sound

Bring life back into your music with deeper and more natural sound delivered through SoundSphere speaker technology. Equipped with AirPlay, these elegant speakers let you stream music wirelessly from iPod Touch, iPhone, iPad and iTunes.

#### Peerless sound quality

- SoundSphere for natural, deeper and wider sound impression
- FullSound enhances sound detail for rich and powerful sound
- Bass-reflex design for deep, tight bass reproduction
- 2x25W RMS total output power

#### Exquisite design and finishing

- Sophisticated design with high-quality aluminum finish

#### Advanced versatility

- Stream music with AirPlay wireless technology
- Play and charge your iPod/iPhone/iPad via USB port
- AUX-in for easy connection to almost any electronic device

#### Intuitive control

- SoundStudio app for complete control of audio settings
- Remote control complements speaker design and finishing

**PHILIPS**  
Fidelio

SoundSphere mini wireless speakers  
with AirPlay USB port for play/charging, 50W


# Highlights

## SoundSphere



Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing before you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimized interference and even more natural sound.

## FullSound™

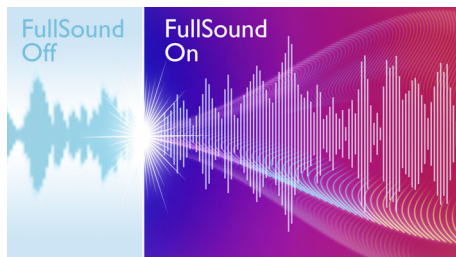

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized

to let you experience music with great detail and warmth.

## Bass-reflex design



Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimizing air turbulence that may cause distortion.

## AirPlay wireless technology




AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every

DS6800W/37

room. Get your favorite tunes to follow you whichever room you go.

## SoundStudio App

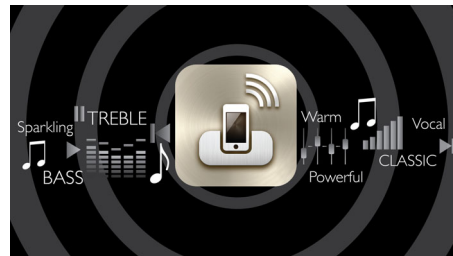

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

## Play & charge iPod/iPhone/iPad



This speaker comes with a USB port, allowing you to conveniently charge your iPod, iPhone, iPad. Simply connect your Apple device with its USB cable to the back of the speaker. You can play any music from your Apple device whilst it is charging.



# Specifications

## Compatibility

- Compatible with: all iPod, iPhone and iPad

## iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

## Loudspeakers

- Speaker drivers: 2 x 3/4" / 20mm tweeter, 2 x 3" / 8cm midwoofer
- Output power (RMS): 2 x 25W

## Accessories

- Included accessories: Remote Control, 3.5mm stereo line in cable, AC Power Cord, Quick start guide, Warranty certificate, World Wide

Warranty leaflet

## Connectivity

- AirPlay
- Aux in
- USB: for playing and charging iPod,iPhone,iPad

## Dimensions

- Product dimensions: [speakers] 145 (diameter) x 263 (height) mm
- Packaging dimensions (WxDxH): 577 x 249 x 217 mm
- Product weight: 3 kg
- Weight incl. Packaging: 4.2 kg

## Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2015-03-26

Version: 3.0.3

12 NC: 8670 000 81006  
UPC: 6 09585 21928 1

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)