



Philips
Spotify multiroom speaker

Spotify Connect
Multiroom
Just hit "PLAY"



SW750M

Spotify in every room

Enjoy authentic sound conveniently with 4 audiophile drivers and Spotify Connect. Play Spotify on any speaker using the Spotify app as a remote, expand your system wirelessly to any room and hit play to start where you left off.

Using Spotify app as a remote for your speakers

- Spotify Connect for an effortless native app experience
- Music streams directly on speakers, save mobile battery
- Music keeps playing through calls, videos and games
- Direct access buttons - no app required, for easier control

Multiroom speakers for you and your family

- Play music from one speaker at a time or all at once
- Philips companion app simplify wireless speaker setup

Just hit 'PLAY' button

- One-press 'Play' for the last heard Spotify track
- Flip from room (speaker A) to room (speaker B)
- Press 'Play' for 'Music Follows Me'


Powerful room-filling sound

- Powerful room-filling sound with 4 audiophile-grade drivers

PHILIPS


Highlights

Spotify as a remote

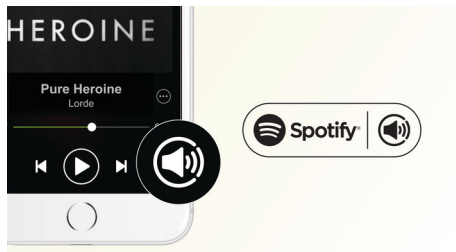

Using Spotify Connect you can easily browse, explore, and play music from any room in the house using your smart device as a remote. With a direct Spotify connection, you can play music straight from the cloud so your smart device can be used for calls, videos or even go out of range without interrupting your music. This is also more battery friendly, since energy used for music is minimized. All the same great Spotify features are there, from its ready-made lists to its high sampling rates. Everything you need to discover new music and hear it at its best.

Multiroom speakers

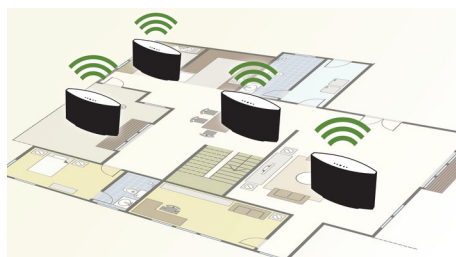


Multiroom speakers let you play songs in one room, or in many at the same time, so your music can either follow you around the house or stay where you want it. Each person can play to any selected speaker, and when additional speakers are purchased they can be added to the system wirelessly and easily.

'Play' for the last heard song



Listen to your favorite tunes almost without interruption. Just hit 'Play' on the speaker to start playing the last song you heard on Spotify, without even unlocking your smart device.

'Play' for 'Music Follows Me'

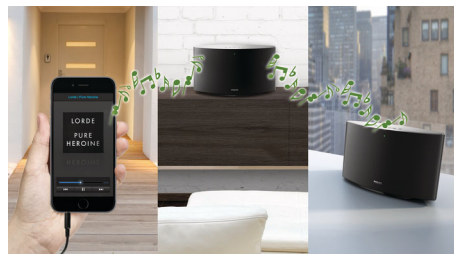

When you press 'Play', music starts instantly on the speaker, no matter if it was last played on a smart phone, tablet or other smart device. This feature also lets you flip from one speaker to another in different rooms.

Direct access without app



Handy control buttons (Play / Pause, Volume Up / Down, Previous / Next) give you access to the controls you need, without fiddling with an

app. Once an album, playlist or station has been selected, skipping tracks, repeating, or pausing the music is a button press away.

Four audiophile-grade drivers



Equipped with 4 audiophile-grade drivers, this speaker creates powerful room-filling sound while its two bass ports expand low frequency bass, creating a truly immersive and dynamic sound. Enjoy powerful sound in a compact size.

Philips companion app



Philips SpeakerSet Multiroom Manager app helps you set-up and manage your Philips Spotify Multiroom speakers effortlessly. Simply connect your new Philips Spotify Multiroom Speaker to your home wireless network. If you have more than one speaker, use the app to group the speakers for Multiroom flexibility.

Specifications

Sound

- Volume Control: up/down
- Output Power: 2 x 10W

Loudspeakers

- Loudspeaker types: Integrated
- Built-in speakers: 4
- Speaker drivers: 2 x 3" woofers, 2 x 35mm tweeters with bass ports

Audio Playback

- Compression format: Ogg Vorbis

Connectivity

- Wireless connection: Wireless LAN (802.11n), Wireless LAN(802.11g), Wireless LAN(802.11b)
- Encryption / security: WEP 128 bit, WEP 64 bit, WPA, WPS-PBC, WPA2

Smartphone/Tablet App

- App name: SpeakerSet, Free download from Apple App store/Google Play

Accessories

- AC/DC Adaptor: 110-240V
- Included accessories: Quick start guide, World Wide Warranty leaflet

Dimensions

- Product dimensions (WxDxH): 360 x 135 x 210 mm
- Packaging dimensions (WxDxH): 418 x 220 x 250 mm
- Gross Weight: 2.82 lb
- Net Weight: 2.10 kg



Issue date 2022-06-03

Version: 6.0.6

12 NC: 8670 001 20428
EAN: 48 95185 60423 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Spotify premium account is required for this speaker.