

Philips  
Micro Hi-Fi System

MCM309R



## A 4-disc music system

made for GoGear and iPod

Great sound in an elegant design! The MCM309R featuring a 4-disc music system delivers dynamic sound performance and essential functionalities. Let you enjoy your Philips GoGear and iPod music via DC276 docking kit.

### Unlimited listening pleasure

- Play and charge your iPod and GoGear
- Enjoy MP3/WMA music directly from your portable USB devices
- Play MP3/WMA-CD, CD and CD-RW

### Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Incredible Surround™ for enhanced audio enjoyment

### Watch your disc spin

- Front motorized CD door with viewing window
- Super sleek and flexible wall-mountable design

**PHILIPS**  
sense and simplicity

# Highlights

## Play and charge iPod/GoGear



Play and charge your iPod and GoGear

## USB Direct for MP3/WMA music



Simply plug in your device to the USB port on your Philips Hi-Fi system. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.

## Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls

you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Incredible Surround™


Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers.

This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

## Front motorized CD door

A motorized sliding front door adds even more panache to the already sleek design of this system. The stylish yet functional door housing the disc slides up and down vertically in a smooth motion at the touch of a button whenever you feel like changing your music selection. Just sit back and enjoy the dynamic sound performance while watching the disc play through the transparent window.

## Wall-Mountable

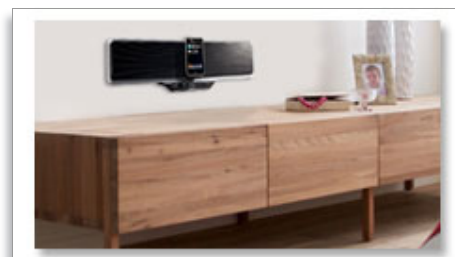

Super sleek and flexible wall-mountable design



# Specifications

## Sound

- Output power (RMS): 2x20W + 60W
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost, Incredible Surround

## Loudspeakers

- Main Speaker: Bass Reflex Speaker System, 4" woofer
- Subwoofer type: Active

## Audio Playback

- Number of Discs: 4
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Cradle playback mode: Charging GoGear, Charging iPod, Fast forward and backward, Next and Previous track, Play and Pause, Program play, Repeat, Shuffle play
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Stop
- Disc Playback Modes: 40-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Front, Motorised
- ID3-tag support

## Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, AM
- Auto digital tuning
- Station presets: 40
- Tuner Enhancements: Auto Store

## Connectivity

- Headphone: 3.5 mm

- Other connections: Cradle connection, AM Antenna, FM Antenna
- USB: USB host

## Convenience

- Alarms: CD Alarm, Radio Alarm, Sleep timer, USB alarm
- Clock: On main display
- Display Type: LCD
- Backlight color: Blue
- Eco Power Standby: 1 watt

## Accessories

- Included Accessories: Wall mounting bracket, Guarantee booklet
- Remote control: 47-key with battery
- User Manual: Eng, Spa, Fre
- Quick start guide: 3 languages
- Cables: Subwoofer cable
- Warranty Card: USA Warranty Card

## Dimensions

- Set dimensions (W x H x D): 450 x 335 x 115 mm
- Main speaker dimensions (W x H x D): 171 x 297 x 89 mm
- Subwoofer dimensions (W x H x D): 220 x 350 x 357 mm
- Packaging dimensions (W x H x D): 567 x 420 x 512 mm
- Weight incl. Packaging: 18 kg

## Power

- Power supply: 120V, 60Hz



Issue date 2009-11-06

Version: 2.1.7

12 NC: 8670 000 30347  
UPC: 6 09585 13378 5

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)