



Philips Fidelio
SoundSphere wireless
speakers

with AirPlay

USB port for charging
100W



DS9860W

Feel the emotions of a live performance

with this sound system

Bring life back into music with deep, natural audio delivered by acoustic SoundSphere technologies. Equipped with AirPlay, these elegant Philips DS9860W wireless speakers let you stream songs from iPod, iPhone, iPad and also iTunes.

Peerless sound quality

- SoundSphere for natural, deeper and wider sound impression
- FullSound enhances sound detail for rich and powerful sound
- SoundCurve for superb sound reproduction
- Bass-reflex design for deep, tight bass reproduction
- 2x50W RMS total output power

Exquisite design and finishing

- Real hand-crafted wood speaker enclosure for fidelity sound
- Limited edition in Malaysian oak wood finished speaker

Advanced versatility

- Stream music with AirPlay wireless technology

Intuitive control

- SoundStudio app for complete control of audio settings
- Stream millions of songs to your speakers with Spotify

PHILIPS
Fidelio

SoundSphere wireless speakers
with AirPlay USB port for charging, 100W


Highlights

SoundSphere



Bask in the glory and energy of music as SoundSphere gives you each note as the artist intended. Delivering clear and natural audio, SoundSphere creates a sound impression that is deeper and wider. The result is life-like audio that will make you believe the artists are performing before you. Each SoundSphere speaker features a tweeter that hangs above the speaker box. The tweeter is able to emit sound more clearly and in all directions. Precise audio crossover engineering and careful positioning of the woofer to embrace the tweeter ensures minimized interference and even more natural sound.

FullSound™

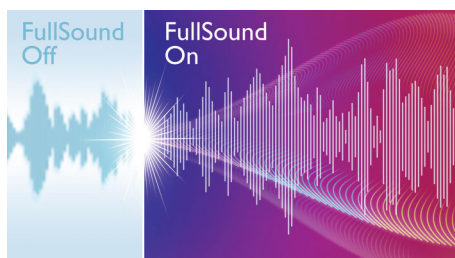

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized to let you experience music with great detail and warmth.

SoundCurve




The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning looking speakers.

Bass-reflex design



Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimizing air turbulence that may cause distortion.

Real hand-crafted wood speaker

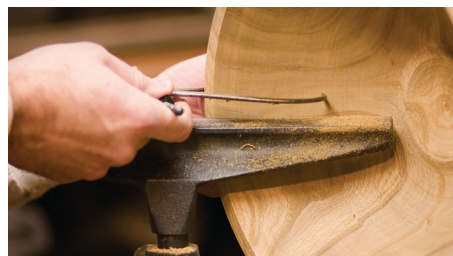

Wood has been used throughout history to craft the finest musical instruments. Its natural acoustic properties continue to make it the

DS9860W/10


material of choice for the best instruments and sound equipment today. Not only is this speaker handcrafted in wood, advanced wood bending techniques have been applied to create the right curvature for the enclosure. The calculated curve reduces vibration and eliminates the distortion of sound, resulting in the delivery of natural, life-like audio.

AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.

SoundStudio App

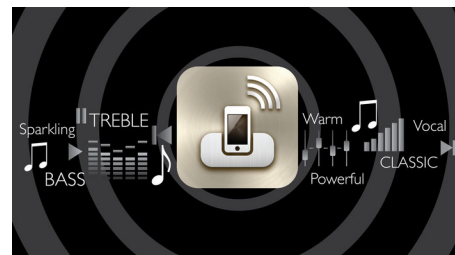

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.



Specifications

Compatibility

- Compatible with: all iPod, iPhone and iPad

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iOS 4.3 to iOS 10.3
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Loudspeakers

- Speaker drivers: 2 x 3/4" / 20mm tweeter, 2 x 5" / 12.5cm midwoofer
- Output power (RMS): 2 x 50W

Accessories

- Included accessories: Remote Control, 3.5mm stereo line in cable, AC Power Cord, Quick start

guide, Warranty certificate, World Wide
Warranty leaflet

Connectivity

- AirPlay
- Aux in

Dimensions

- Product dimensions: [speakers] 265 (diameter) x 410 mm
- Packaging dimensions (WxDxH): 760 x 338 x 485 mm
- Product weight: (main unit) 12 kg
- Weight incl. Packaging: 14.5 kg

Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2020-07-08

Version: 3.0.6

12 NC: 8670 000 90592
EAN: 87 12581 64595 3

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com