




Philips  
Open-ear wireless sports  
headphones

### Open-ear fit

Bone conduction  
Clear calls  
LED safety lights

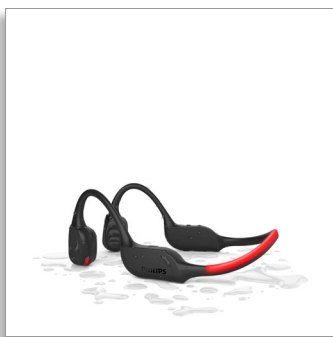

TAA7607BK

## Free your ears. Hear it all.

Run it, ride it, stroll it, love it! Light, comfy, and tough, these open-ear wireless sports headphones let you hear everything that's going on around you-and your music too. From parks to city streets, your training just got an upgrade.

### Hear differently

- Sound without earphones. Open-ear design
- Always good to go. IP66 dustproof and water resistant
- Be seen. LED safety lights

### Sound without earphones

- Open-ear fit. Light, comfy, tough
- Integrated controls. Easy pairing
- Philips Headphones app
- Carry pouch included

### For your kind of active life

- No worries. 9 hours play time
- Crystal-clear calls. Inside, outside, anywhere at all
- Charge for 15 minutes, get an extra hour
- AI and bone-conducting mics remove environmental noise


# PHILIPS

Open-ear wireless sports headphones  
Open-ear fit Bone conduction, Clear calls, LED safety lights

TAA7607BK/00


# Highlights

## Bone conduction

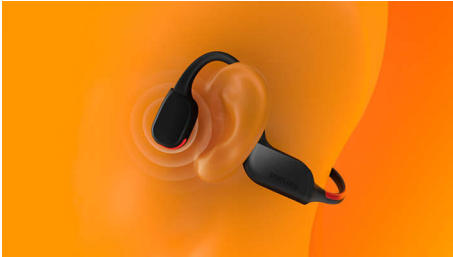


Bone conduction technology transmits sound through the bones of your skull, which means you don't need to put an earbud in your ear, or wear headphones that cover your ear. Instead, the sound travels from your cheekbones directly to the inner ear—and your music magically appears in your head!

## IP66 dust/water protection

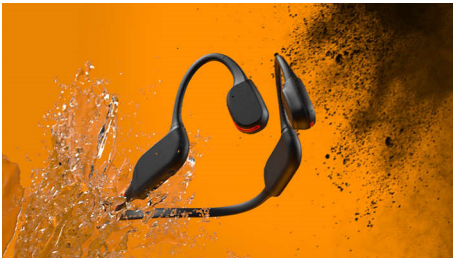

Hitting the trail in the rain? An IP66 rating means dirt or a downpour won't stop these open-ear headphones, and they're safe and easy to charge even after they've gotten wet. Simply wipe them down and attach them to the magnetic charging cradle.


## Safety LED lights

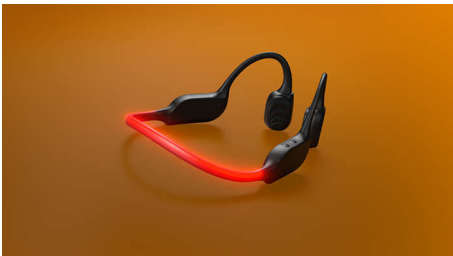

Run at night. Hike a mountain trail at dusk. Or cycle in the woods. With a bright LED light-strip


on the rear of the neckband, you'll stay visible in dim environments. You can control the LEDs via the Philips Headphones app, or via the on/off button on the neckband.

## 9 hours play time

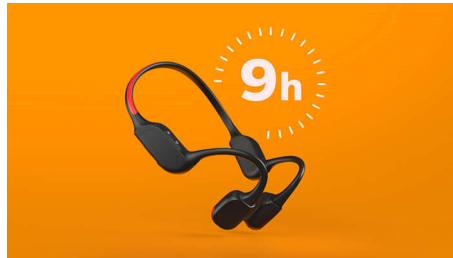

Don't want to worry about daily charging? With 9 hours play time from a single charge, these bone-conducting open-ear headphones are good to go for multiple workouts. A full charge takes just 2 hours. For a quick extra boost, just 15 minutes charging gives you an extra hour of play time.

## Crystal-clear calls

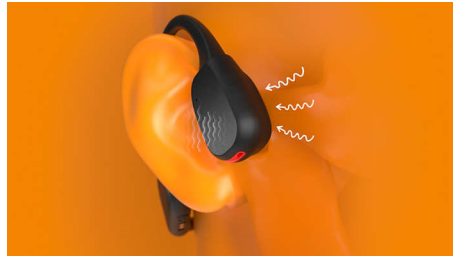

Taking calls? A unique combination of bone-conducting and AI mics means you'll always be heard clearly. The AI mic removes background noise in any environment. If you're out on a run or a ride, the bone-conducting mic removes annoying wind noise. Switch mics easily via a button on the neckband.

## Light, comfy, tough



Why weigh yourself down? These open-ear headphones are so light you'll barely feel them, plus they won't fall off when you get moving. The neckband wraps around the back of your head, and loops over the top of your ears, to hold the headphones comfortably in place.

## Easy control and pairing

Buttons on the neckband let you pause your playlist, take calls, control volume, and more. The headphones are ready to pair the instant you switch on Bluetooth, and you can connect to two devices at once. Great if you're listening to music on your phone and getting training notifications from your smartwatch.

## Philips Headphones app

The Philips Headphones app lets you control the LED running light—and switch between the headphone's AI and bone-conducting mics for calls inside or outside.

## Carry pouch included

Carry pouch included

## Charge for 15 minutes

Charge for 15 minutes, get an extra hour

## AI and bone-conducting mics

AI and bone-conducting mics remove environmental noise

# Specifications

## Sound

- Frequency range: 130 - 16 000 Hz
- Speaker diameter: 17 mm
- Impedance: 4 Ohm
- Maximum power input: 500 mW
- Sensitivity: 92 dB (1K Hz)
- Driver type: Dynamic

## Connectivity

- Bluetooth version: 5.2
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: SBC

## Outer Carton

- Length: 22.6 cm
- Number of consumer packagings: 3
- Width: 18.4 cm
- Gross weight: 1.1 kg
- Height: 19.5 cm
- GTIN: 1 48 95229 12628 9
- Nett weight: 0.21 kg
- Tare weight: 0.89 kg

## Convenience

- Volume control
- Water resistance: IP66
- Philips Headphones app support
- Firmware updates possible
- Type of controls: Button

## Power

- Rechargeable
- Number of batteries: 1 pcs
- Music play time: 9 hour(s)
- Charging time: 2 hour(s)
- Fast charging time: 15mins for 1 hr
- Battery weight (Total): 3.5 g
- Battery capacity(Headphones): 160 mAh

- Battery life standby time: 80 hr
- Battery type(Headphones): Lithium Polymer (built-in)

## Packaging dimensions

- Height: 19.2 cm
- Packaging type: Box
- Type of shelf placement: Hanging
- Width: 17 cm
- Depth: 7 cm
- Number of products included: 1
- EAN: 48 95229 12628 2
- Gross weight: 0.234 kg
- Nett weight: 0.07 kg
- Tare weight: 0.164 kg

## Product dimensions

- Height: 5.5 cm
- Width: 14 cm
- Depth: 9.6 cm
- Weight: 0.038 kg

## Accessories

- Others: 1 pcs soft pouch
- Quick Start Guide
- Earplug: 1 pair
- Charging cable: Magnetic charging cable, 200 mm

## Design

- Color: Black
- Ear fitting: Bone-conducting
- In-ear fitting type: Open fit

## Telecommunication

- Microphone for call: 2 mics, AI mic and Bone mic
- Wind noise reduction

## UPC

- UPC: 8 40063 20229 0



Issue date 2024-03-11

Version: 7.1.2

EAN: 48 95229 12628 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Battery life of playtime is approximate and may vary depending on application condition.