DVD VIDEO PLAYER

DVP3120

Thank you for choosing Philips.

Need help fast? Read your User's Manual first for quick tips that make using your Philips product more enjoyable. If you have read your instructions and still need assistance, you may access our online help at www.philips.com/support





01-43_dvp3120_75_eng.indd 1

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete. **Go to www.philips.com/support for software upgrade.** This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

'CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.'

 $01\text{-}43_dvp3120_75_eng.indd \ 2$

For Customer Use: Read carefully the information located at the bottom or rear of your DVD Video player and enter below the Serial No. Retain this information for future reference.

Model No. DVP 3120 Serial No. _____

LASER

Туре	Semiconductor laser
	InGaAIP (DVD)
	AlGaAs (CD)
Wave length	658 nm (DVD)
	790 nm (CD)
Output Power	7.0 mW (DVD)
	10.0 mW (VCD/CD)
Beam divergence	60 degrees

01-43_dvp3120_75_eng.indd 3

General Information

Environmental Information

All unnecessary packaging has been omitted. The packaging has been made easy to separate into two materials; cardboard (box) and polyethylene (bags, protective foam sheet).

Your DVD player consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Manufactured under license from Dolby Laboratories, "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Laser Safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

NOTE:

Pictures shown maybe different between countries.

CAUTION: WARNING LOCATION: ON THE BACKPLATE OF THE SET

NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Language Code

6566 6565 Abkhazian Afar Afrikaans 6570 Amharic 6577 6582 Arabic 7289 Armenian 6583 Assamese 6569 Avestan Aymara 6589 Azerhaijani 6590 Bahasa Melayu 7783 Bashkir 6665 Belarusian 6669 Bengali 6678 Bihari 6672 Bislama 6673 Bokmål, Norwegian 7866 Bosanski 6683 Brezhoneg 6682 Bulgarian 667 I Burmese 7789 Castellano, Español 6983 Catalán 6765 Chamorro 6772 6769 Chechen Chewa; Chichewa; Nyanja 7889 中文 9072 Chuang; Zhuang Church Slavic; Slavonic 9065 6785 Chuvash 6786 Corsican 6779 Česky 6783 Dansk 6865 6869 Deutsch 6890 Dzongkha 6978 English Esperanto 6979 6984 Estonian Euskara 6985 6976 Ελληνικά Faroese 7079 7082 Français 7089 Frysk Fijian 7074 Gaelic; Scottish Gaelic 7168 Gallegan 7176 Georgian 7565 Gikuyu; Kikuyu 7573 Guarani 7178 Gujarati 7185 . Hausa 7265 Herero 7290 Hindi 7273 Hiri Motu 7279 Hrwatski 6779 Ido 7379 Interlingua (International) 7365 Interlingue 7365 Inuktitut 7385

1 .	777
Inupiaq	737
Irish Íslenska	7383
Italiano	7384
lvrit	726
Japanese	746
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	757
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	758
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	758
Lao	7679
Latina	766
Latvian	7686
Letzeburgesch;	7660
Limburgan; Limburger	7673
Lingala	7678 7684
Lithuanian Luxembourgish;	766
Macedonian	777
Malagasy	777
Magyar	728
Malayalam	777
Maltese	778
Manx	718
Maori	777
Marathi	778
Marshallese	777
Moldavian	7779
Mongolian	7778
Nauru	786
Navaho; Navajo	788
Ndebele, North	7868
Ndebele, South	7882
Ndonga	787
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk; Occitan; Provencal	7878 7967
Old Bulgarian; Old Slavonic	678
Oriya	798
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	806!
Persian	706!
Polski	807
Português	808
-	

Language	200
Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
	8378
Shona Shoria	
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	847 I
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765 6789
Welsh	
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

5

01-43_dvp3120_75_eng.indd 5

Contents

Care and Safety Information	
Setup	
Cleaning discs General Information	0
Accessories supplied	0
Region codes	9
Connections	
Connecting to television	-11
Using Composite Video jacks (CVBS)	10
Using Component Video jacks (YPbPr)	10
Using an accessory RF modulator Connecting the power cord	11 12
Optional connections	
Connecting to a stereo system	13
Stereo system has right/left Audio In jacks	13
Connecting to a digital AV receiver Receiver has a PCM, Dolby Digital or MPEG decoder	.13
Product Overview	. 13
Front and Rear panels Remote Control	
Getting Started	15
Step 1: Inserting Batteries	
Using the remote control to operate the system	16
Step 2: Finding your viewing channel	
Step 3: Setting up Progressive Scan feature Step 4: Selecting the matching color system	/1 18
Step 5: Setting the language	
Òn-screen display (OSD) language	19
Audio, Subtitle and Disc menu languages	19
Playback from Disc	
Playable discs Supported formats	. 20
Playback Features	. 20
Starting disc playback	21
Basic playback controls	. 21
Pausing playback	21
Selecting title/chapter/track Stopping playback	
Operations for video playback	. 22
Using the Disc Menu	22
Zooming in	
Slow Motion Forward / Reverse Searching	
Selecting various repeat functions	. 23
Repeat play mode	23
Repeating a section within a chapter/track Viewing the disc playback information	
Using the OSD menu	24

Contents

Special DVD Features	
Playing a Title	25
Changing the Audio Language	
Subtitles	
Special VCD and SVCD Feature	
Playback Control (PBC)	
Playing MP3/WMA/JPEG/Kodak Picture CD	
General Operation	
Playback selection	
DVD Menu Options	
Using the General setup menu	
OŠD Language	
Sleep	
Using the Audio setup menu	
Downmix	
Digital Audio	
Using the Video setup menu	
ТЎ Туре	
Setting the TV Display	
Progressive	
Sharpness	
Brightness/Contrast/Color	
Using the Preference setup menu	
Subtitle / Audio / Disc Menu	
Parental	
Changing the Password	
Restoring to the original settings	
Others	
Software Upgrade	
Troubleshooting	
Specifications	
Glossary	

Care and Safety Information

DANGER!

High voltage! Do not open the device. You run the risk of getting an electric shock.

The machine does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.


Setup

Finding a suitable location

- Place the set on a flat, hard and stable surface. Do not place the set on a carpet.
- Do not put any equipment or heavy objects on top of the set.
- Do not position the set on top of other equipment that might heat it up (such as receiver or amplifier).
- Do not put anything under the set (such as CDs, magazines).
- Install this unit near the AC outlet and where the AC power plug can be reached easily.

Space for ventilation

 Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10 cm (4.0") clearance from the rear and the top of the set and 5cm (2.0") from the left and right to prevent overheating.




Avoid high temperatures, moisture, water and dust

- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (such as liquid filled objects, lighted candles).

Cleaning discs

Some problems occur because the disc inside the player is dirty (frozen picture, sound disruptions, picture distortions). To avoid these problems, discs should be cleaned on a regular basis.

To clean a disc, use a micro fibre cleaning cloth and wipe the disc from the center to the edge in a straight line.



CAUTION!

Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static sprays intended for analog discs. Since the optical unit (laser) of the DVD player operates at a higher power than regular DVD or CD players, cleaning CDs intended for DVD or CD players may damage the optical unit (laser). Therefore, refrain from using a cleaning CD.

Accessories supplied

Composite video cable (yellow) and Audio cables & (white, red)



Remote control and two AAA batteries



General Information

Region codes

This DVD player is designed to support the Region Management System. Check the regional code number on the disc package. If the number does not match the player's region number (see table below), the player may be unable to playback the disc.

Tips:


 It may not be possible to play CD-R/RW or DVD-R/RW in all cases due to the type of disc or condition of the recording.

 If you are having trouble playing a certain disc, remove the disc and try a different one. Improper formatted disc will not played on this DVD player.

Region	Discs that can be played
U.S.A. and Canada regions	
U.K and Europe regions	
Asia Pacific, Taiwan, Korea	
Australia, New Zealand, Latin America	
Russia and India regions	
China, Calcos Islands, Walls and Futuna Islands	

Connections

Connecting to television

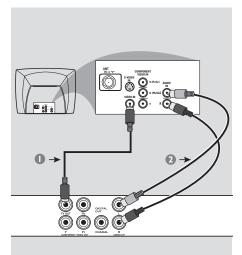


IMPORTANT!

You only need to make one video connection from the following options, depending on the capabilities of your television.
Connect the DVD player directly to the television.

Using Composite Video jacks (CVBS)

- Use the composite video cable (yellow) to connect the DVD player's **TV OUT** (CVBS) jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the television (cable supplied).
- To hear sound of this DVD player through your television, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD player to the corresponding AUDIO IN jacks on the television (cable supplied).

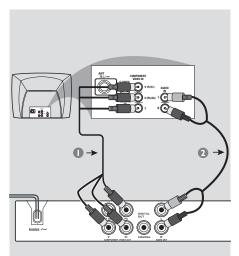

IMPORTANT!

 The progressive scan video quality is only possible when using YPbPr and a progressive scan television is required.


Using Component Video jacks (YPbPr)

- Use the component video cables (red/ blue/green) to connect the DVD player's **YPbPr** jacks to the component video input jacks (or labeled as YPbPr) on the television (cable not supplied).
- To hear sound of this DVD player through your television, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD player to the corresponding AUDIO IN jacks on the television (cable supplied).
- Proceed to page 17 for detailed progressive scan setup.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

 $01\text{-}43_dvp3120_75_eng.indd \ 10$

Connections (continued)

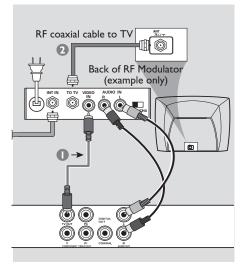

IMPORTANT!

- If your television only has a single Antenna In jack (or labeled as 75 ohm or RF In,) you will need an RF modulator in order to view the DVD playback on the television. See your electronics retailer or contact Philips for details on RF modulator availability and operations.

Using an accessory RF modulator


- Use the composite video cable (yellow) to connect the DVD player's **TV OUT** (CVBS) jack to the video input jack on the RF modulator.
- Use the RF coaxial cable (not supplied) to connect ANTENNA OUT or TO TV jack on the RF modulator to the ANTENNA IN jack on the television.

- To hear sound of this DVD player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/ R) jacks of the DVD player to the corresponding AUDIO IN jacks on the RF modulator (cable supplied).
- Connect the Antenna or Cable TV service signal to the ANTENNA IN or RF IN jack on the RF modulator. (It may have been connected to your TV previously. Disconnect it from the TV).

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

01-43_dvp3120_75_eng.indd 11

Connections (continued)

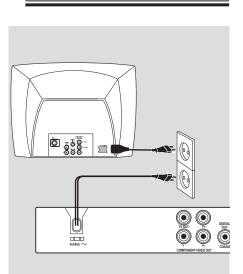

Connecting the power cord

After everything is connected properly, plug in the AC power cord to the power outlet. Never make or change any connections with the power switched on.


When no disc is loaded, **press**


STANDBY ON on the DVD player front panel. "---" may appear on the display

panel.

TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.

01-43_dvp3120_75_eng.indd 12



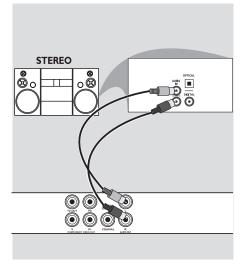


Stereo system has right/ left Audio In jacks

- Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your television.
- Use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the stereo system (cable supplied).

Optional connections

Connecting to a digital AV receiver

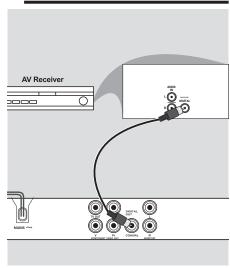

Receiver has a PCM, Dolby Digital or MPEG decoder

- Select one of the video connections (CVBS VIDEO IN or COMPONENT VIDEO IN) depending on the options available on your television.
- Connect the COAXIAL jack of the DVD player to the corresponding Digital Audio In jack on your receiver (cable not supplied).
- Set the DVD player's digital output to PCM-Only or ALL depending on the capabilities of your receiver (see page 29 {Digital Output}).

Тір:

- If the audio format of the Digital Output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.


TIPS: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.


13

01-43_dvp3120_75_eng.indd 13

Product Overview


Front and Rear Panels

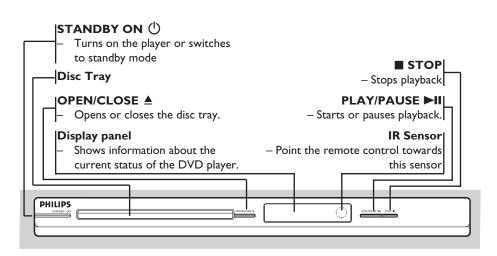

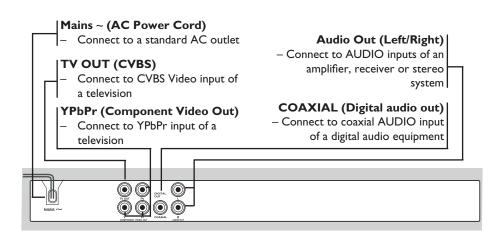

2007-02-07 12:39:22 PM


Product Overview (continued)

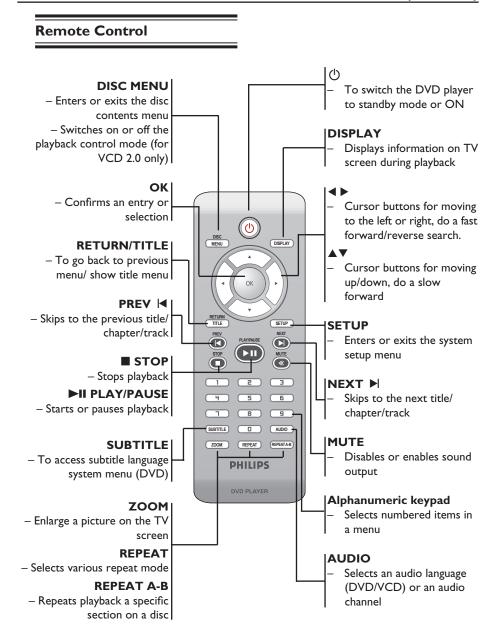

01-43_dvp3120_75_eng.indd 15

Getting Started

Step I : Inserting Batteries




- Open the battery compartment.
- Insert two batteries type R03 or AAA, following the indications (+ -) inside the compartment.
- 3 Close the cover.

CAUTION!

Remove batteries if they are exhausted or if the remote is not to be used for a long time.
Do not use old and new or different types of batteries in combination.

- Batteries contain chemical substances, so they should be disposed of properly.

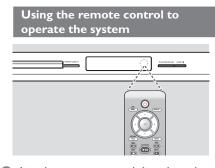

- Aim the remote control directly at the remote sensor (IR) on the front panel.
- ② Do not put any objects between the remote control and the DVD player while operating the DVD player.

Step 2 : Finding your viewing channel

- Press STANDBY-ON () on the DVD player to turn it on.
- 2 Turn on the TV and set it to the correct video-in channel. You should see the blue DVD background screen.
 - → Usually these channel are between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO. See your TV's manual for more details.
 - → Or, you may go to channel I on your TV, then press the Channel down button repeatedly until you see the Video In channel.
 - Or, the TV remote control may have a button or turn that chooses different video modes.
 - → Or, set the TV to channel 3 or 4 if you are using an RF modulator.
- If you are using external equipment, (such as audio system or receiver), turn it on and select the appropriate input source for the DVD player output. Refer to the equipment user's manual for detail.

Getting Started (continued)

Step 3 : Setting up Progressive Scan feature

(for Progressive Scan TV only) The progressive scan displays twice the number of frames per seconds than interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

Before you start...

Ensure that you have connected this
 DVD player to a progressive scan TV
 using the YPbPr connection (see page 10).

- Ensure that you have completed the basic installation and setup.

- Turn on your TV and set to interlace mode (refer to your TV user manual).
- Press STANDBY-ON () on the remote control to turn on the DVD player.
- Select the correct video-in channel.
 → The DVD background menu appears.
- Press SETUP.
- S Press ► to select { Video Setup Page }.

General	Audio	Video	Preference
Video S	etup Page		
ТҮ Туре			
TV Display			
Progressive			
Sharpness		Off	
Brightness			
Contrast			
Color			

6 Press ▲ ▼ repeatedly to select { Progressive }, then press ▶.

Select { On }, then press OK to confirm.
 The menu will appear on the TV.



- 8 Press ◀ to highlight { OK } and press OK to confirm.
- Turn on your TV progressive scan mode (refer to your TV user manual).
 - → The menu will appear on the TV.



- Press < to highlight { OK } and press OK to confirm.
 - The setup is now completed and you can start enjoy the high quality picture.

To deactivate Progressive Scan manually:

- Wait for 15 seconds for the auto recovery.
 OR
- Press OPEN/CLOSE ▲ on the DVD player to open the disc tray.
- Press numeric keypad 'l' on the remote control for few seconds.
 The DVD background screen appears.

Tip:

- There are some progressive scan TVs and High-Definition TVs that are not fully compatible with this unit, resulting in the unnatural picture when playing back a DVD VIDEO disc in the progressive scan mode. In such a case, turn off the progressive scan feature on both the DVD player and your TV.

TIPS: The <u>underlined option</u> is the factory default setting.

Press < to go back to previous menu item. Press SETUP to exit the menu item.

17

Getting Started (continued)

Step 4 : Selecting the matching color system

The color system of the DVD player, disc and TV should match in order for the disc to play. Before changing the TV system, determine the color system of your TV.

General	Audio	Video	Preference
Video S	Setup Page		
TY Type		PAL	
TV Display		Multi	
Progressive	e		
Sharpness			
Brightness			
Contrast			
Color			

Press SETUP.

- Press b to select { Video Setup Page }.
- ③ Press ▲ ▼ repeatedly to select { TV **Type** }, then press ▶.
- ④ Use ▲ ▼ to select one of the options below:

{ **PAL** }

Select this if the connected TV has the PAL colour system. It will change the video signal of a NTSC disc and output it to PAL format.

{ <u>NTSC</u> }

Select this if the connected TV has the NTSC colour system. It will change the video signal of a PAL disc and output it to NTSC format.

{ Multi }

Select this if the connected TV is compatible with both NTSC and PAL (multi-system). The output format will be in accordance with the video signal of the disc.

5 Select a setting and press **OK**. → Follow the instructions show on the TV to confirm the selection.



⁶ Press **◄** to highlight { **OK** } and press OK to confirm.

To reset to default TV colour system:

- Wait for 15 seconds for the auto recovery.
- Press OPEN/CLOSE ▲ on the DVD player to open the disc tray.
- 2 Press numeric keypad '3' on the remote control for few seconds. → The DVD background menu appears.

Tips:

OR

- Before changing the current TV colour setting, ensure that your TV supports the 'selected TV Type' system.

- If there is no proper picture on your TV, wait for 15 seconds for auto recovery.

The <u>underlined option</u> is the factory default setting. Press ◀ to go back to previous menu item. Press **SETUP** to exit the menu item.

18

01-43_dvp3120_75_eng.indd 18

TIPS:

Step 5 : Setting the language

The language options are different depending on your country or region. It may not correspond to the illustrations shown on the user manual.

On-screen display (OSD) language Select this to change the language of this DVD player screen display menu. The menu language (on-screen display) for the system will remain as you set it.

General	Audio	Video	Preference
Genera	I Setup Page		
OSD Langu Sleep		ENGLISH	

- Press SETUP.
- Press ▲ ▼ to select { OSD Language }, then press ▶.
- 3 Press OK to confirm.

Getting Started (continued)

Audio, Subtitle and Disc menu languages

You can choose your preferred language or sound track from audio, subtitles and disc menu languages. If the selected language is not available on the disc, the disc's default language will be used instead.

General	Audio	Video	Preference
Prefere	nce Page		
Audio			
Subtitle			
Disc Menu			
Parental			
Password			
Default			

- Press STOP twice to stop playback, (if any), then press SETUP.
- Press b to select { Preference Page }.
- 3 Press ▲ ▼ to highlight one of the options below, then press ►.
 - { Audio }

Select this to change disc sound track language.

{ Subtitle }

Select this to change the subtitle language.

{ **Disc Menu** } Select this to change the language of the disc menu.

Use ▲ ▼ to select a language and press OK to confirm.

If the language you want is not in the list, then select { Others }, then use the numeric keypad (0-9) on the remote to enter the 4-digit language code 'XXXX' (see page 5 'Language Code') and press **OK**.

6 Repeat steps (3 - (4) for other language settings.

 TIPS:
 The <u>underlined option</u> is the factory default setting.

 Press:
 If to go back to previous menu item. Press SETUP to exit the menu item.

19

01-43_dvp3120_75_eng.indd 19

Playback from Disc

IMPORTANT!

- If the inhibit icon \oslash appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.


- DVD discs and players are designed with regional restrictions. Before playing a disc, make sure the disc is for the same zone as your player.

Playable discs

Using this DVD player, you can playback on the following discs:

DVD Video (Digital Versatile Disc)

DVD±RW (DVD Rewritable) Audio/Video format or MP3/WMA/JPEG files.





USG

Recordable

DVL

IDEO

ZШ

CD-R (CD-Recordable) Audio/Video format or MP3/WMA/JPEG files.

CD-RW (CD-Rewritable) Audio/Video format or

MP3/WMA/JPEG files.



Audio CD (Compact Disc Digital Audio)

Video CD (Formats 1.0, 1.1, 2.0)

Super Video CD



MP3-Disc

MPE


Supported formats

MP3/WMA tracks

- The file extensions has to be '.mp3', '.wma'
- JPEG/ISO format
- Maximum 14 characters display.
- Supported bit-rate;
- 32 320 kbps (MP3)
- 32 192 kbps (WMA)

JPEG pictures

- The file extensions has to be '.JPG' and not '.JPEG.'
- JPEG/ISO format
- It can only display DCF-standard still pictures or JPEG pictures such as TIFF.



01-43_dvp3120_75_eng.indd 20

Starting disc playback

- Turn on the TV to the correct program number for the DVD player (e.g. 'EXT', '0', 'AV').
- Press STANDBY-ON (1) to turn on the DVD player.
- Press OPEN/CLOSE on the front of the DVD player.
- You can also hold down the STOP button on the remote control to open and close the disc tray.
- Place a disc into the disc tray with the label facing up, then press OPEN/ CLOSE .
 - → For double-sided discs, load the side which you want to play facing up.
- 6 Playback may start automatically. If not, press PLAY/PAUSE ►II.
- If a disc menu appears on the TV, see page 22 'Using the Disc Menu'.
- If the child lock was activated for the inserted disc, you have to enter your sixdigit password (see page 34).
- For more playback features, see pages 21~26.

Tips:

 Do not overturn the DVD player while disc loading, playing or ejecting.

 Do not close the disc tray manually even if the power switched off.

Playback Features

Basic playback controls

Unless otherwise stated, all operations described are based on Remote Control use.

Pausing playback

During playback, press PLAY/PAUSE
 It to pause playback and display a still picture.

Sound will be muted.

To resume normal playback, press PLAY/PAUSE >II again.

Selecting title/chapter/track

- During playback, press PREV I to go to the beginning of the currect chapter/ track, press PREV I again to go to the previous title/chapter/track.
- Press NEXT ► to go to the next chapter/track.
- Press DISPLAY to display the disc information text line for title/chapter/ track (example - 00/08).
- Use alphanumeric keypad (0-9) to enter valid title/chapter/track number.
 The playback skips to the selected title/chapter/track.

Stopping playback

Press **STOP**.

Tips:

 Screen saver will start automatically if the disc playback is stopped/paused for about 5 minutes.

 The player will automatically switch to Power Standby mode if you do not press any buttons for about 15 minutes after the disc has stopped playing.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

21

Operations for video playback

Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load in the disc.

To select a playback feature or item
 Use ▲ ▼ ◀ ► keys or numeric keypad (0-9) on the remote, then press OK to start playback.

To access or remove the menu
 Press DISC MENU on the remote.

Zooming in

This function allows you to enlarge the picture on the TV screen and to pan through the enlarged picture.

- During playback, press ZOOM repeatedly to display the picture with different scales.
 - → Use ▲ ▼ ◀ ▶ keys to pan through the enlarged picture.
 - → Playback will continue.
- Press ZOOM repeatedly to return to the original size.

Slow Motion

You can slow forward a disc during playback and select a different speed.

For DVD,VCD,SVCD

- Press ▲ during playback to select the required speed: 1/2, 1/4, 1/8 or 1/16.
 → Sound will be muted.
- To return to normal speed, press PLAY/ PAUSE >II.

Forward / Reverse Searching

You can fast forward or fast reverse a disc during playback and select a desired search speed.

For DVD,VCD,SVCD,CD,MP3, WMA

- Press < b directly or press < b for 2 seconds during playback to select the required speed: 2X, 4X, 8X, 16X or 32X (backward or forward).</p>
 - → Sound will be muted (DVD/VCD/ SVCD) or intermittent (MP3/WMA/ CD).
- To return to normal speed, press PLAY/ PAUSE >II.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

Selecting various repeat functions

Repeat play mode

The repeat play options vary depending on the disc type.

While playing a disc, press **REPEAT** continuously to choose a repeat options.

For DVD

- Chapter (currently playing chapter)
- Title (currently playing title)
- All (entire disc)
- Off (cancel)

For Video CD

- Track (currently playing track)
- All (entire disc)
- Off (cancel)

For MP3/WMA/Audio CD

- Repeat One (currently playing file)
- Repeat Folder (current folder)
- Folder (playing all files in one folder once)
- Single (currently playing file once).

For JPEG

- In STOP mode,
- Repeat One (currently playing file)
- Repeat Folder (current folder)
- Folder (playing all files in one folder once)
- Single (currently playing file once).
- In PLAY mode,
- Repeat One (currently playing file)
 Repeat All (all files in the selected
- folder)
- Repeat Off (playing all files in one folder once)
- Single (currently playing file once).

2 To cancel repeat playback, press **STOP**

Tip:

.

 For VCD, repeat playback is not possible if the PBC mode is switched on.

Repeating a section within a chapter/track

You can repeat the playback of a specific segment within a title/chapter track. To do this, you must mark the start and end of the segment you want.

- While playing a disc, press REPEAT A-B at your chosen starting point.
- 2 Press **REPEAT A-B** again at your chosen end point.
 - The section A and B can be set only within the same chapter/track.
 - The section will now repeat continuously.
- To exit the sequence, press REPEAT A-B.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

23

01-43_dvp3120_75_eng.indd 23

Viewing the disc playback information

Using the OSD menu

This function displays disc information on the TV screen during playback.

- During playback, press **DISPLAY** repeatedly on the remote control.
 - The available disc information appears on the TV screen.
- 2 Press \blacktriangleleft \blacktriangleright to select an option.
- Enter a valid number in the edit box using the alphanumeric keypad 0-9.
 - The playback will change to the selected angle/title/chapter/track or choosen time.

For DVD

- {_/X Angle}: selecting the playing angle for a multi-angle disc.
- {Title XX/XX Chapter--/XX}: enable to select the available title and chapter for viewing.
- {Title XX/XX Time--:--:--}: enable to select the available title and title playing time for viewing.
- {Chapter XX/XX Time--:---}: enable to select the available chapter and chapter playing time for viewing.

For VCD

- {Disc Go To: --:--}: enable to select any part within the disc
- {Track Go To: --:--}: enable to select any part within the current track
- {Select Track: --:--}: enable to select any track within the disc

Tip:

- Wait for 5 seconds for the display information to disppear.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

01-43_dvp3120_75_eng.indd 24

Special DVD Features

Playing a Title

- Press DISC MENU.
 The disc title menu appears on the TV screen.
- 2 Use ▲ ▼ ◀ ► keys or alphanumeric keypad 0-9 to select a play option.
- 3 Press **OK** key to confirm.

Changing the Audio Language

For DVD

 Press AUDIO repeatedly to select different audio languages.

Changing the Audio Channel For VCD

 Press AUDIO to select the available audio channels provided by the disc (MONO LEFT, MONO RIGHT, MIX-MONO, STEREO).

Subtitles

 Press SUBTITLE repeatedly to select different subtitle languages.

Special VCD and SVCD Feature

Playback Control (PBC)

For VCD with Playback Control (PBC) feature (version 2.0 only)

- Press DISC MENU to toggle between 'PBC ON' and 'PBC OFF'.
 If you select 'PBC ON', the disc menu
 - (if available) will appear on the TV.
 - → Use the PREV I / NEXT I to go to previous/next page or use the alphanumeric keypad 0-9 to select a play option.
- During playback, pressing RETURN/ TITLE will return to the menu screen (if PBC is on).

If you want to skip the index menu and playback directly from the beginning,

 Press DISC MENU key on the remote control to turn to PBC off.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

25

01-43_dvp3120_75_eng.indd 25

Playing MP3/WMA/JPEG/ Kodak Picture CD

This DVD player can playback MP3, WMA, JPEG and picture CD files on a personally recorded CD-R/RW disc and commercial CD.

IMPORTANT!

You have to turn on your TV and set to the correct Video In channel. (See page 16 'Finding your viewing channel').

General Operation

- Load a disc.
 - The disc reading time may exceed 30 seconds due to the complexity of the directory/file configuration.
 - The data disc menu appears on the TV screen.

00:00 04:52 128Kbps 🕞 001/020
Coco Lee
-
MP3 Coco - Before
MP3 Coco - I love
MP3 Coco - Jazz
MP3 Coco - Hot spring
MP3 Coco - I believe

- Press PREV I / NEXT ► to go to previous / next page of the menu.
- OF Press ▲ ▼ to select the folder and press OK to open the folder.
- 4 Press \blacktriangle \blacktriangledown to select a track/file.
- **6** Press **OK** to confirm.

Playback selection

During playback, you can;

- Press PREV I / NEXT ► to select the previous/next track/file in the current folder.
- Press PLAY/PAUSE >II repeatedly to pause/resume playback.

TIPS: The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

01-43_dvp3120_75_eng.indd 26

This DVD Player setup is carried out via the TV, enabling you to customize the DVD player to suit your particular requirement.

Using the General setup menu

Press SETUP on the remote control.
 The system setup menu appears.

General	Audio	Video	Preference
General	Setup Page		
OSD Langua Sleep		ENGLISH	

- Press ▲ ▼ to select an item, then press
 ▶ to access.
 - Example: { OSD Language }
 - The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
- 3 Use ▲ ▼ to select a setting and press OK to confirm.
 - Example: { English }
 - The setting is selected and setup is complete.
- **4** To exit, press **SETUP**.

DVD Menu Options

OSD Language

This menu contains various language options for the language displayed on the screen. For details, see page 19.

Sleep

Sleep function allows you to turn off the DVD player automatically after a preset time.

In 'General Setup Page', press ▲ ▼ to select { Sleep }, then press ▶.

{ **I5 Mins** } Turn off the DVD player after I5 minutes.

{ **30 Mins** } Turn off the DVD player after 30 minutes.

{ **45 Mins** } Turn off the DVD player after 45 minutes.

{ 60 Mins }

Turn off the DVD player after 60 minutes.

{ <u>Off</u> }

Turn off the sleep function.

2 Use ▲ ▼ to select a setting and press OK to confirm.

 TIPS:
 The underlined option is the factory default setting.

 Press ◀ to go back to previous menu item. Press SETUP to exit the menu item.

27

Using the Audio setup menu

Press SETUP on the remote control.
 The system setup menu appears.

General	Audio	Video	Preference
Audio	Setup Page	••	
Downmix Digital Aud	io		

- Press b to select { Audio Setup Page }.
- 3 Press ▲ ▼ to select an item, then press
 ▶ to access.
 - Example: { **Downmix** }
 - → The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
- Use ▲ ▼ to select a setting and press OK to confirm.

Example: { **Stereo** }

- The setting is selected and setup is complete.
- 5 To exit, press SETUP.

Downmix

This option allows you to set the stereo analog output of your DVD player.

In 'Audio Setup Page', press ▲ ▼ to select { Downmix }, then press ▶.

{ <u>Stereo</u> }

Select this option when output delivers sound from only the two front speakers.

{ LT/RT }

Select this option if your DVD player is connected to a Dolby Pro Logic decoder.

2 Use ▲ ▼ to select a setting and press
 OK to confirm.

TIPS: The <u>underlined option</u> is the factory default setting.

Press < to go back to previous menu item. Press SETUP to exit the menu item.

01-43_dvp3120_75_eng.indd 28

Digital Audio

The options included in Digital Audio are: {Digital Output} and {LPCM Output}.

- In 'Audio Setup Page', press ▲ ▼ to select { Digital Audio Setup }, then press ►.
- Press ▲ ▼ to select an item, then press
 ▶ to access.
- Use ▲ ▼ to select a setting and press
 OK to confirm.

Digital Output

Set the Digital Output according to your optional audio equipment connection.

{ <u>All</u> }

Select this if the connected device has a built-in multichannel decoder that supports one of the multichannel audio format (Dolby Digital, MPEG-2).

{ PCM Only }

Select this if the connected device is not capable of decoding multichannel audio. The DVD player will convert the Dolby Digital and MPEG-2 multichannel signals to PCM (Pulse Code Modulation).

{ SPDIF Off }

To deactivate the digital audio output. For example, if you use the AUDIO OUT sockets to connect to a TV or stereo system.

LPCM Output

If you connect the DVD player to a PCM compatible receiver via the digital terminals, such as coaxial or optical etc, you may need to adjust 'LPCM Output'.

{ <u>48K</u> }

Playback a disc recorded at the sampling rate of 48kHz.

{ 96K }

Playback a disc recorded at the sampling rate of 96kHz. This rate can only be achieved in Stereo-Classic (Flat) mode.

Tip:

 Discs are recorded at a certain sampling rate. The higher the sampling rate, the better sound quality. LPCM Output can be selected only when PCM Only is activated.

TIPS: The <u>underlined option</u> is the factory default setting. Press ◀ to go back to previous menu item. Press **SETUP** to exit the menu item.

29

01-43_dvp3120_75_eng.indd 29

Using the Video setup menu

Press SETUP on the remote control.
 The system setup menu appears.

General	Audio	Video	Preference
Video	Setup Page		
TY Type TV Display Progressiv Sharpness Brightness Contrast Color	e		

- Press b to select { Video Setup Page }.
- Press ▲ ▼ to select an item, then press
 ▶ to access.
 - Example: { **TV Type** }
 - → The options for the selected item appears.
 - If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
- Use ▲ ▼ to select a setting and press OK to confirm.

Example: { PAL }

- The setting is selected and setup is complete.
- To exit, press SETUP.

TV Type

This menu contains the options for selecting the color system that matches the connected TV. For details, see page 18.

Setting the TV Display

The picture shape can be adjusted to fit your TV and the format must be available on the playback disc. Otherwise, the TV display will not affect the picture during playback.

In 'Video Setup Page', press ▲ ▼ to select { TV Display }, then press ▶.

{ <u>4:3 Pan Scan</u> }

Select this if you have a normal TV and want both sides of the picture to be



trimmed or formatted on the TV screen.

{ **4:3 Letter Box** }

Select this if you have a normal TV. A 'widescreen' display with black bars on the top and bottom will be displayed on the TV cor



displayed on the TV screen.

{ **16:9** } Select this for wide-screen TV (frame ratio 16:9).



2 Use ▲ ▼ to select a setting and press OK to confirm.

TIPS: The <u>underlined option</u> is the factory default setting.

Press **4** to go back to previous menu item. Press **SETUP** to exit the menu item.

01-43_dvp3120_75_eng.indd 30

Progressive

In the progressive scan mode, you can enjoy the high quality picture with less flickers. It only works when you have connected the DVD player's YPbPr jacks to your TV that supports the progressive video input. Otherwise, a distorted picture will appear on the TV. For proper progressive scan set up, see page 17.

 In 'Video Setup Page', press ▲ ▼ to select { Progressive }, then press ▶.

{ <u>Off</u> } To disable Progressive Scan function.

{ **O**n }

To enable Progressive Scan function.

- 2 Use ▲ ▼ to select a setting and press OK to confirm.
 - → Follow the instructions shown on the TV screen to confirm the selection (if any).
 - If a distorted picture appears on the TV screen, wait for 15 seconds for auto recovery.

Sharpness

You can personalize your picture colour by adjusting sharpness.

 In 'Video Setup Page', press ▲ ▼ to select { Sharpness }, then press ▶.

{ High }

Choose high to make the picture's edge sharper.

{ Medium }

Choose medium to get a standard picture.

{ <u>Low</u> }

Choose low to make the picture's edge softer.

② Use ▲ ▼ to select a setting and press OK to confirm.

 TIPS:
 The underlined option is the factory default setting.

 Press
 ◄ to go back to previous menu item. Press SETUP to exit the menu item.

31

01-43_dvp3120_75_eng.indd 31

Brightness/Contrast/Color

Increasing the value will brighten the picture or vice versa. Choose zero (0) for average setting.

In 'Video Setup Page', press ▲ ▼ to select { Brightness }, { Contrast }, { Color }, then press ▶.

The menu will appear on the TV screen.

Brightness	
Contrast	0
Color	

Press ▲ ▼ ◀ ► to adjust the setting that best suits your personal preference.

3 Press OK to confirm.

Using the Preference setup menu

Press STOP It wice to stop playback, (if any), then press SETUP on the remote control.

→ The system setup menu appears.

General	Audio	Video	Preference
Prefere	nce Page		
Audio Subtitle Disc Menu Parental Password Default			

- Press > to select { Preference Page }.
- ③ Press ▲ ▼ to select an item, then press
 ▶ to access.

Example: { **Parental** }

- The options for the selected item appears.
- → If the selection in the menu is greyed out, that means the feature is not available or not possible to change at the current state.
- Use ▲ ▼ to select a setting and press OK to confirm.
 - Example: { 8 Adult }
 - The setting is selected and setup is complete.
- **5** To exit, press **SETUP**.

TIPS: The <u>underlined option</u> is the factory default setting.

Press < to go back to previous menu item. Press SETUP to exit the menu item.

01-43_dvp3120_75_eng.indd 32

Subtitle/Audio/Disc Menu

These menus contains various language options for audio, subtitle and disc menu which may be recorded on the DVD. For details, see page 19.

Parental

Depending on the DVD, you may be asked to change the parental level while playing the disc. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children, or have certain discs played with alternative scenes.

In 'Preference Page', press ▲ ▼ to select { Parental }, then press ▶.

General	Audio	Video	Preference
Prefere	nce Page -	-	
Audio		1 KID SAFE	
Subtitle		2 G	
Disc Menu		3 PG	
		4 PG 13	
Password		5 PGR	
Default		6 R	
		7 NC17	
		8 ADULT	

- 2 Use ▲ ▼ to select a rating level and press OK to confirm.
 - → Select { 8 Adult } to disable parental level and allow all discs to play.
- 3 Use the alphanumeric keypad 0-9 to enter the six-digit password (see page 34 'Changing the Password'), then press OK to confirm.
- DVDs that are rated higher than the level you selected will not play unless you enter your six-digit password.

Rating Explanations

{ I.Kid Safe }

Childsafe; acceptable for viewers of all ages.

{ **2. G** }

General Audience; recommended as acceptable for viewers of all ages.

{ 3. PG }

Parental Guidance suggested.

{ **4. PG – 13** } Unsuitable for children under age 13.

{ 5. PG – R }

Parental Guidance; recommended that parents restrict children under 17 from viewing.

$\{ 6. R \}$

Restricted; recommended only when supervised by a parent or adult guardian.

{ 7. NC - 17 }

No Children under age 17; not recommended viewing for children under age 17.

{ <u>8. Adult</u> }

Mature Material; should be viewed only by adults due to graphic sexual material, violence or language.

Tips:

This feature will not limit viewing if the disc manufacturer did not code the disc.
 VCD, SVCD, CD have no level indication, so parental control has no effect on these type of discs. This also applies to most illegal DVDs.

 Some DVDs are not coded with a rating though the movie rating may be printed on the disc cover. The rating level feature does not prohibit play of such discs.

TIPS: The <u>underlined option</u> is the factory default setting. Press ◀ to go back to previous menu item. Press **SETUP** to exit the menu item.

33

Changing the Password

You need to enter your six-digit password to play a prohibited disc or if prompted for a password. The same default password is used for Parental.

- In 'Preference Page', press ▲ ▼ to select { Password }, then press ▶ to select { Change }.
- Press OK and the menu appears on the TV screen.

erence	Prefe	Video	udio	Audi	eneral	G
						P
	_	_	, i	sword	Old Pas	I
			1	New Password		I
				PWD	Confirm	H
ОК						
ОК						

- Use the alphanumeric keypad 0-9 to enter the six-digit password.
 - → When doing this for the first time, enter the default password '136900'.
- If you forget your old six-digit password, enter the default password '136900'.
- ④ Enter the new six-digit password.
- 5 Enter the new six-digit password a second time to confirm.
 - The new six-digit password will now take effect.
- 6 Press OK to confirm.

Restoring to the original settings

Setting the { Default } function will reset all options and your personal settings to the factory defaults, except your Parental.

- In 'Preference Page', press ▲ ▼ to select
 { Default }, then press ▶ to select
 { Reset }.
- 2 Press OK to confirm.
 - → All settings will now reset to factory defaults.

TIPS: The <u>underlined option</u> is the factory default setting.

Press < to go back to previous menu item. Press SETUP to exit the menu item.

Others

Software upgrade

Periodically Philips will issue software upgrade to enhance your user experience.


IMPORTANT! - Power supply must not be interrupted during upgrade!

To check the current software version of this DVD player;

- Press OPEN/CLOSE on the DVD player to open the disc tray.
 The disc tray will open.
- Press numeric keypad '55' on the remote control.
 - The file name of the software installed in the DVD player appears on the TV screen.

To download and install the latest software to the DVD player;

- Visit the Philips website 'www.philips. com/support' to check the availability of the latest software upgrade.
- 2 Download the software to a CD-R.
- Insert the CD-R to the disc slot.
 → The menu appears on the TV screen.



- Press PLAY/PAUSE ►II to download the latest software in the DVD player.
 - The DVD player will re-start automatically once the download complete.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
No power.	 Press STANDBY-ON button on the front of the DVD player to turn on the system. Make sure the AC outlet has power.
Remote control does not work.	 Aim the remote control directly at the sensor on the front of the DVD player (not towards TV). Remove any obstacles between DVD player and the remote control. Batteries are weak, replace the batteries. Check the polarities of the batteries are as indicated on the remote control (± signs).
No picture.	 Turn on your TV and set to the correct Video In channel for the DVD player. You may go to Channel I on your TV, then press the channel down button on your TV's remote control until you see the TV program. Check the video connection between the DVD player and the TV.
The picture is distorted or black & white during playback.	 The disc does not match with the TV color system standard (PAL/NTSC). The disc is dirty, clean the disc. Sometimes a small amount of picture distortion may appear. This is not a malfunction. To deactivate progressive scan function manually; Turn off your TV progressive scan mode (or set to interlace mode) Press OPEN/CLOSE to open the DVD player disc tray. Press the alphanumeric keypad 'l' for few seconds.
No sound.	 Check the audio connections, the red and white jacks are connected correctly. Set the Digital output correctly, based on the equipment you connected to the DVD player.
Disc does not play.	 Insert the disc with the label facing up. Wrong region code. Wrong disc type. Read chapter "Playback - Playable discs" for details. Make sure the disc is not scratched or warped. Clean the disc or replace a new one. Check if the disc is defective by trying another disc.
Need Help? V	isit us at www.philips.com/support

36

01-43_dvp3120_75_eng.indd 36

Troubleshooting (continued)

Problem	Solution
The aspect ratio of the screen cannot be changed.	 The aspect ration is fixed on the DVD disc. Depending on the TV, it may not be possible to change the aspect ratio.
Not able to select some items in the setup/system menu.	 Press STOP button twice before selecting the setup/ system menu. Depending on the disc availability, some menu items cannot be selected.
The DVD player does not start playback.	 Insert a readable disc with the playback side facing down. Check the disc type, colour system (PAL/NTSC) and region code. Check for any scratches or smudges on the disc. Press SETUP to turn off the setup menu screen. You may need to enter the password in order to change the parental rating level or to unlock the disc for playback. Moisture may have condensed inside the system. Remove the disc and leave the system turned on for about an hour. Disconnect the power cord from the power outlet for a few minutes. Reconnect the power cord and try to operate again as usual.
Picture freezes momentarily during playback.	 Check the disc for fingerprint/scratches and clean with a soft cloth wiping from center to edge.
Unable to select Progressive Scan on/off.	 Check that the output of the video signal is turn to { YPbPr }.
Need Help? V	isit us at www.philips.com/support

37

01-43_dvp3120_75_eng.indd 37

Specifications

		z)(NTSC/60Hz)
Number of lines	625	525
Playback	Multistandar	d(PAL/NTSC)
VIDEO PERF	ORMANCE	
Video DAC	12 bit, 108 N	MHz
YPbPr	0.7 Vpp ~ 7	5 ohm
Video Output	IVpp ~ 75 c	ohm
	АТ	
Digital	MPEG 2 for	DVD,SVCD
Compression	MPEG I for	VCD
DVD	50Hz	60Hz
Horiz. resolutio	n 720 pixels	720 pixels
Vertical resoluti	on 576 lines	480 lines
VCD	50Hz	60Hz
Horiz. resolutio	n 352 pixels	352 pixels
Vertical resoluti	on 288 lines	240 lines
	1AT	
Digital M	IPEG/ AC-3/	compressed
P	СМ	Digital
		16, 20, 24 bits
		fs, 44.1, 48, 96 kHz
M	IP3(ISO 9660)	96, 112, 128,
	. /	256, 320kbps &
		variable bit rate
		6 30 444 40444

AUDIO PERFORMANCE

DA Converter	24 bit, 192 k	Hz
DVD	fs 96 kHz	4Hz- 44kHz
	fs 48 kHz	4Hz- 22kHz
SVCD	fs 48 kHz	4Hz- 22kHz
	fs 44.1kHz	4Hz- 20kHz
CD/VCD	fs 44.1kHz	4Hz- 20kHz
Signal-Noise (1kH	> 90 dB	
Dynamic range(1kHz)		> 80 dB
Crosstalk (1kHz)		> 80 dB
Distortion/noise (1kHz)		> 80 dB
MPEG MP3		MPEG Audio L3

CONNECTIONS

YPbPr Output	Cinch 3x
Video Output	Cinch (yellow)
Audio Output(L+F	R)Cinch (white/red)
Digital Output	I coaxial
	IEC60958 for CDDA / LPCM
	IEC61937 for MPEG 1/2,
	Dolby Digital

CABINET

Dimensions ($w x h x d$)	360 x 37 x 209 mm
Weight	Approximately 2 kg

POWER CONSUMPTION

Power Supply Rating	110V – 240V;
	50/60Hz
Power consumption	< 10 W
Power consumption in	< W
Standby mode	

Analog Sound Stereo Dolby Surround compatible downmix from Dolby Digital multi-channel sound

fs, 32, 44.1, 48 kHz

Glossary

Analog: Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

<u>Aspect ratio</u>: The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs. is 4:3, and that of wide-screens is 16:9.

AUDIO OUT Jacks: Jacks on the back of the DVD System that send audio to another system (TV, Stereo, etc.).

Bit Rate: The amount of data used to hold a given length of music; measured in kilobits per seconds, or kbps. Or, the speed at which you record. Generally, the higher the bit rate, or the higher the recording speed, the better the sound quality. However, higher bit rates use more space on a Disc.

Chapter: Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

<u>Component Video Out Jacks</u>: Jacks on the back of the DVD System that send high-quality video to a TV that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

Disc menu: A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

Digital: Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

DivX[®] **3.11/4.x/5.x/6.0**: The DivX[®] codec is a patent-pending, MPEG-4 based video compression technology, developed by DivX[®] Networks, Inc., that can shrink digital video to sizes small enough to be transported over the internet, while maintaining high visual quality.

Dolby Digital: A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

DTS: Digital Theatre Systems. This is a surround sound system, but it is different from Dolby Digital. The formats were developed by different companies.

JPEG: A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. **MP3**: A file format with a sound data compression system. 'MP3' is the abbreviation of Motion Picture Experts Group I (or MPEG-I) Audio Layer 3. By using MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

<u>Multichannel</u>: DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

Parental Control: A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

PCM (Pulse Code Modulation): A system for converting analog sound signal to digital signal for later processing, with no data compression used in conversion.

Playback control (PBC): Refers to the signal recorded on video CDs or SVCDs for controlling reproduction. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

Progressive Scan: It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert the interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution.

Region code: A system for allowing discs to be played back only in the region designated beforehand. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

<u>Title</u>: The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

TV OUT jack: Jack on the back of the DVD System that sends video to a TV.

WMA: Windows Media Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded by using Windows Media Player version 9 or Windows Media Player for Windows XP. Files are recognized by their file extension "WMA."

01-43_dvp3120_75_eng.indd 39

New Zealand - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

- The product must have been purchased in New Zealand.As proof of purchase, retain the original sales docket indicating the date of purchase.
- **2.** The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller Philips New Zealand Ltd. P.O. Box 41.021 Auckland (09) 84 94 160 fax (09) 84 97 858

AUSTRALIA - Philips Manufacturers Warranty for Australia only



sense and simplicity

These Warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, DVD Players, DVD Recorders, DVD Recorders with HDD, Personal Video Recorders, Audio Systems, Home Theatre systems, Digital Set Top Box, Digital Photo Display, MP3 players & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 Year Free Repair Service – at Philips ASC Colour Television, Plasma Television, LCD Television, Projection Television DVDR/VCR Combo, DVD Recorder with Hard Drive, Personal Video Recorder, LCD Projector, Wireless Audio System, Audio System, Audio System, Abria Theatre System & Digital Photo Display (Photo Frame) & Digital Set-Top-Box.

<u>**1 Year Free Replacement**</u> – at your Retailer Portable Audio, MP3 players, DVD Players, DVD/VCR Combo Players, DVD Recorders without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

- All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided. 1.
- 2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instruction
- If a replacement product is supplied under the repair policy, it is warranted for the 3. remainder of the warranty period of the original purchased product only.
- Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen sizes less than 67 cms and all other product types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense
- 5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics Products if used in commercial applications
- 6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
- Product accessories are covered by the same warranty period. Please contact the Philips Technology Care Centre for free replacement of faulty accessories. 7.
- This Manufacturers Warranty is neither transferable nor valid in countries other 8. than Australia

This warranty does not cover:

- Mileage or travel outside the a) normal service area covered by selected Authorised Service Centre.
- Service costs arising from failure to correctly adjust the controls of b) the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- Product failures caused by c) misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- Replacement of worn or used f) batteries or other consumables.
 - Consumer products used in commercial applications (This warranty is limited to 3 months only)

Second hand products.

g)

h)

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Version 9: 1 February 2007

Warranty valid for all new products purchased after 1st January 2007

1

Philips Consumer Electronics a division of Philips Electronics Australia Limited ABN 24 008 445 743, Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

Authorised Service Centre Network 1300 361 392

Customer support is provided in Australia by our trained call centre staff For assistance with product features and specifications, please call

Technology Care Centre 1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim

Model number	:
Serial number	:
Date of purchase	:
Retailer	:

Version 9: 1 February 2007

Warranty valid for all new products purchased after $1^{st} \ January \ 2007$

2

Meet Philips at the Internet http://www.philips.com/support





DVP 3120





SgpSL-0706/75-1

01-43_dvp3120_75_eng.indd 43