




Philips  
wireless portable speaker

**14W, 10hr**

Long Bluetooth range  
Waterproof, dustproof  
Quick charge option

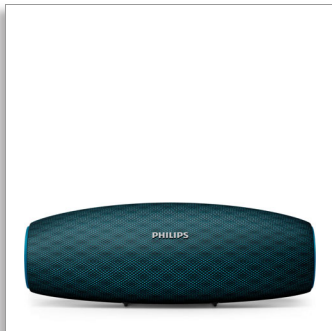

**BT7900A**

## Music never stops

My music never stops. Everplay wireless portable speaker keeps playing all the time without interruption thanks to the strong Bluetooth connection and intuitive charging options. Its custom fabric makes it beautiful as well as super durable

### Great and powerful sound

- Twin front-firing neodymium speakers for powerful sound
- Digital Sound Processing for lifelike, distortion-free music

### Intuitive charging

- Quick-charge recharges speaker 3 times faster
- Battery indicator to easily view power level
- USB cable doubles as a strap

### Strong Bluetooth connection

- Wireless music streaming via Bluetooth
- Strong Bluetooth connection up to 30m or 100ft
- 100-hr Bluetooth power standby time
- Built-in microphone for hands-free phone calls

### Super durability

- Durable build – shockproof, dustproof and waterproof (IP57)
- High performance DuraFit fabric

# PHILIPS

wireless portable speaker  
14W, 10hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

BT7900A/00

# Highlights

## Twin front-firing speakers


EverPlay speaker makes no compromises when it comes to quality sound. With two front-firing neodymium drivers, it delivers clear, natural, powerful sound with deep and rich bass. Perfect for any style of music, whether you're playing it loud for a party or enjoying a quiet, mellow moment.

## Digital Sound Processing



Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speakers, delivering sound that is clear, detailed and powerful without any distortion.


## Wireless music streaming

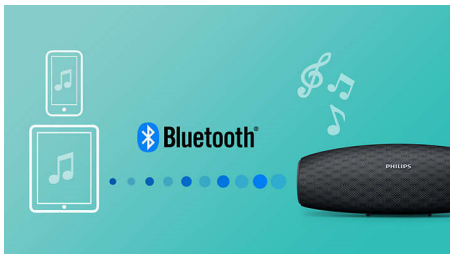

Bluetooth is a wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other


Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## 30m Bluetooth range

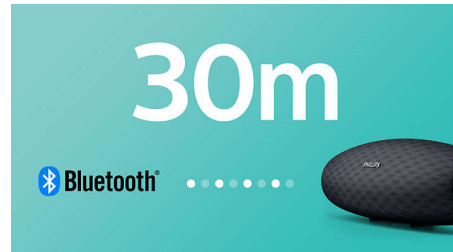

Move freely around with your smart phone, without worrying about dropping your music. EverPlay speaker offers an incredibly stable and long-range Bluetooth connection up to 30 metres or 100 feet, three times faster than industry standards. The speakers are equipped with a sensitivity antenna and radio frequency filter to minimize background interference.

## 100-hr standby time

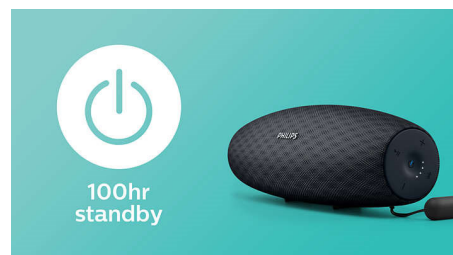

EverPlay's intelligent standby mode gives you an incredible 100 hours of standby time and the speaker can be woken from power-off mode simply by your smart device.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk


via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## Quick charging



Charging the speaker takes quite some time usually. EverPlay offers a quick charge option that can recharge the speaker three times faster than normal USB adapter. By using Qualcomm Quick-Charge adapter (not included), that is commonly used in new Android phones, to charge the speaker, the charging time is much faster.

## Battery indicator

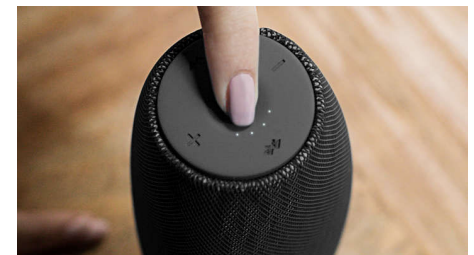

Finally, a Bluetooth speaker that provides a simple, clear way to see how much remaining power you have! With EverPlay, simply push the power button to see how much battery is left.

## USB strap

Recharging has never been so easy. When the power starts to run low, use the handy two-in-one strap-USB charging cable. Plug it in for power, or use it to attach the speaker to a bag for easy portability.

wireless portable speaker  
14W, 10hr Long Bluetooth range, Waterproof, dustproof, Quick charge option

BT7900A/00

# Specifications

## Sound

- Output power (RMS): 2 x 7W
- Sound System: Stereo

## Design and finishing

- Color: Blue

## Loudspeakers

- Speaker drivers: 2 x 1.5" full range driver and 2 x 2.25" passive radiator

## Connectivity

- Audio Connections: 3.5mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 30m or 100ft

## Convenience

- Water resistance: IPX7
- Built-in microphone: for speaker conference
- Dustproof

## Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini, iPad mini 4, iPad Pro
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus
- other Bluetooth-enabled device

## Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 10 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, Quick install guide

## Dimensions

- Weight incl. Packaging: 0.72 kg
- Product dimensions (WxDxH): 201 x 71 x 72 mm
- Packaging dimensions (WxDxH): 216 x 97 x 94 mm
- Product weight: 0.53 kg



Issue date 2024-03-24

Version: 8.2.6

EAN: 48 95185 62868 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)