

Philips
SoundBar DVD home
theatre

HTS8150



Seduction by sound

with Ambisound

Indulge in a 5.1 surround sound experience from an integrated one-piece system, in any sort of room. Specially designed to match the Philips Aurea TV, this Ambisound-powered SoundBar also delivers superb sound and picture quality.

Live

- SoundBar with integrated speakers, amplifiers and DVD player
- Matches the Aurea TV in an elegant and upmarket design
- Matches any flat TV with optimal fit for 42" TV or larger
- Touch screen controls for easy playback and volume control

Connect

- Dock your iPod for media playback with on-screen control
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- EasyLink controls all EasyLink products with a single remote

Hear and see

- Ambisound for 5.1 surround sound from fewer speakers
- Excellent sound quality with soft dome tweeters and DoubleBASS
- Faroudja DCDi for incredibly sharp high-quality video
- FullSound™ to bring a CD listening experience to MP3
- HDMI 1080p upscales to high definition for sharper pictures

PHILIPS
sense and simplicity


Highlights

SoundBar



The SoundBar is a complete all-in-one home theatre solution that delivers superb 5.1 surround sound for an immersive movie experience. With integrated speakers, amplifiers and DVD player, the SoundBar is all you need below your television. It lets you keep your living room the way you want it, yet delivers an amazing multi-channel sound experience - for movie moments shared with friends and family.

Dock your iPod

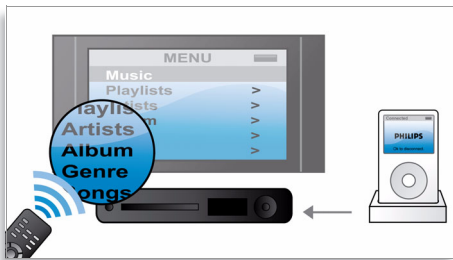


The docking station included with your home theatre system lets you play movies, music and photos from your iPod. What's more, you can control the iPod and browse through its contents on your TV screen - all with the home theatre system's remote. The dock brings portable entertainment into your home - with absolute convenience and ease of use.

Matches the Aurea TV



A touch of class, blending into your living room, designed to match the dazzling Aurea TV — this SoundBar is set to astound with its looks and performance. Indulge in an exceptional home entertainment experience with no compromise to your lifestyle.

Hi-Speed USB 2.0 Link

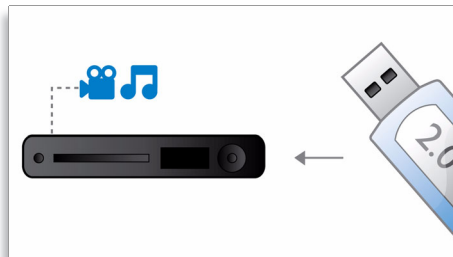

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.


EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-


standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Ambisound

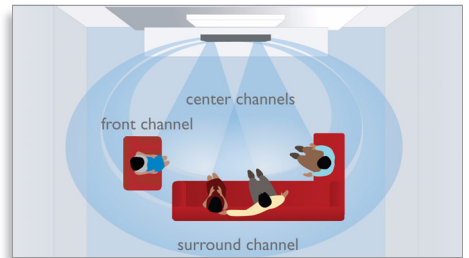

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Faroudja DCDi

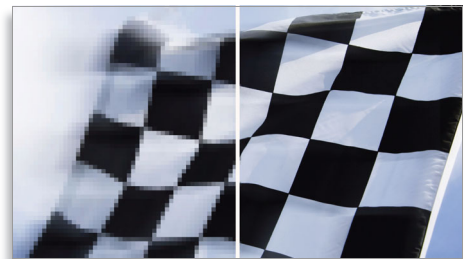

Enjoy incredibly sharp, high-quality video on your progressive scan TV with Faroudja DCDi. The feature alleviates jagged edges that appear when standard interlaced video is viewed, especially with moving images, thus delivering natural-looking action scenes. Bring your viewing experience to the next level with clearer, smoother pictures



Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Faroudja DCDi

Sound

- Sound System: Ambisound, Dolby Digital, DTS, Dolby Prologic II, Stereo
- Sound Enhancement: Smart Surround, DoubleBass, Treble and Bass Control, ClearVoice
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, News, Sports

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers: 2 x 1" Soft Dome tweeters, 6 x 2.5" Full Range woofers
- Speaker Impedance: 6 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 35-200 Hz

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV 9
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: PAL, NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture Enhancement: Slideshow with music

playback, Rotate, Zoom

Tuner/Reception/Transmission

- Tuner Bands: FM, AM

Connectivity

- Front/Side connections: Dock connector, MP3 Line-in, USB
- Rear Connections: HDMI output, Component Video output, Composite video (CVBS) output, TV in (audio, cinch), Easy-Fit speaker connectors, Interconnect (to Power Box)
- Subwoofer (Power Box): FM Antenna, AM/MW Antenna, Coaxial Digital input, AUX In (cinch, 2 pairs), Interconnect (to Main Unit), Optical digital input

Dimensions

- Set dimensions (W x H x D): 1047 x 174 x 154 mm
- Set weight: 8.9 kg
- Subwoofer dimensions (W x H x D): 322 x 425 x 322 mm
- Subwoofer Weight: 12.7 kg
- Packaging dimensions (W x H x D): 1120 x 388 x 598 mm
- Weight incl. Packaging: 32 kg

Accessories

- Included Accessories: Quick start guide, User Manual, Remote Control, Batteries for remote control, Dock for iPod, HDMI cable, CVBS video cable, MP3 Line-in cable, AM antenna, FM antenna, Interconnect cable, Power cord, Wall mounting bracket, World Wide Warranty leaflet

Power

- Power supply: 100-240 VAC, 50/60 Hz
- Standby power consumption: <0.3 W



Issue date 2009-08-06

Version: 2.0.4

12 NC: 8670 000 41515
EAN: 87 12581 43657 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Avoid extensive use of the set at a volume higher than 85 decibels because this may damage your hearing.